

Snow Blower

Model 1412

Model 1812

Model 2118

Model 2418



Bobcat®

Service Manual

S/N 715700101 & Above

S/N 711700101 & Above

S/N 711800101 & Above

S/N 711900101 & Above

S/N 712000101 & Above

S/N 712100101 & Above

 
S/N 712200101 & Above

S/N 712300101 & Above

S/N 712400101 & Above

S/N 712500101 & Above

S/N 712600101 & Above

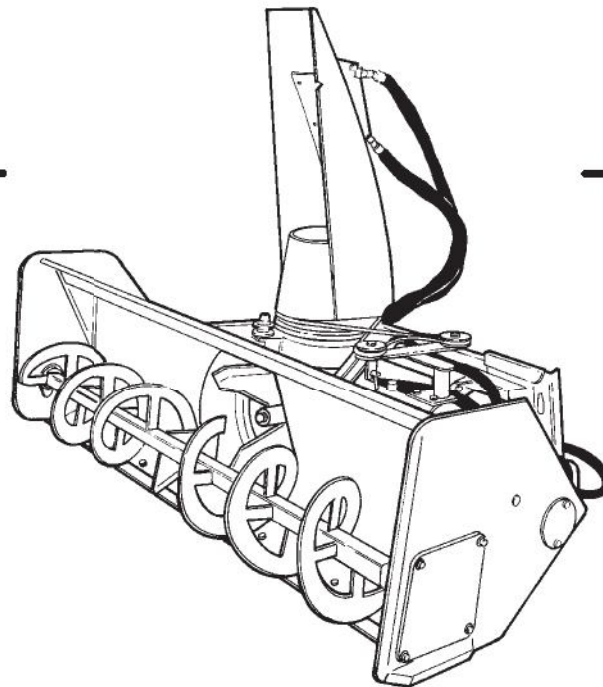

Dealer Copy - Not for Resale

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



MAINTENANCE SAFETY



 
WARNING







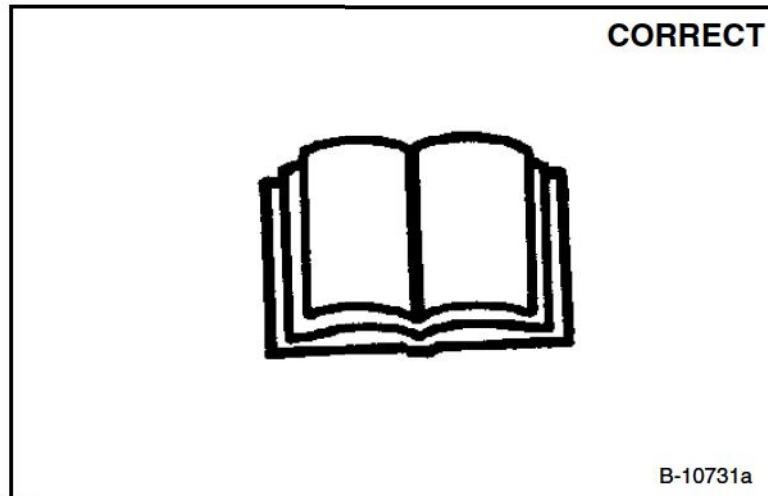

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment with the engine running unless instructed to do so in manual.
-  Always lower the attachment to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.

ALPHABETICAL INDEX

ATTACHMENT CONTROL DEVICE (MODEL 1812)	40-01	HYDRAULIC MOTOR (MODEL 2118/2418)	20-01
ATTACHMENT CONTROL DEVICE (MODEL 2118/2418)	40-01	HYDRAULIC MOTOR OPTIONS	50-01
AUGER (MODEL 1412)	30-01	HYDRAULIC RELIEF VALVE (MODEL 1412) ...	20-01
AUGER (MODEL 1812)	30-01	HYDRAULIC RELIEF VALVE (MODEL 1812) ...	20-01
AUGER (MODEL 2118/2418)	30-01	HYDRAULIC RELIEF VALVE (MODEL 2118/2418)	20-01
AUGER DRIVE CHAIN	10-01	HYDRAULIC SCHEMATIC (MODEL 1412/1812) WITH HYDRAULIC CYLINDERS	50-01
AUGER HYDRAULIC RELIEF VALVE	10-01	HYDRAULIC SCHEMATIC (MODEL 1812) WITH ELECTRICAL ACTUATORS	50-01
AUGER SHEAR BOLT	10-01	HYDRAULIC SCHEMATIC FOR STANDARD FLOW SNOW BLOWERS (MODEL 2118/2418)	50-01
CHUTE DEFLECTOR (MODEL 1412)	30-01	HYDRAULIC SCHEMATIC FOR HIGH FLOW SNOW BLOWERS (MODEL 2118/2418)	50-01
CHUTE DEFLECTOR (MODEL 1812)	30-01	INSPECTION	10-01
CHUTE DEFLECTOR (MODEL 2118/2418)	30-01	LUBRICATION	10-01
CHUTE DEFLECTOR ACTUATOR (MODEL 1812)	40-01	MOUNT PLATE (MODEL 1812)	30-01
CHUTE ROTATION ACTUATOR (MODEL 1812)	40-01	MOUNT PLATE (MODEL 2118/2418)	30-01
CUTTING EDGE	10-01	PARTS IDENTIFICATION	iv
DISCHARGE CHUTE (MODEL 1412)	30-01	RELAY BOX (MODEL 1812)	40-01
DISCHARGE CHUTE (MODEL 1812)	30-01	SERIAL NUMBER LOCATION	iii
DISCHARGE CHUTE (MODEL 2118/2418)	30-01	SKID SHOE (MODEL 1812)	30-01
DISCHARGE CHUTE ROTATION CABLE	10-01	SKID SHOE (MODEL 2118/2418)	30-01
DISCHARGE CHUTE ROTATION CHAIN	10-01	SKID SHOES	10-01
DRIVE CHAIN (MODEL 1412)	30-01	SPECIFICATIONS (MODEL 1412)	50-01
ELECTRICAL SCHEMATIC (MODEL 1412)	50-01	SPECIFICATIONS (MODEL 1812)	50-01
ELECTRICAL SCHEMATIC (MODEL 1812) WITH ELECTRICAL ACTUATORS	50-01	SPECIFICATIONS (MODEL 2118/2418)	50-01
ELECTRICAL SCHEMATIC WITH 7 PIN HARNESS (STANDARD FLOW HYDRAULICS) (MODEL 1812/2118/2418)	50-01	TROUBLESHOOTING	10-01
ELECTRICAL SCHEMATIC WITH 7 PIN HARNESS AND 14 PIN HARNESS KIT (STANDARD FLOW HYDRAULICS) (MODEL 1812/2118/2418)	50-01		
ELECTRICAL SCHEMATIC WITH 7 PIN HARNESS (HIGH FLOW HYDRAULICS) (MODEL 2118/2418)	50-01		
ELECTRICAL SCHEMATIC WITH 7 PIN HARNESS AND 14 PIN HARNESS KIT (HIGH FLOW HYDRUALICS) (MODEL 2118/2418)	50-01		
ELECTRICAL SCHEMATIC WITH 14 PIN HARNESS (MODEL 2118/2418) WITHOUT ATTACHMENT CONTROL DEVICE	50-01		
FAN (MODEL 1412)	30-01		
FAN (MODEL 1812)	30-01		
FAN (MODEL 2118/2418)	30-01		
GEARBOX (MODEL 1412)	30-01		
GEARBOX (MODEL 1812)	30-01		
GLOSSARY OF HYDRAULIC SYMBOLS	50-01		
HYDRAULIC CHECK VALVE (MODEL 1812) ...	20-01		
HYDRAULIC CONTROL VALVE (MODEL 1412/1812)	20-01		
HYDRAULIC CONTROL VALVE (MODEL 2118/2418)	20-01		
HYDRAULIC CYLINDER (MODEL 1412)	20-01		
HYDRAULIC CYLINDER (MODEL 1812)	20-01		
HYDRAULIC CYLINDER (MODEL 2118/2418) ..	20-01		
HYDRAULIC MOTOR (MODEL 103/130/146) ...	20-01		
HYDRAULIC MOTOR (MODEL 104/105)	20-01		
HYDRAULIC MOTOR (MODEL HB0556566D) ..	20-01		
HYDRAULIC MOTOR (MODEL 1412)	20-01		
HYDRAULIC MOTOR (MODEL 1812)	20-01		

CONTENTS

SERIAL NUMBER LOCATION	iii
PARTS IDENTIFICATION	iv
SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
ELECTRICAL SYSTEM	30-01
MAIN FRAME	40-01
SPECIFICATIONS AND SCHEMATICS	50-01

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**ELECTRICAL
SYSTEM**

**MAIN
FRAME**

**SPECIFICATIONS
AND
SCHEMATICS**

 
**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

Dealer Copy -- Not for Resale


SERIAL NUMBER LOCATION

Always use the serial number of the attachment when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation [A], [B] and [C].

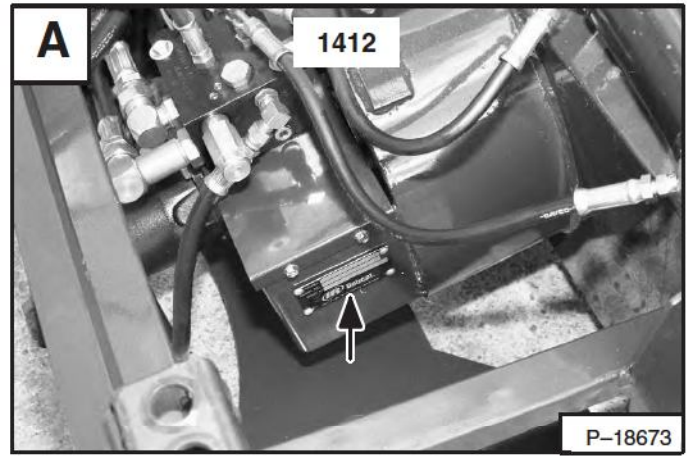

Not for Resale
Dealer Copy

 PARTS IDENTIFICATION (MODEL 1412)

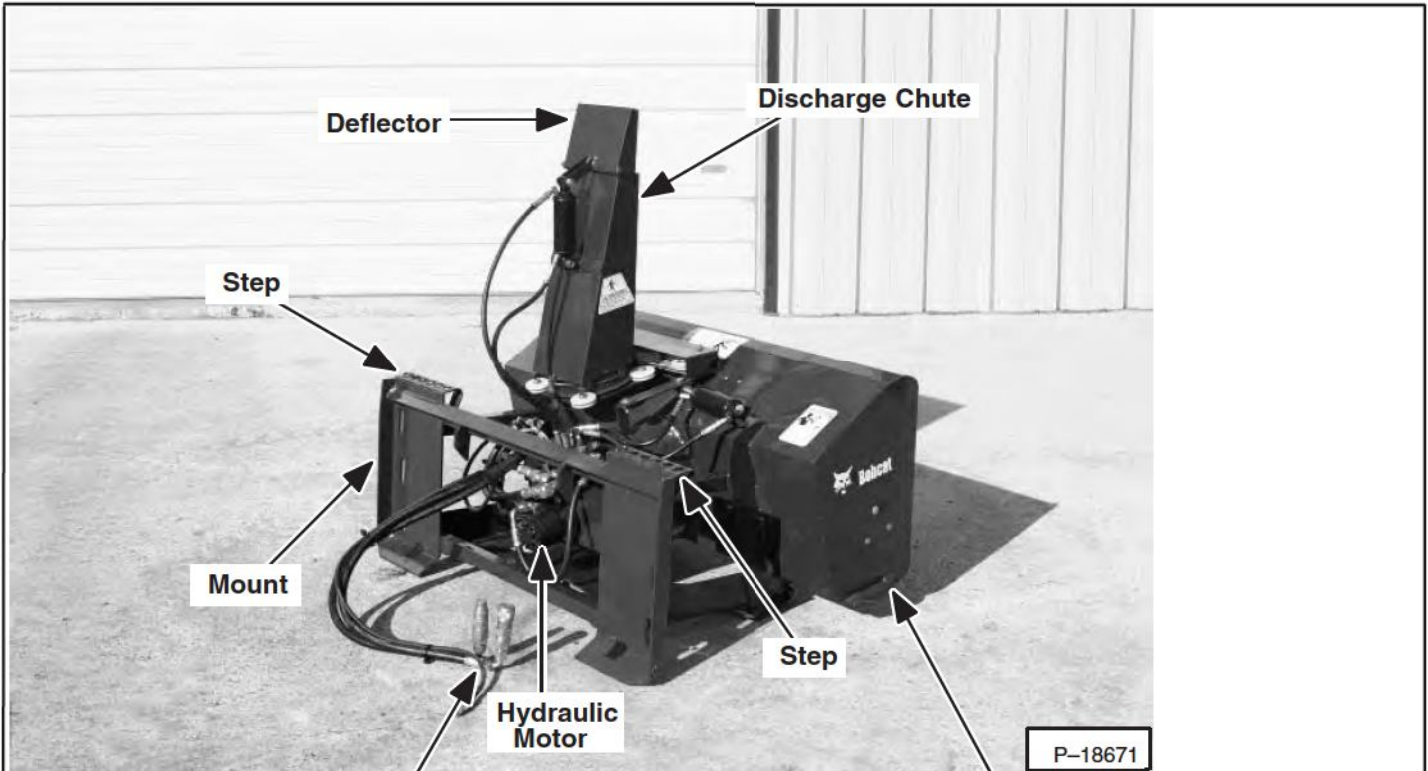

Deflector

Discharge Chute

Step

Mount

 
Hydraulic Motor

Step

Quick Couplers

Skid Shoe

P-18671

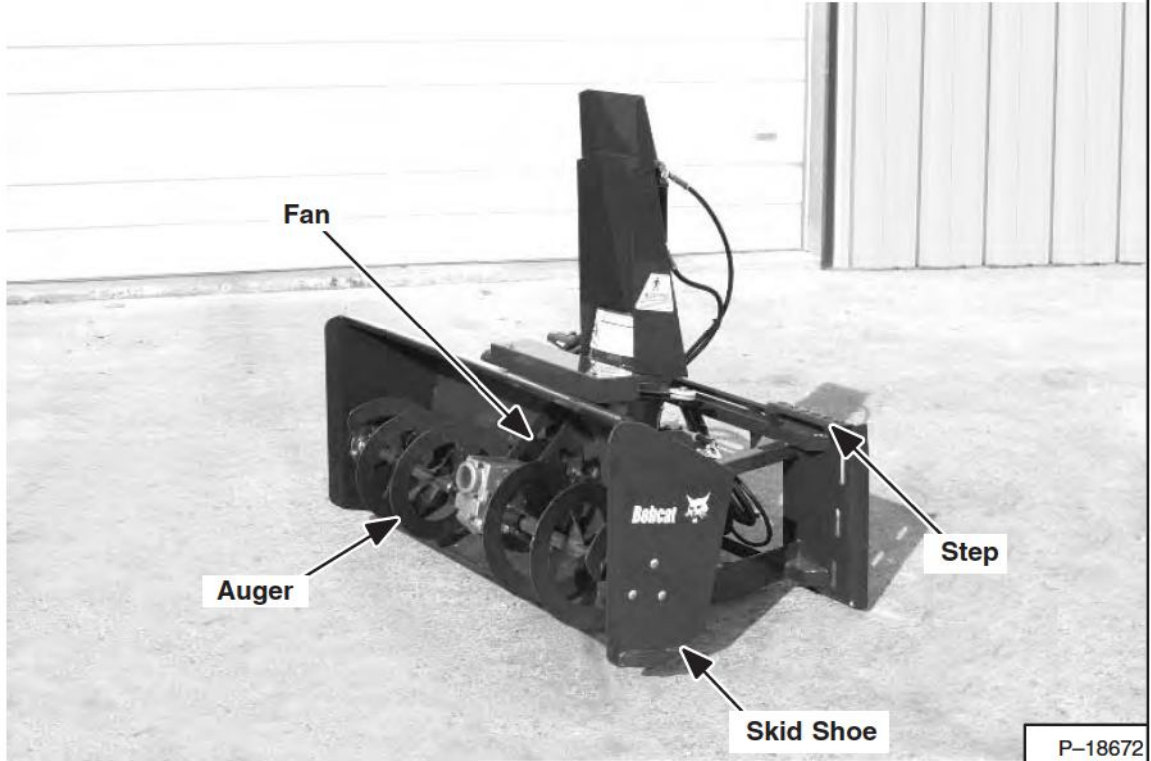

Fan

Auger

 
 
Step

Skid Shoe



P-18672

Dealer Copy -- Not for Resale

PARTS IDENTIFICATION (MODEL 1812)

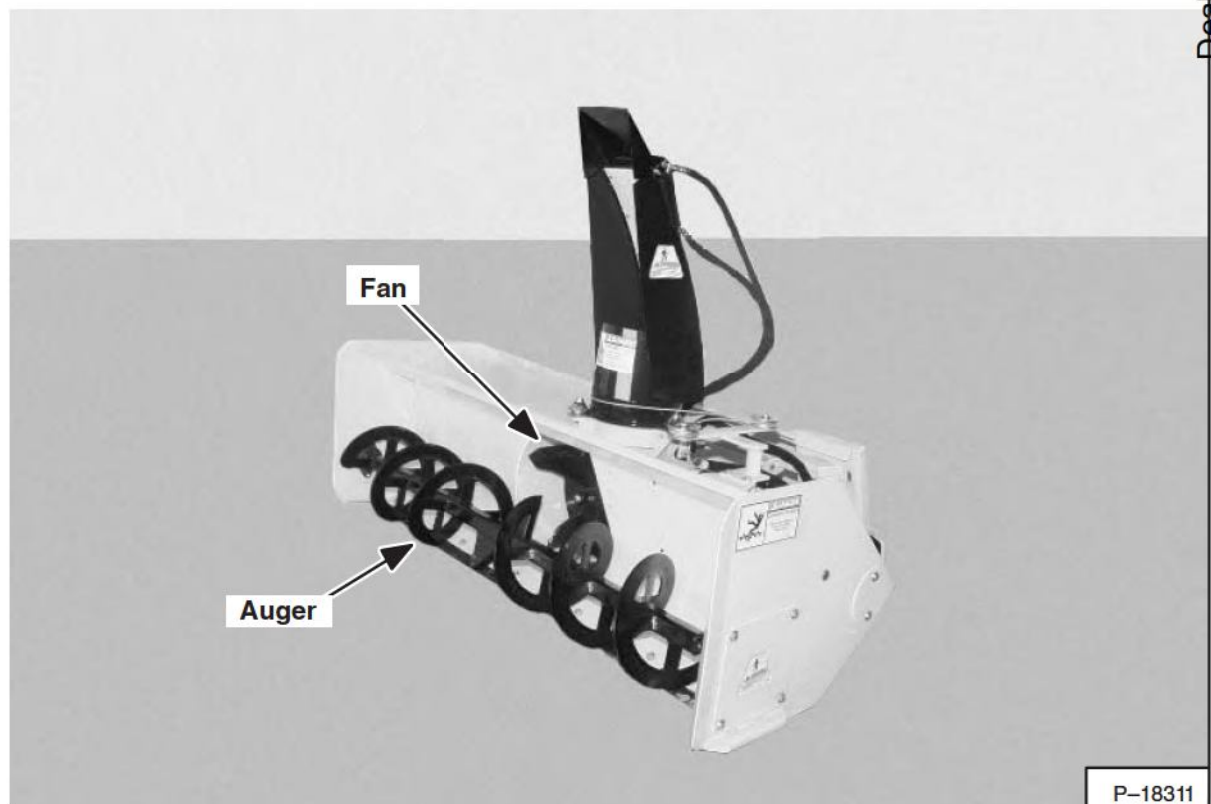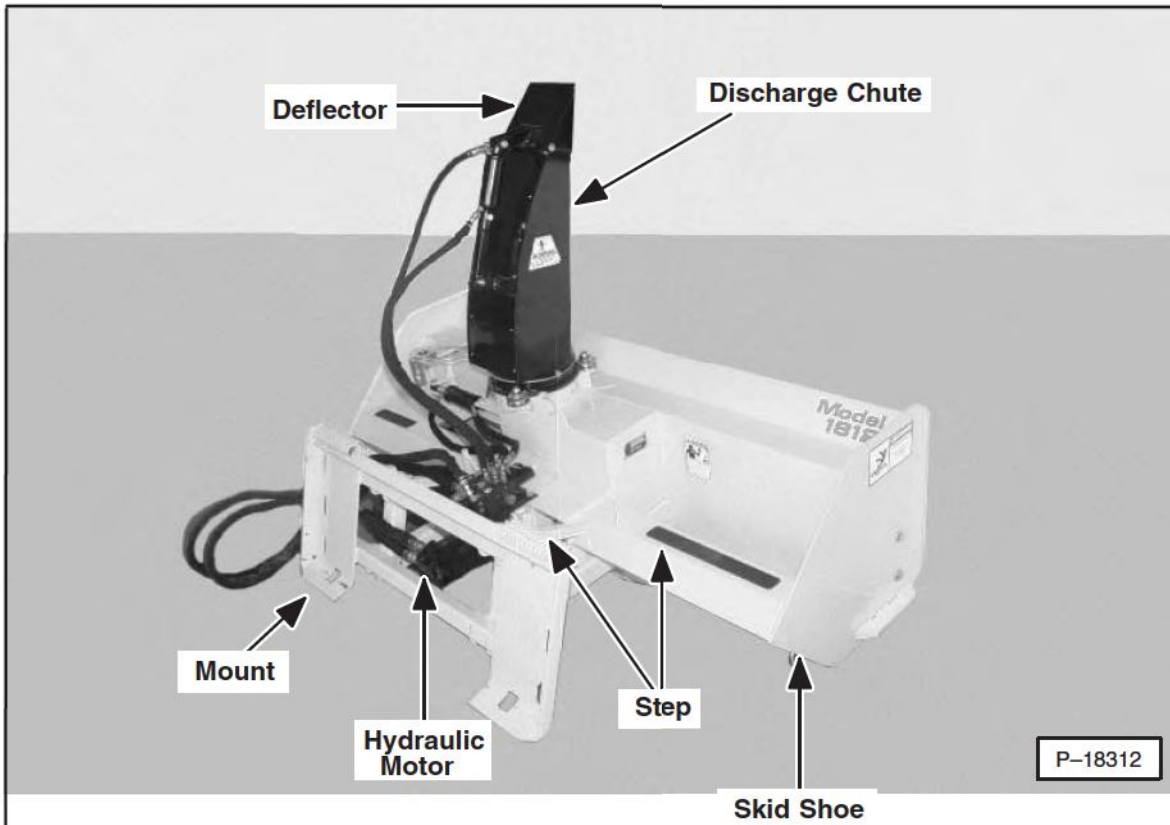

Dealer Copy --- Not for Resale

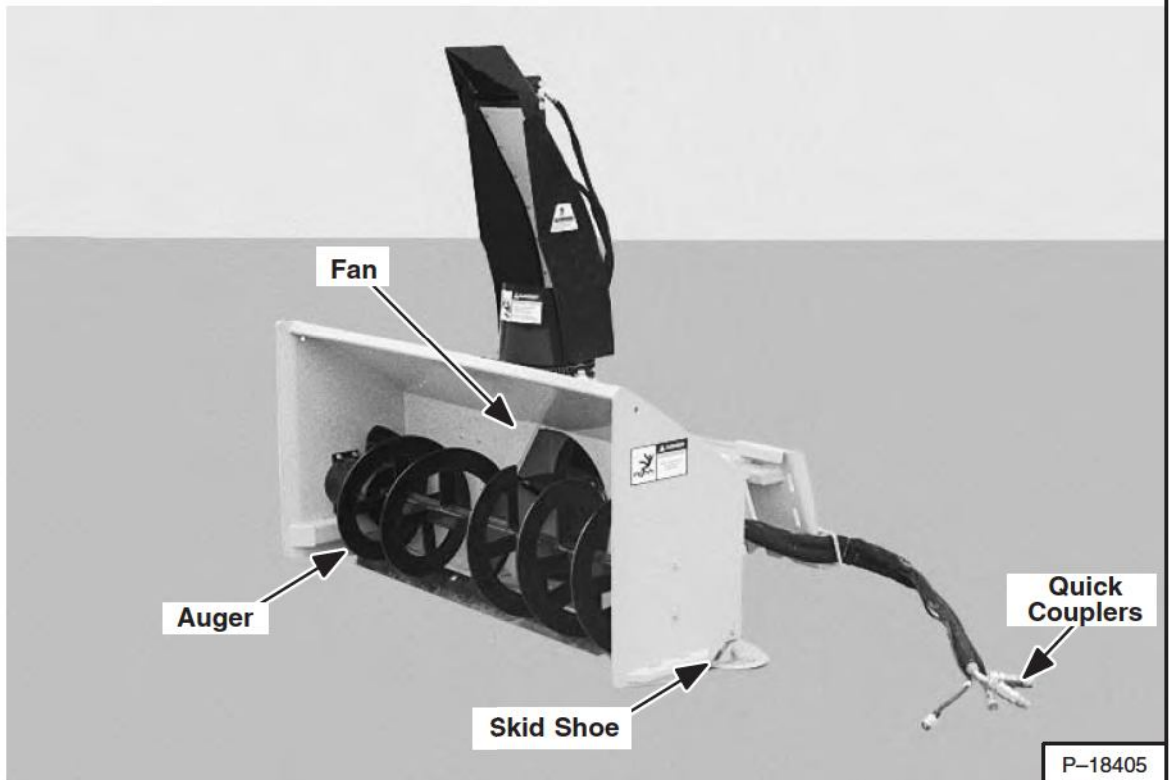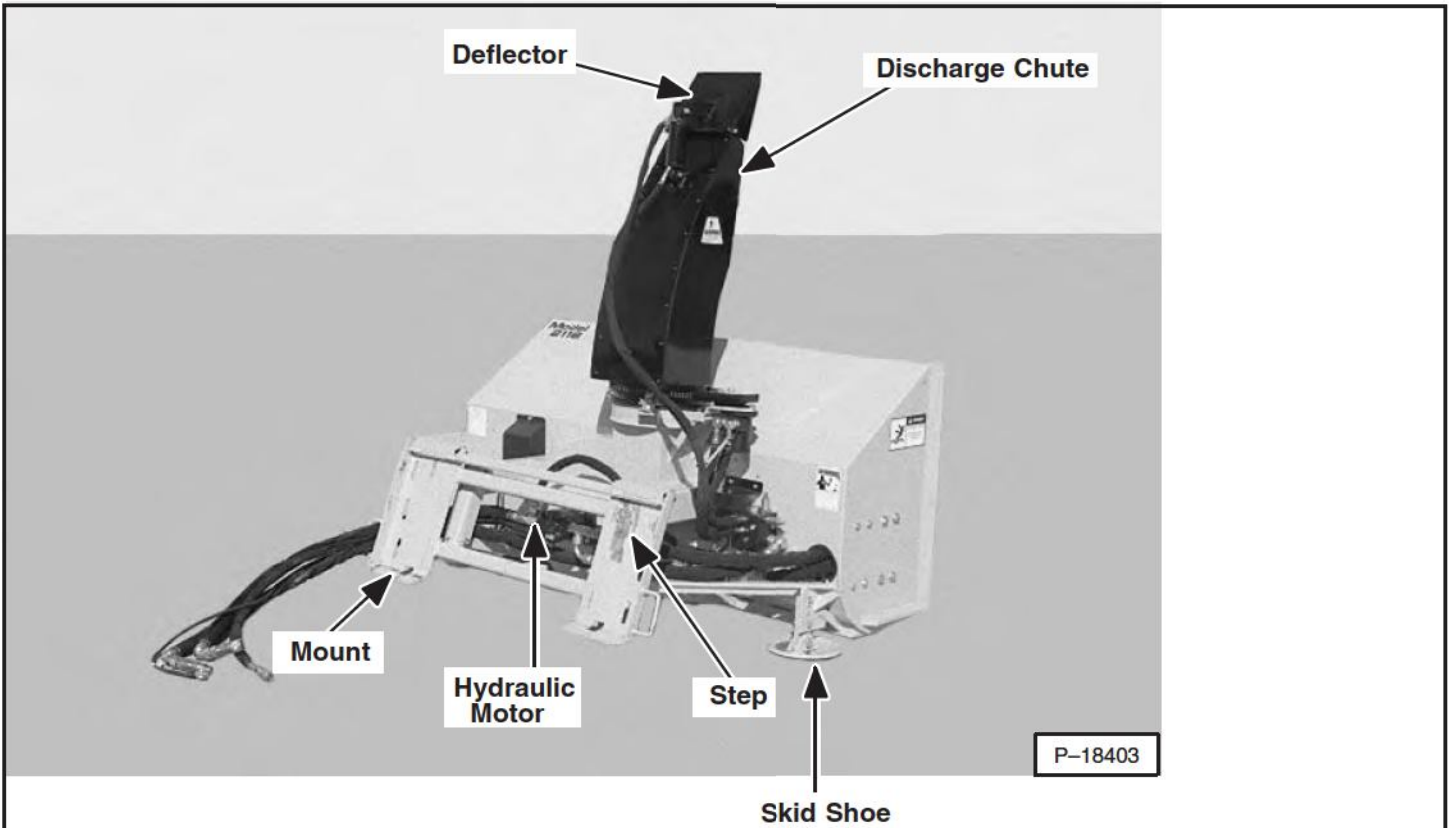  

Dealer Copy -- Not for Resale

SAFETY AND MAINTENANCE

PAGE NUMBER

AUGER DRIVE CHAIN

Drive Chain Adjustment (Model 1812)	10-50-1
Drive Chain Replacement (Model 1812)	10-50-2

AUGER HYDRAULIC RELIEF VALVE

Relief Valve Adjustment (Model 2118/2418)	10-40-1
---	---------

AUGER SHEAR BOLT

Shear Bolt Replacement (Model 1412)	10-40-1
Shear Bolt Replacement (Model 1812)	10-40-1

CUTTING EDGE

Cutting Edge Replacement (Model 1412)	10-80-1
Cutting Edge Replacement (Model 1812)	10-80-1
Cutting Edge Replacement (Model 2118/2418)	10-80-1

DISCHARGE CHUTE ROTATION CABLE

Cable Adjustment (Model 1412)	10-60-1
Cable Adjustment (Model 1812)	10-60-1

DISCHARGE CHUTE ROTATION CHAIN

Chain Adjustment (Model 2118/2418)	10-70-1
--	---------

INSPECTION

Daily Inspection	10-20-3
Hand Lever Bob-Tach Inspection	10-20-1
Loader Mount Inspection	10-20-3
Power Bob-Tach Inspection	10-20-2

LUBRICATION

Lubrication Points (Model 1412)	10-30-1
Lubrication Points (Model 1812)	10-30-2
Lubrication Points (Model 2118/2418)	10-30-5

SKID SHOES

Skid Shoe Adjustment (Model 1812)	10-90-1
Skid Shoe Adjustment (Model 2118/2418)	10-90-1

TROUBLESHOOTING	10-10-1
-----------------------	---------

**SAFETY AND
MAINTENANCE**

Dealer Copy -- Not for Resale

TROUBLESHOOTING



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

If the attachment is not working correctly, check the hydraulic system of the Bobcat loader thoroughly before making any repairs on the attachment. Attachment problems can be affected by a hydraulic system that is not operating to specifications or such problems as a plugged fuel filter or hydraulic filter in the loader. Connect a flow meter to the loader to check the hydraulic pump output, relief valve setting and tubelines to check flow and pressure. (See the loader Service Manual for the correct procedure to connect the flow meter.)

PROBLEM	CAUSE	CORRECTION
Snow Blower does not operate.	Loader main relief valve set too low.	Adjust main relief valve to correct setting.
	Loader fluid reservoir is low.	Add hydraulic fluid to the fluid reservoir in the loader.
	No hydraulic flow to the snow blower.	Check the hydraulic flow.
	Loader hydraulic pump not working.	Check flow of hydraulic pump. Repair or replace as needed.
	Attachment control wire harness damaged.	Repair or replace wire harness.
	Damaged quick couplers.	Replace quick couplers.
	Auxiliary hydraulics not engaged.	Engage auxiliary hydraulics.
Auger does not rotate.	Broken auger shear pin.	Replace shear pin.
	Auger drive chain damaged or broken.	Repair or replace auger drive chain.
	Auger relief valve set too low. (Model 2118/2418 only)	Set relief valve to higher pressure.
Chute does not rotate.	Damaged cylinder, motor or actuator.	Repair or replace cylinder, motor or actuator.
	Loose or broken chute rotation cable or chain.	Replace or adjust chute rotation cable or chain.
	Damaged wire harness.	Repair or replace wire harness.
	Damaged solenoid or relay.	Replace solenoid or relay.
Deflector does not adjust.	Damaged cylinder or actuator.	Repair or replace cylinder, or actuator.
	Damaged solenoid or relay.	Replace solenoid or relay.
Snow Blower cuts too low/too high. (Models 1812/2118/2418)	Skid shoes out of adjustment.	Raise or lower skid shoes as needed.

Dealer Copy - Not for Resale

INSPECTION

Hand Lever Bob-Tach Inspection

Move the Bob-Tach levers to engage the wedges[A]. The levers and wedges must move freely.

The wedges must extend through the holes in the attachment mounting frame (Item 1) [A].

⚠ WARNING

Bob-Tach wedges must extend through the holes in attachment. Lever(s) must be fully down and locked. Failure to secure wedges can allow attachment to come off and cause injury or death.

W-2102-0497

 
 
 
 
The spring loaded wedge (Item 1) [A] must contact the lower edge of the hole in the attachment (Item 1) [B] and [C].

If the wedge does not contact the lower edge of the hole [B] and [C], the attachment will be loose and can come off the Bob-Tach.

Inspect the mounting frame on the attachment and the Bob-Tach, linkages and wedges for excessive wear or damage [D]. Replace any parts that are damaged, bent, or missing. Keep all fasteners tight.

Look for cracked welds. Contact your Bobcat dealer for repair or replacement parts.

Lubricate the wedges (See the correct loader Service Manual for *LUBRICATION OF THE BOBCAT LOADER*).

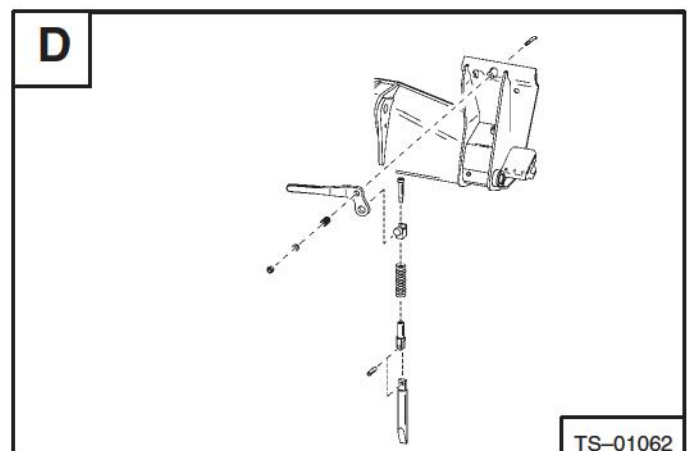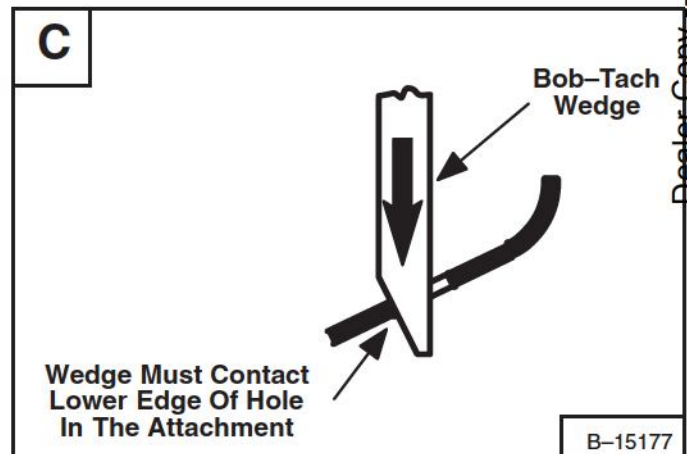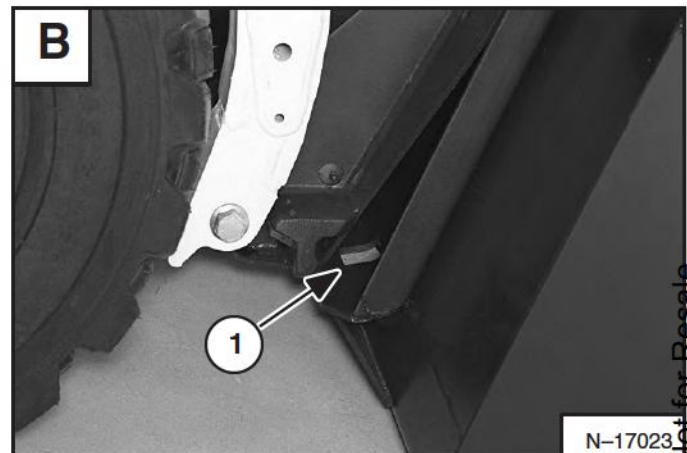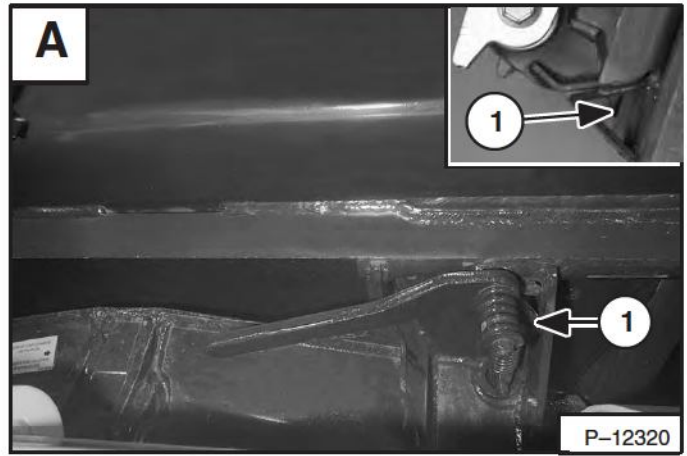

Buy Now



Our support email:

ebooklibonline@outlook.com