 


V638

 **Bobcat®**
VersaHANDLER

Service Manual

S/N A2ZV11001 & Above (with Cab)
S/N A2ZW11001 & Above (with Canopy)

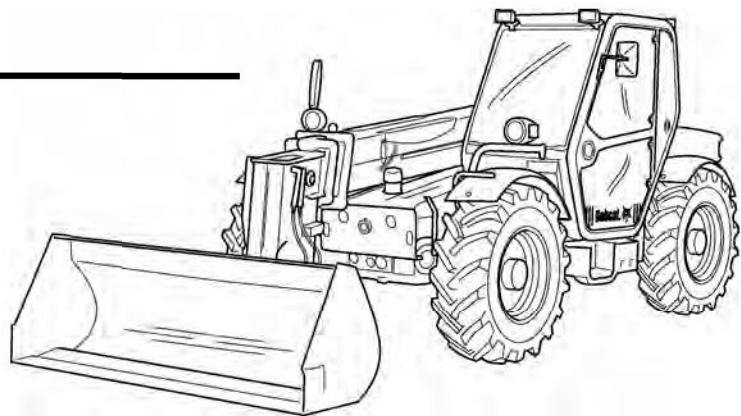

Dealer Copy -- Not for Resale

MAINTENANCE SAFETY

 


WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

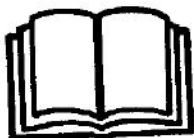


B-10731a

- ⚠ Never service the Bobcat VersaHANDLER without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

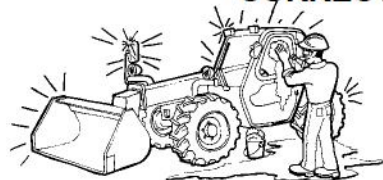

B-16082

- ⚠ Cleaning and maintenance are required daily.


WRONG

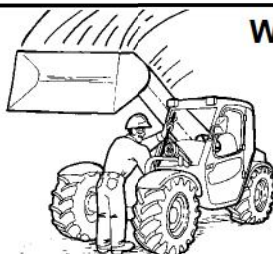

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

 
WRONG

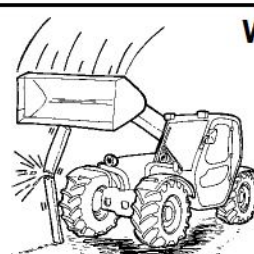

B-16079

- ⚠ Never work on VersaHANDLER with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 WRONG

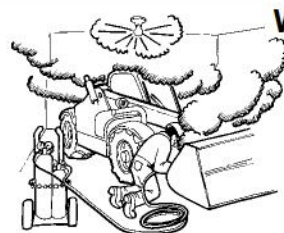

B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG



B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW12-0805

Dealer Copy -- Not for Resale

ALPHABETICAL INDEX

ACCUMULATOR	20-01	FUEL SYSTEM.....	10-01
AIR CLEANER	70-01	FUEL TANK.....	50-01
AIR CLEANER SERVICE	10-01		
AIR CONDITIONING SERVICE.....	80-01	GEAR PUMP	20-01
AIR CONDITIONING SYSTEM FLOW	80-01	GENERAL AIR CONDITIONING SERVICE	
AIR INTAKE COWLING	50-01	GUIDELINES.....	80-01
ALTERNATOR.....	60-01		
APPROVED BOOM STOP	10-01	HEATER ASSEMBLY.....	80-01
ATTACHMENT FRAME.....	10-01	HYDRAULIC CONNECTION SPECS	SPEC-01
AXLES (FRONT AND REAR).....	10-01	HYDRAULIC CONTROL VALVE.....	20-01
AXLE AND DIFFERENTIAL (FRONT).....	40-01	HYDRAULIC RESERVOIR.....	20-01
AXLE AND DIFFERENTIAL (REAR)	40-01	HYDRAULIC / HYDROSTATIC FLUID	
AXLE TOE-IN.....	40-01	SPECIFICATIONS.....	SPEC-01
		HYDRAULIC / HYDROSTATIC SYSTEM	10-01
BASIC TROUBLESHOOTING	80-01	HYDRAULIC SYSTEM INFORMATION.....	20-01
BATTERY	60-01	HYDROSTATIC DRIVE MOTOR	30-01
BOOM TRAY	50-01	HYDROSTATIC PUMP	30-01
BRAKE LIGHT SWITCH	60-01	HYDROSTATIC SYSTEM INFORMATION	30-01
BRAKE VALVE	20-01		
BUCKET POSITION CYLINDER	20-01	INCHING SWITCH	60-01
		INSTRUMENT PANEL	60-01
CANOPY.....	50-01	INTERMEDIATE BOOM	50-01
CHAIN CHECKING AND ADJUSTING			
PROCEDURE	10-01, 50-01	JOYSTICK.....	20-01
COMPONENTS	80-01	JOYSTICK PANEL	50-01
COMPRESSOR	80-01		
CONDENSER	80-01	LATERAL OPERATOR RESTRAINT SYSTEM	
CONVERSIONS	SPEC-01	(LORS)	10-01, 60-01
		LIFT CYLINDER.....	20-01
DASH COVER/STEERING COLUMN COVER.....	50-01	LIFTING AND BLOCKING THE VERSAHANDLER	10-01
DRIVE BOX	20-01	LIGHTS	60-01
DRIVESHAFT	40-01	LUBRICATION	10-01
ELECTRICAL SYSTEM INFORMATION	60-01	MACHINE TORQUE SPECIFICATIONS.....	SPEC-01
END BOOM	50-01	MAIN RELIEF VALVE	20-01
ENGINE AND ENGINE MOUNTS	70-01	MUFFLER.....	70-01
ENGINE COMPONENTS AND TESTING	70-01	OIL COOLER/RADIATOR	30-01, 70-01
ENGINE COOLING SYSTEM.....	10-01	OPERATOR CAB	50-01
ENGINE COVER	10-01, 50-01	OPERATOR CAB/CANOPY	10-01
ENGINE/HYDROSTAT ASSEMBLY.....	70-01	OPERATOR SEAT	50-01
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS	SPEC-01	PARKING BRAKE	20-01, 40-01
ENGINE SPEED CONTROL	70-01	PEDAL ASSEMBLY	60-01
ENGINE TIMING.....	70-01	PIVOT LINK.....	50-01
EVAPORATOR/BLOWER UNIT	80-01	PORT RELIEF VALVES	20-01
EXPANSION VALVE	80-01	PRESSURE SWITCH.....	80-01
EXTENSION CYLINDER	20-01	PRESSURE REDUCING VALVE	20-01
FAN MOTOR	20-01	QUICK-TACH	50-01
FENDER	50-01	QUICK TACH CYLINDER	20-01
FIXED BOOM	50-01		
FLOW CONTROL VALVE	20-01		
FRAME LEVELING CYLINDER.....	20-01		
FRAME LEVELING SPEED SWITCH.....	60-01		
FLYWHEEL AND HOUSING	70-01		
FRONT AXLE	40-01		
FRONT WIPER MOTOR	60-01		

ALPHABETICAL INDEX (CONT'D)

REAR AXLE	40-01
REAR WEIGHTS	50-01
REAR WIPER MOTOR.....	60-01
RECEIVER / DRIER	80-01
RECONDITIONING THE ENGINE	70-01
REGULAR MAINTENANCE	80-01
SAFETY	80-01
SERVICE BRAKE	40-01
SERVICE SCHEDULE	10-01
SERVICE SOFTWARE.....	60-01
SPARK ARRESTOR MUFFLER.....	10-01
STARTER	60-01
STEERING ANGLE ADJUSTMENT	40-01
STEERING CYLINDER (FRONT)	20-01
STEERING CYLINDER (REAR).....	20-01
STEERING MODE VALVE BLOCK.....	20-01
STEERING VALVE.....	20-01
SWITCH PANEL.....	60-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE/PRESSURE.....	80-01
TILT CYLINDER	20-01
TIRE MAINTENANCE	10-01
TOP WIPER MOTOR	60-01
TORQUE SPECIFICATIONS FOR BOLTS ...	SPEC-01
TOW VALVE.....	20-01
TOWING THE VERSAHANDLER	10-01
TRANSPORTING THE VERSAHANDLER.....	10-01
TRAVEL/SIGNAL LEVER.....	60-01
TROUBLESHOOTING.....	40-01, 70-01
VERSAHANDLER SPECIFICATIONS	SPEC-01
WEAR PADS (FRONT)	50-01
WEAR PADS (REAR).....	50-01

CONTENTS

DELIVERY REPORT.....	X
FOREWORD.....	III
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	IX
BOBCAT VERSAHANDLER IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**












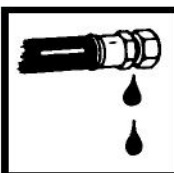



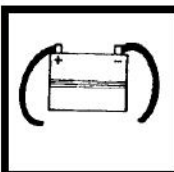
HVAC

SPECIFICATIONS

FOREWORD

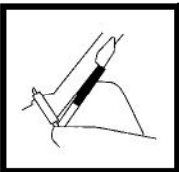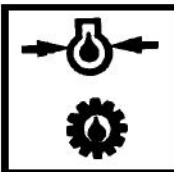
This manual is for the Bobcat VersaHANDLER mechanic. It provides necessary servicing and adjustment procedures for the Bobcat VersaHANDLER and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the VersaHANDLER has had service or repair:

- | | | | |
|--|---|--|---|
| <p>1. Check that ROPS/FOPS (Including right side window) is in good condition and is not modified.</p> |  | <p>9. Enclosure door latches must open and close freely.</p> |  |
| <p>2. Check that ROPS mounting hardware is tightened and is Bobcat approved.</p> |  | <p>10. Attachment locking pins must function correctly and be in good condition.</p> |  |
| <p>3. The seat belt must be correctly installed, functional and in good condition.</p> |  | <p>11. Safety treads must be in good condition.</p> |  |
| <p>4. Check boom support device, replace if damaged.</p> |  | <p>12. Check for correct function of indicator lamps and gauges.</p> |  |
| <p>5. Machine signs must be legible and in the correct location.</p> |  | <p>13. Check hydraulic fluid level, engine oil level and fuel supply.</p> |  |
| <p>6. Check tires for wear and pressure. Use only approved tires.</p> |  | <p>14. Inspect for fuel, oil or hydraulic fluid leaks.</p> |  |
| <p>7. Check for correct function of the work lights.</p> |  | <p>15. Lubricate the VersaHANDLER.</p> |  |
| <p>8. The parking brake must function correctly.</p> |  | <p>16. Check the condition of the battery and cables.</p> |  |

Dealer Copy -- Not for Resale

 
17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

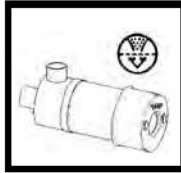

20. Operate the VersaHANDLER and check all functions.



 
18. Check the electrical charging system.

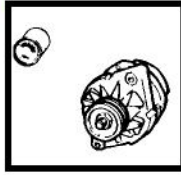

21. Check for any field modification not completed.



 19. Inspect for loose or broken parts or connections.

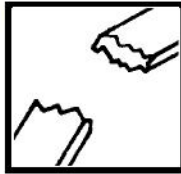

22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

 Figure 1

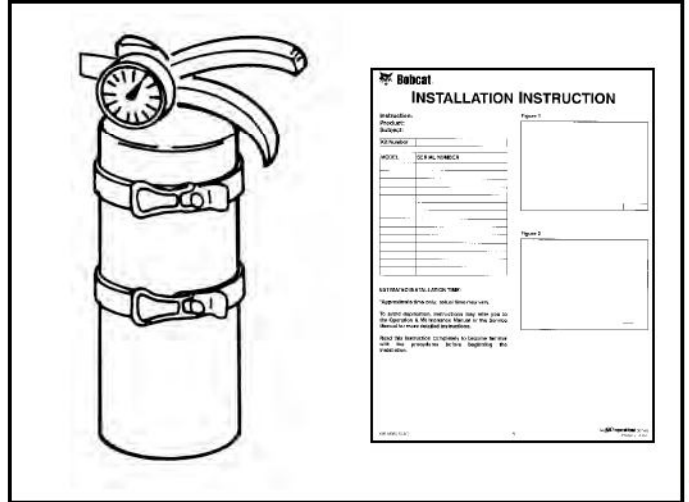

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].

Dealer Copy -- Not for Resale

SERIAL NUMBER LOCATION

Always use the serial number of the VersaHANDLER when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

VersaHANDLER Serial Number


Figure 2



The front, on the right side of the chassis [Figure 2].

Engine Serial Number

 Figure 3

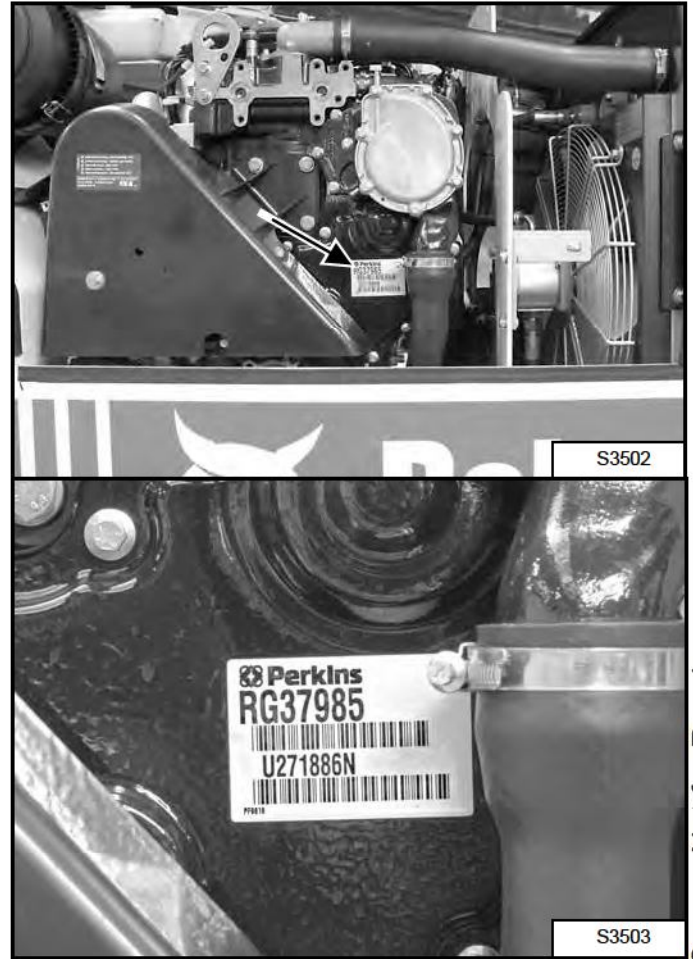

The engine serial number is stamped on a plate near the injection pump or at the rear of the cylinder block [Figure 3]. Always use the full number when ordering replacement parts.

Other Serial Numbers

Some components may also have serial numbers. Always use these serial numbers when requesting parts.

Dealer Copy -- Not for Resale


DELIVERY REPORT

Figure 4

The diagram shows a form titled "DELIVERY REPORT". It features a "WARNING" section on the left and a "DELIVERY REPORT" section at the top right. The form is filled with horizontal lines representing text input fields. A small box at the bottom right contains the text "B-16315".

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the VersaHANDLER is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 4]**.

 BOBCAT VERSAHANDLER IDENTIFICATION

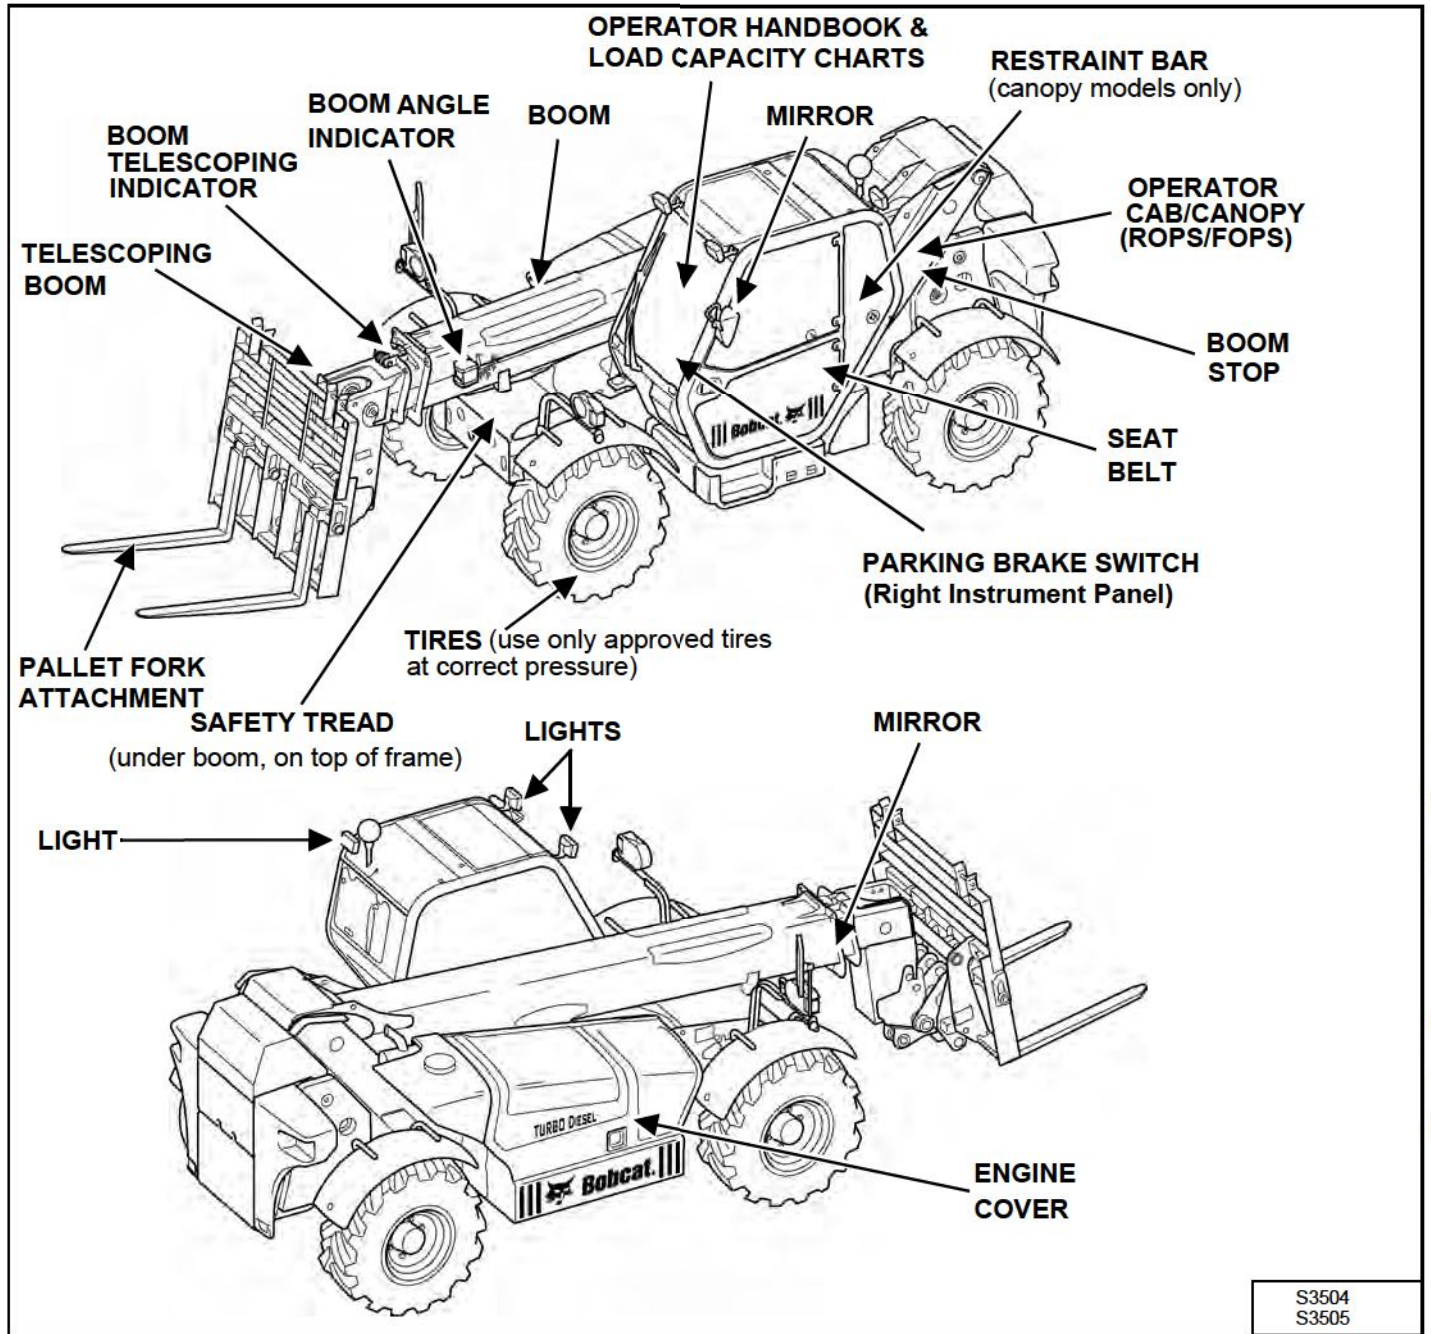

S3504
S3505

Dealer Copy -- Not for Resale

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE 10-60-1
 Replacing Filter Element 10-60-1

APPROVED BOOM STOP 10-150-1
 Installing The Approved Boom Stop 10-150-1
 Removing The Approved Boom Stop 10-150-1

ATTACHMENT FRAME 10-150-5
 Inspection And Maintenance 10-150-5

AXLES (FRONT AND REAR) 10-110-1
 Checking Oil Level (Front Differential) 10-110-2
 Checking Oil Level (Planetary Carrier) 10-110-1
 Checking Oil Level (Rear Differential) 10-110-2
 Draining Oil (Front Differential) 10-110-3
 Draining Oil (Planetary Carrier) 10-110-1

CHAIN CHECKING AND ADJUSTING PROCEDURE 10-180-1
 Checking/Adjustment Procedure 10-180-1
 Extend/Retract Chain Wear Check 10-180-2

ENGINE COOLING SYSTEM 10-70-1
 Checking The Coolant Level 10-70-1
 Cleaning The Cooling System 10-70-1
 Replacing The Coolant 10-70-2

ENGINE COVER 10-160-1
 Opening And Closing The Engine Cover 10-160-1

ENGINE LUBRICATION SYSTEM 10-90-1
 Checking Engine Oil 10-90-1
 Oil Chart 10-90-1
 Replacing Oil And Filter 10-90-2

FUEL SYSTEM 10-80-1
 Filling The Fuel Tank 10-80-1
 Fuel Filter 10-80-1
 Fuel Specifications 10-80-1

Continued On Next Page

Dealer Copy -- Not for Resale

SAFETY AND MAINTENANCE (CONT'D)

HYDRAULIC/HYDROSTATIC SYSTEM	10-100-1
Checking And Adding Fluid	10-100-1
Replacing Hydraulic Fluid	10-100-2
Replacing Hydraulic/Hydrostatic Filter	10-100-1
LATERAL OPERATOR RESTRAINT SYSTEM (LORS™)	10-170-1
System Inspection	10-170-1
System Maintenance	10-170-2
LIFTING AND BLOCKING THE VERSAHANDLER	10-10-1
Procedure	10-10-1
LUBRICATION	10-120-1
Procedure	10-120-1
OPERATOR CAB/CANOPY	10-20-1
Cab Door	10-20-2
Cab Door Window	10-20-2
Emergency Exit	10-20-1
SERVICE SCHEDULE	10-50-1
SPARK ARRESTOR MUFFLER	10-140-1
Cleaning	10-140-1
TIRE MAINTENANCE	10-130-1
Tire Mounting	10-130-2
Tire Rotation	10-130-2
Wheel Nuts	10-130-1
TOWING THE VERSAHANDLER	10-40-1
Procedure	10-40-1
TRANSPORTING THE VERSAHANDLER	10-30-1
Procedure	10-30-1

Dealer Copy -- Not for Resale

LIFTING AND BLOCKING THE VERSAHANDLER

Procedure

⚠ WARNING

AVOID INJURY OR DEATH

- Before lifting, check fasteners on four point lift.
- Never allow riders in the cab or bystanders within 15 ft. (5 m) while lifting the machine.

W-2160-0694

Figure 10-10-1

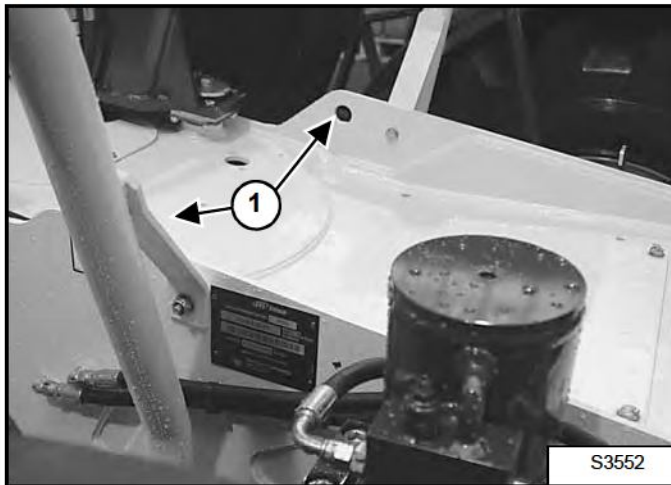 


Figure 10-10-2



Before lifting: Remove all attachments, lower boom fully, position wheels straight forward and stop the machine.

Attach the lift hooks to the following lifting points (Items 1) [Figure 10-10-2] & [Figure 10-10-2]:

Figure 10-10-3


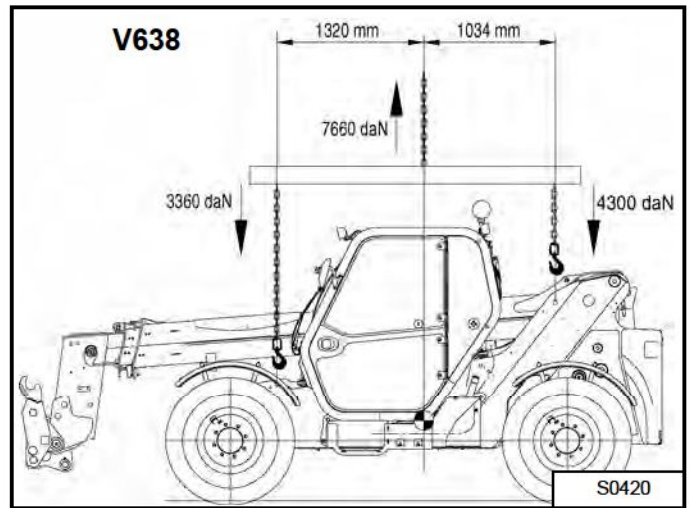 


Figure 10-10-4

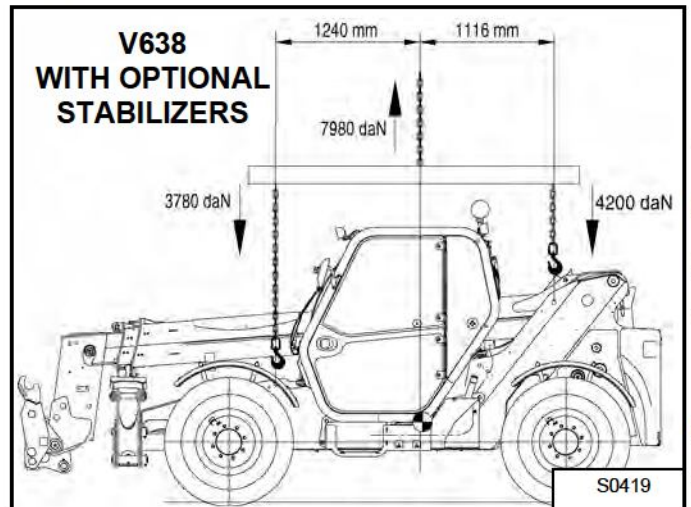 

Take into account the position of the machine's center of gravity & [Figure 10-10-4].

Dealer Copy -- Not for Resale

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com