# SERVICE MANUAL Crawler 1000

1. Trim along dashed line.

2. Slide into pocket on Binder Spine.

SERVICE MANUAL
Crawler
1000

- 1. Trim along dashed line.
- 2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL
Crawler
1000

1. Trim along dashed line.

2. Slide into pocket on Binder Spine.

9-72142

SERVICE MANUAL

Crawler

1000

- 1. Trim along dashed line.
- 2. Slide into pocket on Binder Spine.

9-72142

TYPE 1-4

TYPE 1-4

TYPE 1-4

# 1000D CRAWLER TABLE OF CONTENTS

### SERIES/SECTION

- 10 SERIES GENERAL
  Basic Crawler Specifications (pages are numbered with Roman numeral prefix I)
- 20 SERIES ENGINE
  Engine (pages are numbered with Roman numeral prefix II)
- 30 SERIES FUEL SYSTEM
  Fuel System (pages are numbered with Roman numeral prefix III)
- 40 SERIES HYDRAULICS
  Hydraulic System (pages are numbered with Roman numeral prefix VIII)
- 50 SERIES TRACK AND SUSPENSION
  Track and Suspension System (pages are numbered with Roman numeral prefix VI)
- 60 SERIES POWER TRAIN

  Torque Converter (pages are numbered with Roman numeral prefix IV)

  Transmission and Final Drive (pages are numbered with Roman numerals prefix V)
- 80 SERIES ELECTRICAL Electrical System (pages are numbered with Roman numeral prefix VII)
- 90 SERIES MOUNTED EQUIPMENT Loader, Dozer, Ripper (pages are numbered with Roman numeral prefix IX)

### 1. BASIC CRAWLER SPECIFICATIONS

## **Engine**

Model (Continental)  *Horsepower, maximum (gross)  net flywheel hp  No. 2 Diesel  No. cylinders  Bore and stroke  Piston displacement (cu. in.)  RPM (governed at full load)  Max. torque, lbs. ft. @ 1200 RPM  Fuel injection  Starting  *Sea level (calculated) maximum horsepower (based on 60° F. and 29.92" Hg.). Manufacturer's rating.
Dimensions and WeightOverall Length
Tracks
*Track Gauge
Travel Speeds . MPH
Forward       Reverse         1st (Lo-Lo)       0 to 1.7       0 to 2.0         2nd (Hi-Lo)       0 to 2.9       0 to 3.5         3rd (Lo-Hi)       0 to 3.4       0 to 4.1         4th (Hi-Hi)       0 to 6.0       0 to 7.1
Capacities
Fuel Tank52 U.S. GallonsTransmission and Torque Converter13 U.S. GallonsFinal Drive (each side)1-1/2 U.S. GallonsTrack Roller Reservoir (each side)8-1/2 lbs.Equipment Hydraulic System16 U.S. GallonsCooling System11 U.S. GallonsCrankcase11-1/2 U.S. Quarts

### **Torque Converter**

Type
Torque Ratio Increase at Stall
Fluid Used (type)

### Maximum Drawbar Pull

1st	(Lo-Lo)										•		 						• (											 		35	5,00	0	lb	s.
2nd	(Hi-Lo)			•					۰	•	•		 			•	•	•			•					•				 		20	,00	0	lb	s.
3rd	(Lo-Hi)	•	 	•		•	•	•	٠	•		3	 		•		•				•	•	•		•		• •			 		17	,00	0	lb	s.
4th	(Hi-Hi)			•	•		•			•		•	 	•	•		•	•	• •						•					 	•	11	,00	0	lb	s.

Manufacturer's rating. Drawbar pull figures are maximum at converter stall and assume adequate traction.

### 2. LOADER SPECIFICATIONS

### Performance Data

Breakout Force (at ground level)
Bucket Rollback
At Ground Level
At 18" Carry
At Maximum Lift
Overall Height at Maximum Lift
Dump Clearance at Maximum Lift (45° dump angle) 8 Ft. 6 Inches
Dump Reach
At Maximum Lift (45° dump angle)
At 7 Ft. (45° dump angle) 58 Inches

### **Buckets**

WIDTH	CAPACITY (SAE RATED)
Standard       81"         Heavy       81"         Light       81"         Multi-Purpose       86-3/4"	1-1/8 Cu. Yd. 2-1/2 Cu. Yd.

### **Dimensions and Weight**

Bucket Width	9 Inches
Tractor Width (standard width) 6 Ft.	3 Inches
Overall Height (to top of exhaust) 8 Ft.	4 Inches
Overall Length to Rear of Counterweight (bucket on ground) 16 Ft.	5 Inches
Weight working (with bucket and counterweight) 23	3,460 lbs.
Ground Pressure (with heaped bucket)	2.3 P.S.I.

Hydraulics
Dump Cylinders (2)
3. POWER ANGLING DOZER SPECIFICATIONS
Performance Data
Angle - Both Ways (hydraulic)
Dimensions and Weight
Blade
Hydraulics
Lift Cylinders (2)
4. POWER TILT DOZER SPECIFICATIONS
Performance Data
Tilt - Both Ways (hydraulic)
Dimensions and Weight

Overall Width ..... 104 Inches Height Over Fuel Tank Cap ...... 73-1/4 Inches 

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com