



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

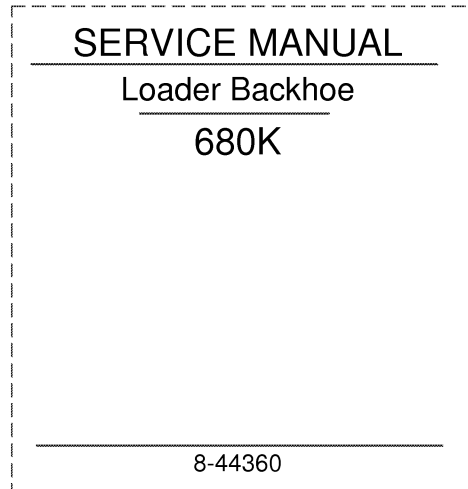


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

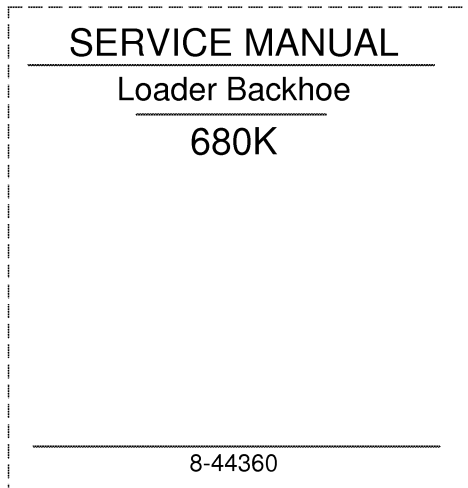

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

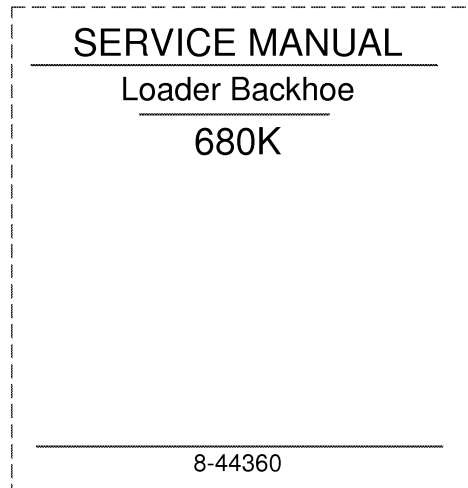

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

680K LOADER BACKHOE

TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction and Torque Specifications	1001	8-44360
Maintenance and Lubrication	1002	8-44360
General Engine Specifications	1010	8-27130
Detailed Engine Specifications	1024	8-26061
2 ENGINES		
Engine Removal and Installation	2000	8-44360
Engine Accessories (Air Cleaner, Ether Injection, Muffler)	2001	8-44360
Engine Stall Tests	2003	8-44360
Cylinder Head and Valve Train	2415	8-26071
Cylinder Block, Pistons, Rods, Camshaft, Main Bearings, Oil Seals, and Flywheel	2425	8-26081
Lubrication System	2445	8-26091
Cooling System	2455	8-26101
3 FUEL SYSTEM		
Fuel Lines, Fuel Tank, and Engine Controls	3001	8-44360
Fuel System and Filters	3410	8-26131
Bosch Fuel Injection Pump, Drive Gear, and Timing	3412	8-26141
Fuel Injectors	3413	8-26150
4 ELECTRICAL		
Removal and Installation of Electrical Components	4001	8-44361
Electrical System Specifications and Troubleshooting	4002	8-44361
Wiring Schematics	4003	8-44361
Batteries	4005	8-44360
Starter and Starter Solenoid, Nippondenso	4006	8-42191
Alternator, Delco-Remy	4007	8-42241
Instrument Cluster and Instrument Panel	4009	9-69300
Alternator, Bosch	4019	8-42851
5 STEERING		
Steering System Troubleshooting	5002	8-44360
Steering Control Valve and Steering Column	5007	9-69311
Steering Cylinders	5010	9-69300
Circuit Relief Valve and Check Valves	5011	9-69311
Front Axle	5021	9-69300
6 POWER TRAIN		
Hydraulic Diagram and Troubleshooting the Transmission	6202	8-44360
Transmission	6210	8-44360
Transmission Controls	6211	9-69300
Drive Shaft	6222	9-69300
Differential and Planetaries	6226	9-69301
Wheels and Tires	6229	9-69300

DIVISION/SECTION	SECTION NO.	FORM NO.
7 BRAKES		
Removal and Installation of Air Compressor	7101	8-44360
Troubleshooting Charts, Operation of the Air System, Air System Diagram	7102	8-44360
Air Compressor, Governor, Reservoir, and Relief Valve	7103	8-44360
Brake Valve	7105	9-69300
Brake Actuator	7107	9-69311
Alcohol Evaporator	7111	8-44360
Pressure Reducer Valve, Pressure Protection Valve, Clutch Cutout Valve, and Stoplamp Switch	7113	9-69300
Brakes	7123	9-69300
Parking Brake Control Valve and Quick Release Valve	7126	8-44360
8 HYDRAULICS		
Removal and Installation of Hydraulic Pumps	8001	8-44360
Hydraulic System Schematics, Specifications, and Troubleshooting	8002	8-44360
Cleaning the Hydraulic System	8003	9-69300
Hydraulic Pump	8005	8-44360
Flow Control Valve	8006	9-69311
Loader Control Valve	8007	9-69311
Cylinders	8090	8-44360
Backhoe Relief Valve	8106	8-44360
Backhoe Control Valve	8107	9-69300
Removal and Installation of Stabilizer Control Valve	8108	8-44360
Stabilizer Control Valve	8109	8-42190
Boom Lock System	8121	8-44360
9 MOUNTED EQUIPMENT		
Air Conditioning Troubleshooting and System Checks	9002	9-69270
Air Conditioning System	9003	8-44360
Loader	9010	8-44360
Rops Cab and Canopy	9061	9-69310
Seat, Seat Belts, and Seat Support	9064	9-69300
Backhoe	9100	9-69300
Noise Control	9203	9-69300
REAR POCKET		
Electrical Schematic (24 Volt System)	850572A	
Instrument Cluster (12 Volt System)	870586	
Main Harness (12 Volt System)	870263	
Engine Harness (12 Volt System)	870264	
Rear Harness (12 Volt System)	870265	
Cab Harness (12 Volt System)	870266	
Canopy Harness (12 Volt System)	870267	
Hydraulic Schematic	851051	

1001

SAFETY RULES, SERVICE MANUAL INTRODUCTION, AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Safety Rules	1001-2
Service Manual Introduction	1001-4
Torque Specifications - U.S. Hardware	1001-5
Torque Specifications - Metric Hardware	1001-6
Torque Specifications - Steel Hydraulic Fittings	1001-7



Written In *Clear
And
Simple
English*

SERVICE MANUAL INTRODUCTION

This service manual has been prepared with the latest service information available. Troubleshooting, removal, disassembly, inspection and installation procedures, and complete specifications and tightening references can be found in most sections. Some sections have drawings but no written procedure because the job is so easily done. This service manual is one of the most important tools available to the service technician.

Right, Left, Front, and Rear

The terms right-hand and left-hand and front and rear as used in this manual indicate the right and left sides, and front and rear of the machine as seen from the operator's seat for correct operation of the machine or attachment.

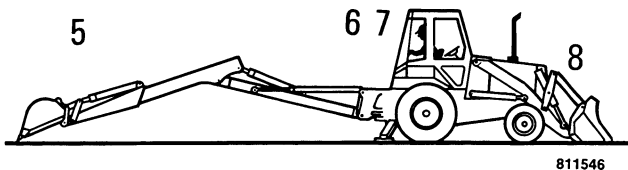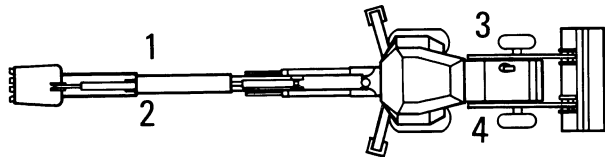

- | | |
|------------------------------|-------------------------|
| 1. <i>Right Side-Backhoe</i> | 5. <i>Front-Backhoe</i> |
| 2. <i>Left Side-Backhoe</i> | 6. <i>Rear-Backhoe</i> |
| 3. <i>Left Side-Machine</i> | 7. <i>Rear-Machine</i> |
| 4. <i>Right Side-Machine</i> | 8. <i>Front-Machine</i> |

Table of Contents

A Table of Contents is in the front of this manual. The Table of Contents shows the main divisions and the sections that are in each division. The individual sections also have a Table of Contents.

Page Numbers

All page numbers are made of two numbers separated by a dash, such as 4002-9. The number before the dash is the section number. The number following the dash is the page number in that section. Page numbers will be found at the upper right or left of each page.

Illustrations

Illustrations are put as near as possible to the text and are to be used as part of the text.

Clear and Simple English

This manual is written in C.A.S.E. (Clear and Simple English). C.A.S.E. is easier to read than "regular" English because C.A.S.E. uses a small number of common words and has special rules for writing.

All sections written in C.A.S.E. are indicated by the symbol below.

Written In *Clear
And
Simple
English*

Special Tools

Special tools are needed to remove and install, disassemble and assemble, check and adjust some component parts of this machine. Some special tools can be easily made locally and the necessary information to make the tool is in this service manual. Other special tools are more difficult to make locally and are available from Service Tools in the U.S. and from Jobborn Manufacturing in Canada. Use these tools according to the instructions in this service manual for your personal safety and to do the job correctly.

Order special tools from either of the following companies.

Service Tools
P.O. Box 314
Owatonna, Minnesota 55060

Jobborn Manufacturing Co.
97 Frid Street
Hamilton, Ontario L8P 4M3
Canada

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com