


655 Crawler Loader

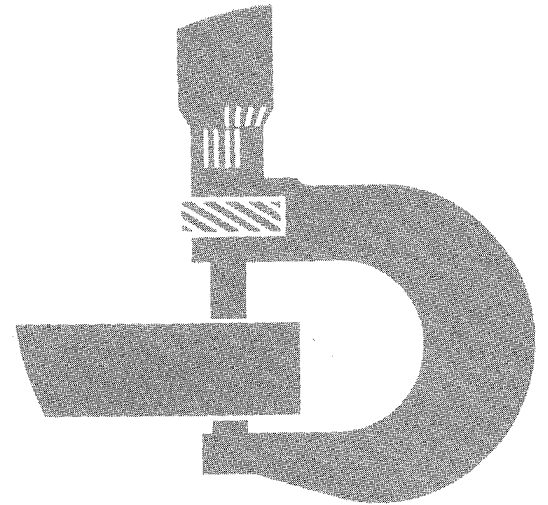

TECHNICAL MANUAL

TM-(1250) (Apr-87)

LITHO IN U.S.A.

**655 CRAWLER LOADER
Technical Manual
TM-1250 (Apr-81)**

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Lubrication

SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

**SECTION 2 - AXLES AND SUSPENSION
SYSTEMS**

- Group 0201 - Drive Axle Housing
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply System
- Group 0599 - Specifications and Special Tools

SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housing and Covers
- Group 0851 - Gears, Shafts, Bearings
- Group 0899 - Specifications and Special Tools

SECTION 11 - PARKING EMERGENCY BRAKE

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1160 - Hydraulic System
- Group 1199 - Specifications and Special Tools

SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar
- Group 1512 - Towbar

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Supports and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

**SECTION 17 - FRAME, CHASSIS OR SUPPORT-
ING STRUCTURE**

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

Copyright © 1981
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosures
- Group 1921 - Grille and Grille Housing

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

SECTION 42 - GROUND CONDITIONING TOOL

- Group 4201 - Blades, Teeth, Shanks
- Group 4215 - Controls Linkage
- Group 4260 - Hydraulic System

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9026 - Hydrostatic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

ALPHABETICAL INDEX

A	
Adjustment, hydrostatic system	9026-90
Air circulation blower motor	1830-30
Air conditioning operational test	9031-17
Air conditioning relay	1674-4
Air conditioning system	1830-5
Air conditioning system	9031-2
Diagnosis and testing	9031-5
Air conditioning system service	9031-9
Adding refrigerant-12 to system	9031-15
Charging the system	9031-13
Component location	9031-19
Discharging the system	9031-10
Electrical system	9031-9
Evacuating the system	9031-11
Flushing the system	9031-10
Inspecting refrigerant hoses and tubing ..	9031-16
Installing manifold gauge set	9031-9
Leak testing	9031-16
Manifold gauge set	9031-9
Purging the system	9031-11
Alternator	1672-1
Alternator and regulator, 16 amp	1672-13
Alternator, regulator, 42 amp	1672-1
Automatic control valve shutoff,	
transmission	0315-13
Valve control	0315-13
Return-to-neutral linkage	0315-14
Automatic control valve variable,	
transmission	0315-10
Automatic system control	1675-1
Axle housing	0201-3
Axle shaft, bearings and	
reduction gears	0250-1
B	
Batteries	1671-3
Battery cables	1671-3
Battery disconnect	1674-2
Battery supports	1671-3
Blades, shanks, teeth, ground	
conditioning tool	4201-3
Bottom guards, frame	1746-1
Buckets, loader	3102-3
C	
Cab	1810-3
Camshaft	0402-1
Carrier rollers	0130-4
Charging system wiring	1672-1
Cigar lighter	2006-1
Circuit protectors	1674-3
Clutch coil and housing	1830-15
Cold weather starting aids	0505-3
Compressor	1830-5
Compressor hub and drive plate assembly ..	1830-8
Compressor pulley and bearing	1830-14
Compressor relief valve	1830-27
Compressor shaft seal	1830-10
Condenser	1830-21
Connecting rods	0403-1
Control valve, loader	3160-12
Controls linkage, ground	
conditioning tool	4215-1
Controls linkage, loader	3115-1
Counterweight	1749-1
Cowl	1910-4
Crankshaft	0401-1
Cylinder block	0404-1
Cylinder head and valves	0409-1
Cylinders, loader	3160-16
D	
Diagnosing malfunctions,	
hydrostatic system	9026-31
Diagnosing malfunctions,	
miscellaneous components	9031-1
Double selector valve	4260-1
Double selector valve control linkage	4215-1
Drawbar	1511-3
E	
Electric wiring harness	1674-1
Electrical systems	1671-1
Engine system testing	9010-1
Component location	9010-15
Diagnosing malfunction	9010-2
General information	9010-1
Testing and adjustments	9010-7
Air intake system	9010-12
Alternator and fan belts adjustments ...	9010-9
Basic engine	9010-7
Engine cooling system	9010-8
Engine lubrication system	9010-7
Engine output check	9010-8
Engine output check turbocharger	
pressure test	9010-12
Fuel system	9010-9
Speed control linkage	9010-11
Visual inspection	9010-5
Electrical system testing	9015-1
Complete electrical schematic	9015-27
Complete electrical wiring diagram	9015-28
Component location	9015-31

Electrical system testing —Continued		
Diagnosing malfunctions	9015-3	
Precautions	9015-6	
Testing and adjustments	9015-8	
Accessory circuits	9015-21	
Air conditioning circuit	9015-25	
Instruments and indicators	9015-21	
Lighting circuit	9015-20	
Miscellaneous accessories	9015-23	
Return-to-dig circuit	9015-24	
Charging circuit	9015-16	
Starting circuit	9015-9	
Engine	0400-3	
Engine coolant heater	0505-5	
Engine cooling system	0510-1	
Engine oil cooler	9419-1	
Engine side shields	1910-5	
Evaporator	1830-24	
Exhaust manifold	0410-1	
Expansion valve, regulatory controls	1830-25	
External exhaust system	0530-1	
External fuel supply system	0560-1	
F		
Fan drive	0429-1	
Filters, loader	3160-6	
Final drive housing cover with gears and shaft	0250-5	
Fire extinguisher	2003-3	
Flywheel, housing and fasteners	0433-1	
Forward and reverse speed control, transmission	0315-7	
Control head	0315-8	
Control linkage	0315-10	
Frame bottom guards	1746-1	
Frames, loader	3140-1	
Front idler	0130-42	
Fuel filter	0420-1	
Fuel injection nozzles	0413-4	
Fuel injection pump	0413-1	
Fuel injection system	0413-1	
Fuel transfer pump	0421-1	
G		
General specifications	I-III-1	
Grille	1921-1	
Grille housing	1921-1	
H		
Heater blowers	1830-3	
Heater core	1830-2	
Heater hoses	1830-3	
Heating and air conditioning	9031-1	
Heater valve	1830-1	
Heating system	1830-1	
Heating system testing	9031-1	
High temperature switch	1830-29	
Hood	1910-3	
Hood or engine enclosures	1910-1	
Horn	2004-1	
Hydraulics, loader	3160-2	
Hydraulic system testing (analyzer)	9025A-1	
Hydraulic system		
testing (flow meter)	9025-1	
Component location	9025-25	
Diagnosing malfunction	9025-14	
General information	9025-2	
Operation	9025-4	
Schematic and block diagrams	9025-5	
Testing and adjustments	9025-17	
Auxiliary control valve lift check test	9025-18	
Boom control valve lift check test	9025-18	
Bucket control valve lift check test	9025-18	
Checking hydraulic pump flow	9025-19	
Checking hydraulic sump	9025-17	
Checking loader circuits for leaks	9025-18	
Checking oil lines and hoses	9025-17	
Circuit relief valves	9025-21	
Hydraulic cylinder leakage test	9025-17	
Visual inspection	9025-13	
Hydraulic system, ground conditioning tool	4260-1	
Hydrostatic system adjustments	9026-90	
Hydrostatic system brake valve	9026-28	
Hydrostatic system component location drawings	9026-135	
Hydrostatic system control circuit diagrams	9026-131	
Hydrostatic system diagnosing malfunctions	9026-31	
Hydrostatic system oil cooler bypass valve	9026-29	
Hydrostatic system testing	9026-1	
Hydrostatic transmission	0360-1	
Hydrostatic transmissions testing	9026-3	
Charge pump	9026-6	
Manifold valve assembly	9026-11	
Motor displacement control valve	9026-11	
Pump displacement control valve operation	9026-7	
Transmission bypass valve operation	9026-12	
Transmission operating pressure valve	9026-13	
I		
Input drive shafts and U-joints, transmission	0325-1	
Instrument and indicators	1676-1	

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com