


**John Deere
JD850
Crawler Bulldozer**

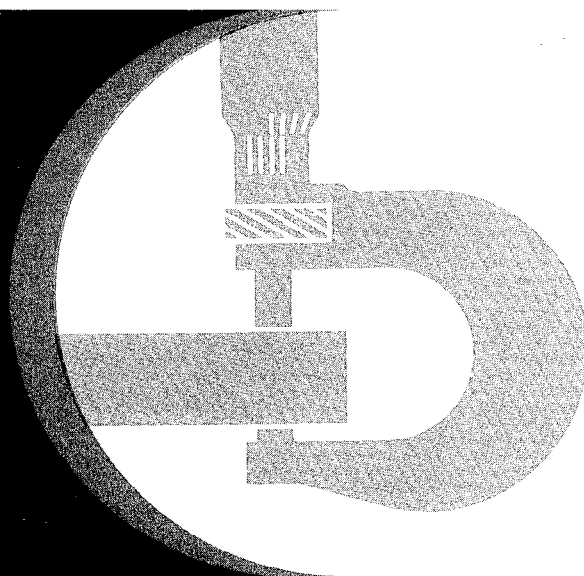

TECHNICAL MANUAL

**John Deere Dubuque Works
TM-1164 (Mar-86)**



Litho in U.S.A.

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0423 - Alternator and Generator Mounting
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply System
- Group 0599 - Specifications and Special Tools

SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housing and Covers
- Group 0851 - Gears, Shafts, Bearings
- Group 0899 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKE

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1160 - Hydraulic System
- Group 1199 - Specifications and Special Tools

SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar
- Group 1512 - Towbar

SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Supports and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

SECTION 32 - BULLDOZER

- Group 3201 - Blade
- Group 3215 - Controls Linkage
- Group 3240 - Frames
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

SECTION 40 - PTO OR WINCH DRIVE

- Group 4041 - Housing and Covers

SECTION 42 - GROUND CONDITIONING TOOL

- Group 4215 - Controls Linkage
- Group 4260 - Hydraulic System

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing and Operational Checkout Procedure
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9026 - Hydrostatic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

After-sale inspection	I-IV-18 - I-IV-32
Air cleaner	I-IV-22
Air intake hose	I-IV-22
Alternator-fan compressor	
belt tension	I-IV-22
Batteries	I-IV-28
Cab air filter	I-IV-28
Charging system	I-IV-31
Engine coolant conditioner	
filter	I-IV-24
Engine crankcase oil and	
filter element	I-IV-19
Final drive housing oil level	I-IV-21
Fluid leakage	I-IV-32
Fuel tank sump	I-IV-24 - I-IV-25
Hydraulic brake (park brake)	I-IV-31
Hydraulic oil level	I-IV-20
Hydrostatic transmission	
oil level	I-IV-20
Indicator lights and gauges	I-IV-29 - I-IV-30
Lubrication	I-IV-27 - I-IV-28
Radiator coolant level	I-IV-24
Splitter gearbox oil level	I-IV-21
Track shoe cap screws	I-IV-27
Track tension adjustment	I-IV-25 - I-IV-26
Air conditioning relay	1674-4
Air conditioning system	1830-5 - 1830-30
Blower motor	1830-29
Components	1830-30
Compressor	1830-5 - 1830-20
Compressor relief valve	1830-26
Condenser	1830-21 - 1830-22
Evaporator	1830-24
Expansion valve	1830-25
High temperature switch	1830-28
Receiver - dryer	1830-23
Superheat shut-off switch	1830-27
Thermal fuse	1830-27
Thermostatic temperature control	
switch	1830-25 - 1830-26
Air conditioning system testing	9031-2 - 9031-19
Component location	9031-2 - 9031-3
Diagnosing malfunctions	9031-8
Diagnosis flow chart	9031-10
Operational diagnostic chart	9031-9
Safety precautions	9031-11
Schematic	9031-11

Air conditioning system testing—Continued

System service	9031-12 - 9031-19
Adding refrigerant - 12 to	
system	9031-18
Charging system	9031-16 - 9031-17
Discharging system	9031-14
Electrical testing	9031-14
Evacuating system	9031-15
Flushing system components	9031-19
Inspecting refrigerant	
hoses and tubing	9031-20
Leak testing	9031-19
Operational test	9031-14
Purging the system	9031-20
Pressure gauges	9031-12 - 9031-13
Visual operating checks	9031-7
Visual preliminary checks	9031-7
Air intake system, engine	0520-1 - 0520-2
Air restriction indicator	1676-2
Alarm, reverse warning	2004-2
Alternator and generator	
mounting	0423-1
Alternator, 16 amp	1672-2 - 1672-13
Components	1672-4
Test after assembly	1672-13
Alternator, 50 amp	1672-14 - 1672-26
Components	1672-16
Automatic control valve shut-	
off valve control	0315-15 - 0315-16
Automatic control valve variable	
orifice linkage	0315-12 - 0315-13
Auxiliary control linkage	4215-3 - 4215-6
Axle shaft, bearings, and	
reduction gears	0250-1 - 0250-18
Components	0250-1
Final drive housing cover with	
gears and shafts	0250-12 - 0250-18
Planet housing with pinions and	
shafts	0250-2 - 0250-11
Axles and suspension systems:	
Axle shaft, bearings and reduc-	
tion gears	0250-1 - 0250-18
Drive axle housing and support	0201-3 - 0201-6

B

Batteries, support and cables	1671-3 - 1671-7
Charging battery	1671-7
Inspection	1671-4 - 1671-5
Testing	1671-5 - 1671-6
Battery disconnect switch	1674-2
Blades, bulldozer	3201-3 - 3201-5

Block, cylinder 0404-1 - 0404-6
Blower motor 1830-29
Brake valve 1160-1 - 1160-4
Brakes, parking-emergency:
 Active elements 1111-3 - 1111-5
 Controls linkage 1115-1 - 1115-2
 Hydraulic system 1160-1 - 1160-4
Brush shields 1910-6
Bulldozer:
 Blades 3201-3 - 3201-5
 Controls linkage 3215-1 - 3215-2
 Frames 3240-1 - 3240-5
 Hydraulic system 3260-1 - 3260-21
 Control valve 3260-7 - 3260-12
 Components 3260-9 - 3260-10
 Cylinders 3260-13 - 3260-21
 Dozer pump 3260-1 - 3260-4
 Reservoir and filters 3260-5 - 3260-6
Bypass valve, transmission 0360-38 - 0360-39

C

Cab 1810-3 - 1810-6
Cab relay 1674-4
Camshaft and valve actuating
 means 0402-1 - 0402-4
Carrier rollers 0130-4 - 0130-6
Center frame 1740-5
Chain, track 0130-14 - 0130-23
Cigar lighter 2006-1
Circuit breakers 1674-5
Charge pump 0360-31 - 0360-32
Clutch disconnect and controls 0370-1 - 0370-6
 Clutch elements 0370-3 - 0370-6
 Controls 0370-1 - 0370-2
Cold weather starting aids 0505-3 - 0505-5
 Engine coolant heater 0505-5
 Starting aid adapter, line
 and nozzle 0505-4
 Starting aid solenoid 0505-3 - 0505-4
 Starting aid switch 0505-4
Component location:
 Air conditioning system 9031-2 - 9031-3
 Electrical system 9015-2 - 9015-5
 Engine system 9010-2 - 9010-4
 Heating system 9031-2 - 9031-3
 Hydraulic system (flow meter) 9025-3
 Power train system 9020-2 - 9020-3
Compressor 1830-5 - 1830-20
Compressor relief valve 1830-26
Condenser 1830-21 - 1830-22
Connecting rods and pistons 0403-1 - 0403-6
Control valve, bulldozer 3260-7 - 3260-12
Controls linkage, bulldozer 3215-1 - 3215-2
Coolant filter/conditioner 0510-1 - 0510-3

Cooling systems, engine 0510-1 - 0510-3
Cover, PTO 4041-3
Cowl 1910-4
Crankshaft and main bearings 0401-1 - 0401-7
Crossbar and support 0130-11 - 0130-12
Cylinder block 0404-1 - 0404-6
Cylinder, bulldozer 3260-13 - 3260-21
Cylinder head and valves 0409-1 - 0409-6
Cylinder, track adjuster 0130-30 - 0130-32

D

Delco-Remy starting motor 0422-1 - 0422-10
Delivery service I-IV-18
Diagnosing malfunctions:
 Air conditioning system 9031-8
 Electrical system 9015-8 - 9015-10
 Engine system 9010-5 - 9010-7
 Heating system 9031-1
 Hydraulic system (flow meter) 9025-19 - 9025-21
 Power train system 9020-10 - 9020-11
 Track 9030-1
Double selector valve 4260-1 - 4260-2
Dozer - see bulldozer
Dozer pump 3260-1 - 3260-4
Drawbar 1511-3
Drive axle housing and support 0201-3 - 0201-6

E

Electrical sensing gauges and
 indicators 1676-4 - 1676-6
Electrical system testing 9015-1 - 9015-32
 Block diagram 9015-6
 Component location 9015-2 - 9015-5
 Diagnosing malfunctions 9015-8 - 9015-10
 Precautions 9015-11 - 9015-12
 Schematic 9015-7, 9015-31
 Testing and adjustments 9015-13 - 9015-30
 Visual inspection 9015-12
 Wiring diagram 9015-7, 9015-32
Electrical systems:
 Alternator, regulator and
 charging system wiring 1672-1 - 1672-26
 Batteries, support and cables 1671-3 - 1671-7
 Instruments and indicators 1676-1 - 1676-6
 Lighting system 1673-1 - 1673-2
 Wiring harness and switches 1674-1 - 1674-6
Engine:
 Alternator and generator
 mounting 0423-1
 Camshaft and valve actuating
 means 0402-1 - 0402-5
 Connecting rods and pistons 0403-1 - 0403-7
 Crankshaft and main bearings 0401-1 - 0401-7
 Cylinder block 0404-1 - 0404-7

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com