

# **1200 Bunker and Field Rake**

For complete service information also see:

**John Deere K Series Air Cooled  
Engines . . . . . CTM5**

**John Deere Horicon Works  
TM1525 (27SEP91)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**N** This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, other materials needed to do the job and service parts kits.

Section 10, Group 15—Repair Specifications, consist of all applicable specifications, near tolerances and specific torque values for various components on each individual machine.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

# Contents

## SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Repair Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Attachments

## SECTION 20—ENGINE REPAIR

- Group 05—Engine—FE290
- Group 10—Muffler

## SECTION 30—FUEL AND AIR REPAIR

- Group 05—Fuel System
- Group 10—Air System

## SECTION 40—ELECTRICAL REPAIR

- Group 05—Battery and Cables
- Group 10—Electrical System Components
- Group 15—Wiring Harness

## SECTION 50—POWER TRAIN REPAIR

- Group 05—Wet Reduction Clutch
- Group 10—Drive Belt and Clutches
- Group 15—Control Linkage
- Group 20—Transaxle
- Group 25—Drive Axles

## SECTION 60—STEERING AND BRAKE REPAIR

- Group 05—Steering System Repair
- Group 10—Brake Repair

## SECTION 70—HYDRAULIC REPAIR

- Group 05—Lift System Repair

## SECTION 80—MISCELLANEOUS REPAIR

- Group 05—Hoods and Panels
- Group 10—Wheels and Bearings
- Group 15—Rake Assembly
- Group 20—40 Inch Front Blade Assembly
- Group 25—Cultivator Assembly

## SECTION 210—TEST & ADJUSTMENT SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURES

- Group 05—Test & Adjustment Specifications
- Group 10—Operational Checkout Procedures

## SECTION 220—ENGINE OPERATION, TESTS & ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 230—FUEL/AIR OPERATION, TESTS & ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 240—ELECTRICAL OPERATION, TESTS & ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments
- Group 20—Wiring Schematics

## SECTION 250—POWER TRAIN OPERATION, TESTS & ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 260—STEERING & BRAKES OPERATION, TESTS & ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 270—HYDRAULIC SYSTEM OPERATION, TESTS & ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1525-19-27SEP91

COPYRIGHT© 1991  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual

Contents

Group 20—Hydraulic Schematic

10

Index

20

30

40

50

60

70

80

210

220

# Section 10 GENERAL INFORMATION

## Contents

### Page

**Group 05—Safety** . . . . . 10-05-1

### **Group 10—General Specifications**

#### Specifications

Machine . . . . . 10-10-1

Attachment . . . . . 10-10-2

### **Group 15—Repair Specifications**

#### Specifications

Repair . . . . . 10-15-1

Tune-Up . . . . . 10-15-5

Tune-Up Adjustments . . . . . 10-15-6

#### Service Recommendations For O-Ring

Boss Fittings . . . . . 10-15-7

Metric Cap Screw Torque Values . . . . . 10-15-8

Inch Cap Screw Torque Values . . . . . 10-15-9

### **Group 20—Fuel and Lubricants**

Fuel . . . . . 10-20-1

Storing Fuel . . . . . 10-20-1

Gasoline Engine/Wet Clutch Oil . . . . . 10-20-2

Transaxle Oil . . . . . 10-20-2

#### Extreme Pressure or Multipurpose

Grease . . . . . 10-20-3

Lubricant Storage . . . . . 10-20-3

Alternative Lubricants . . . . . 10-20-3

### **Group 25—Serial Number Locations**

Serial Numbers . . . . . 10-25-1

Product Identification Number Location . . . . . 10-25-1

#### Serial Number Location

Engine . . . . . 10-25-1

Transaxle . . . . . 10-25-1

Hydraulic Pump . . . . . 10-25-2

### **Group 30—Features and Attachments**

Features and Attachments . . . . . 10-30-1

#### Features

Machine . . . . . 10-30-1

Engine . . . . . 10-30-2

Power Train . . . . . 10-30-3

Electrical System . . . . . 10-30-4

Rake . . . . . 10-30-4

Optional Attachments and Kits . . . . . 10-30-5

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)