

TM113019 - Z425, Z435, Z445, and Z465 EZtrak Mower (S.N. 100001-) Remove and Install Upper Blower Housing (ELS)

Remove and Install Upper Blower Housing (ELS)




MXT003955-UN: Screen Tabs

LEGEND:

A - Screen Tabs

Remove:

1. Press inward on the stationary screen tabs (A) and remove the stationary screen.
 2. Remove air cleaner cover and air cleaner elements.
-

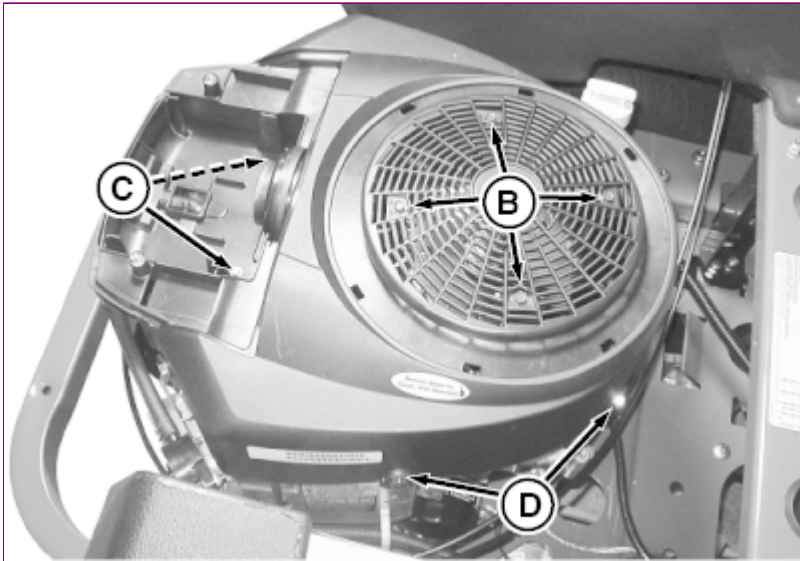

3. MXT003956-UN: Engine guards removed for clarity.

LEGEND:

- B - Screw
- C - Screw
- D - Screw

Remove 4 screws (B) securing the rotating screen to the fan.

4. Remove 2 screws (C) holding the upper blower housing to the air intake.
5. Loosen the 6 screws (D) (3 on each side) holding the upper blower housing to the engine block.
6. Remove upper blower housing.

Install:

1. **IMPORTANT:**

Upper blower housing must be assembled so that the slot in the blower housing aligns with the ridge in the air intake. Failure to assemble correctly will prevent the air filter from sealing and cause engine damage.


Install in reverse order of removal.

2. Tighten screws to specification.

Item	Measurement	Specification
Blower Housing Screws	Torque	9 N·m (80 lb.-in.)

TM113019 - Z425, Z435, Z445, and Z465 EZtrak Mower (S.N. 100001-) Remove and Install Upper Blower Housing (Cyclonic)

Remove and Install Upper Blower Housing (Cyclonic)

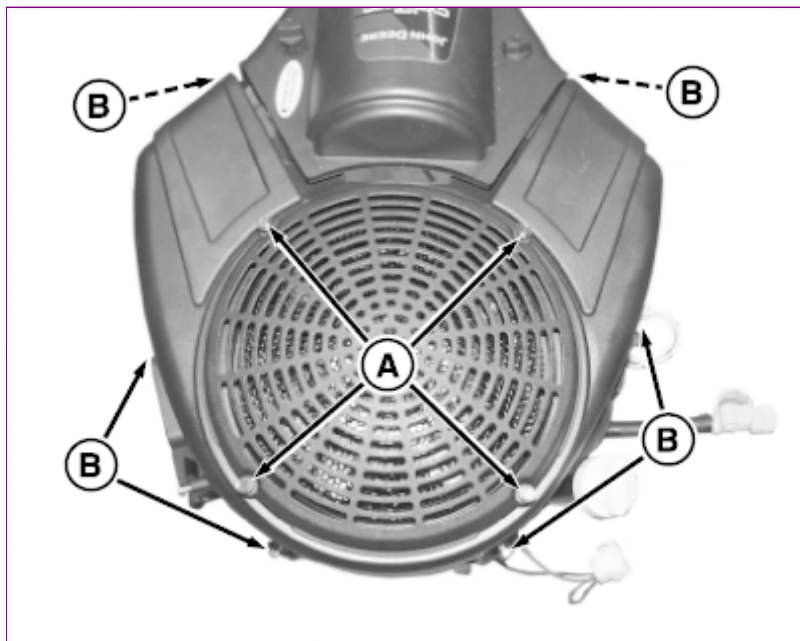


MXT005056-UN: Stationary Screen

LEGEND:

- A - Screws
- B - Screws

Remove:

1. Remove four screws (A) holding the stationary screen and remove screen.
 2. Loosen the six screws (B) (three on each side) holding the upper blower housing to the engine block.
-

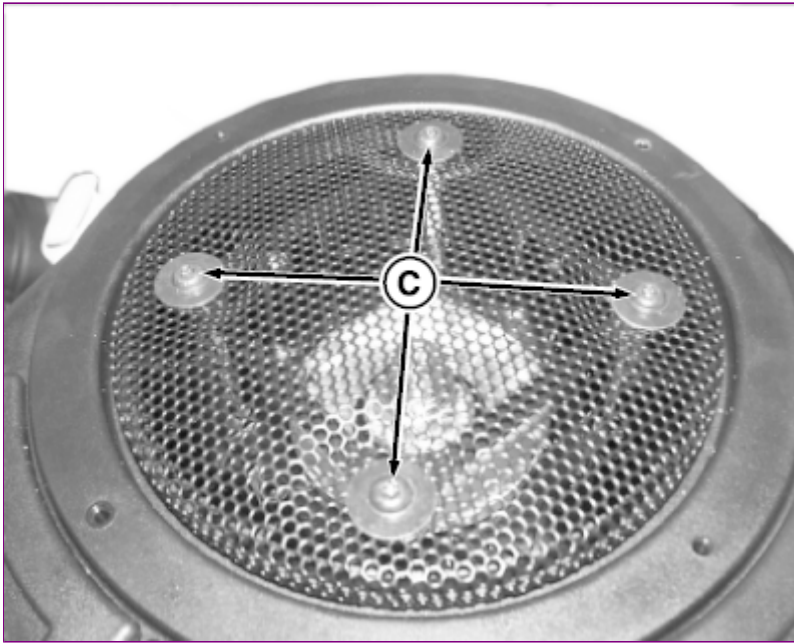

3. MXT005057-UN: Rotating Screen

LEGEND:

C - Screws

Remove four torx head screws (C) and remove the rotating screen.

4. Remove air cleaner cover and air cleaner element.
5. Remove oil cooler from blower housing.
6. Remove fuel pump from blower housing.
7. Remove two screws holding the upper blower housing to the air intake.
8. Remove upper blower housing.

Install:

IMPORTANT:


Avoid Damage! Upper blower housing must be assembled so that the slot in the blower housing aligns with the ridge in the air intake. Failure to assemble correctly will prevent the air filter from sealing and cause engine damage.

1. Install in reverse order of removal.
2. Tighten screws to specification.

Item	Measurement	Specification
Blower Housing Screws	Torque	9 N·m (80 lb.-in.)

TM113019 - Z425, Z435, Z445, and Z465 EZtrak Mower (S.N. 100001-) Remove Two Barrel Carburetor

Remove Two Barrel Carburetor

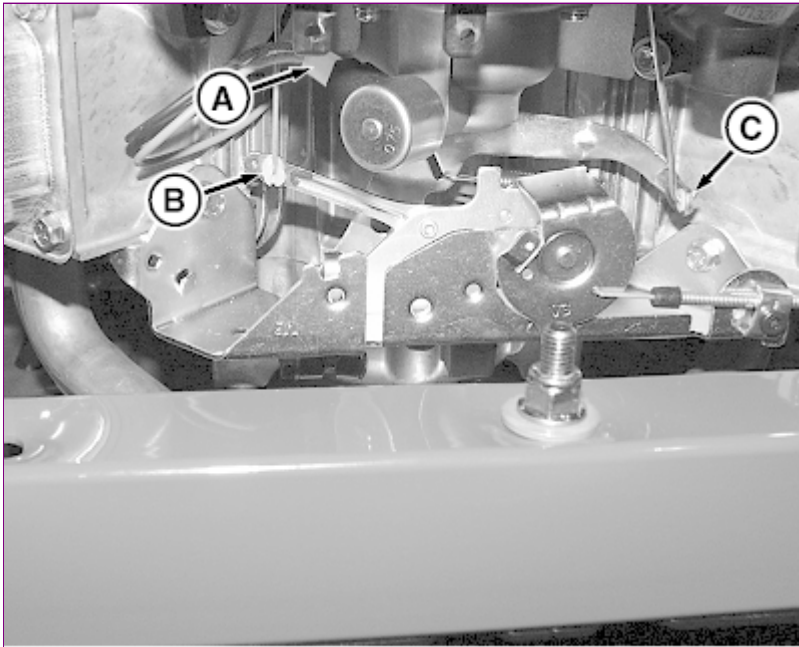

MXT003957-UN: Fuel Shutoff Solenoid

LEGEND:

- A - Fuel Shutoff Solenoid
- B - Choke Link
- C - Throttle Link

1. **NOTE:**

Cyclonic carburetor shown. ELS carburetor similar.

Remove upper blower housing.

2. Disconnect fuel shutoff solenoid (A) and choke link (B). Throttle link (C) can be unhooked when carburetor and intake manifold are being removed.

3. _____
-



Fuel vapors are explosive and flammable:

- ***Do not smoke while handling fuel.***
- ***Keep fuel away from flames or sparks.***
- ***Shut off engine before servicing.***
- ***Cool engine before servicing.***

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com