

Walk-Behind Snowblowers

TECHNICAL MANUAL

**John Deere
Lawn & Grounds Care Division**

TM1234 (Jul-81)

WALK-BEHIND SNOW BLOWERS

Technical Manual

TM-1234

TABLE OF CONTENTS

SECTION 10 - GENERAL

- Group 05 - Machine Identification
- Group 10 - Specifications
- Group 15 - Fuel and Lubricants

SECTION 20 - ENGINE

- Group 05 - General Information
- Group 10 - Minor Tune-Up
- Group 15 - Cylinder Head, Valves, and Breather
- Group 20 - Internal Components
- Group 30 - Recoil Starter
- Group 40 - Specifications

SECTION 30 - FUEL SYSTEM

- Group 05 - General Information
- Group 10 - Carburetor

SECTION 40 - ELECTRICAL SYSTEM

- Group 05 - Magneto Ignition System
- Group 10 - Cranking System
- Group 15 - Safety-Start System

SECTION 50 - POWER TRAIN

- Group 05 - Belt Care and Maintenance
- Group 10 - Power Train Repair
- Group 15 - Blower and Auger Drive Repair

SECTION 60 - SPECIAL SERVICE TOOLS

- Group 05 - Convenience Service Tools

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1981
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION

M23:00A 060581

Section 10

MACHINE IDENTIFICATION

CONTENTS

GROUP 05 - MACHINE IDENTIFICATION

Machines Covered in This Manual05-1
Machine Serial Numbers05-1
Engine Serial Numbers05-2
Engine Horsepower and Model Number05-2

GROUP 15 - FUEL AND LUBRICANTS

Fuel and Lubricants15-1
Grease Fitting Locations15-3

GROUP 10 - SPECIFICATIONS

Engine Horsepower and Model Number10-1
Engine Identification10-1
Machine Engine Model Numbers10-1
Tune-up Specifications10-2
Engine Specifications10-3
Bolt Torque Chart10-5
Set Screw Seating Torque Chart10-5

MACHINES COVERED IN THIS MANUAL

This technical manual contains service and maintenance information for the 526, 726, 732, 826, 832 and 1032 Snow Blowers.

The manual is divided into sections. Each section covers components or systems. The information is divided into groups within each section.

CAUTION: This safety alert symbol identifies important safety messages. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.


NOTE: Metric equivalents have been included throughout this technical manual.

M23;1005 B 060581

MACHINE SERIAL NUMBERS

Each machine is assigned an individual serial number. The serial number plate is located on the engine frame housing. The illustration at the right shows a typical serial number plate for machines manufactured before 1974. On machines built after 1973, this number consists of 13 characters (Example: P826L 190001). The first letter indicates the family of machine. The next three characters indicate the model or machine designation. The letter in the fifth position indicates the model year. This is followed by a space, a six-digit serial number, and an "M" denoting Horicon as the factory manufacturer.

When ordering parts, use only the six-digit serial number. Use all 13 characters when filling out warranty claims.

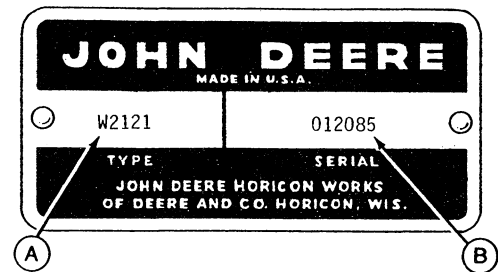


A—Engine Serial Number
B—Engine Model Number

0A8;M25931 M23;1005 C 070581

Machine Identification

ENGINE SERIAL NUMBERS

The engine serial number on early model snow blowers is on a serial number plate on the blower housing or crankcase.

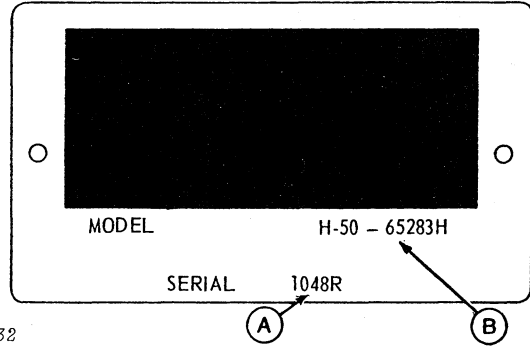

A—Engine Serial Number
B—Engine Model Number

M25932

0A8;M25932 M23;1005 D 080581

The engine serial number on later model snow blowers is stamped in the top of the engine blower housing.

Record the model and serial number on all warranty claims.

(A)
(B)
↓
↓
H50-65392K SER 4028D

A—Engine Model Number
B—Engine Serial Number

0A8;M25933 M23;1005 E 080581

ENGINE HORSEPOWER AND MODEL NUMBER

Snow Blower	Horsepower	Engine Model No.
526	(3.7 kw) 5	H50 Snow King
726	(5.2 kw) 7	H70 Snow King
732	(5.2 kw) 7	H70 Snow King
826	(6.0 kw) 8	H80 Snow King
832	(6.0 kw) 8	H80 Snow King
1032	(7.5 kw) 10	HM100 Snow King

M23;1010 A 080581

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com