

8560
(P.I.N. 003101-)

8760
(P.I.N. 005101-)

8960
(P.I.N. 004101-)

Tractors

John Deere Waterloo Works
OMAR111204 Issue A2
(Mark old manual OMAR110222G1 for
machines up to Serial No. above.)
North American Version
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT AND LEFT sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW19971
-JUN-10OCT91

RX,IFC,1114WD -19-02OCT91

Contents

	Page		Page
Safety	05-1	12-Speed Syncro and 24-Speed POWRSYNC® Transmission	45-2
Safety Signs	10-1	Power Shift Transmission	45-6
Controls and Instruments		Three-Point Hitch	
Control Location	15-1	Component Identification	50-1
Instrument Identification	15-3	Hitch Control Lever	50-1
Gauges and Indicators Description	15-3	Sway Blocks	50-8
Tachometer	15-7	Attaching Implement Hitch	50-8
Performance Monitor	15-10	Adjusting Implement Level	50-10
Radar Sensor	15-16	Removing Implement	50-11
Lighting and Signals		Remote Hydraulic Cylinders	
Switch	20-1	Hose Tips	55-1
Lamps and Signals	20-1	Identifying SCV	55-2
Electrical Outlets	20-4	Connecting Cylinder Hoses	55-3
Load Center	20-6	Operating SCV	55-5
Operator's Station		Setting Remote Cylinder Stroke	55-7
SOUND-GARD® Body Temperature		Disconnecting Cylinder Hoses	55-8
Controls	25-1	Drawbar and PTO	
Window Wipers	25-3	Drawbar Adjustments	60-1
Windows	25-3	Power Take-Off (PTO)	60-3
Radio	25-4	Ballast	
Seat	25-7	Importance of Ballast	65-1
Steering Wheel	25-10	Measuring Wheel Slip	65-2
Engine Break-in	30-1	Determining Ballast	65-5
Prestarting Checks	35-1	Wheels, Tires, and Treads	
Operating the Engine		Wheel Tightening	70-1
Start-up Procedures	40-1	Tread Width Limitations	70-3
Cold Weather Starting	40-4	Adjusting Tread Width (Steel)	70-7
Starting Aids	40-5	Adjusting Tread Width (Cast)	70-9
Warm-up and Operation	40-7	Steering Stops	70-11
Stopping the Engine	40-10	Inflation Pressure	70-12
Operating the Tractor		Transporting	
Brakes	45-1	Driving	75-1
Differential Lock	45-1	Carrier	75-3
		Towing	75-4

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR111204 A2-19-04DEC91

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Fuels, Lubricants, and Coolant		Electrical	140-21
Fuel	80-1	Fuses	140-26
Engine Oil	80-4	Lighting	140-27
Coolant	80-5	Brakes	140-32
Transmission/Hydraulic Oil	80-7	Heating	140-35
Lubricants	80-8	Air Conditioner	140-36
Lubricant Storage	80-9	Rollover Protective Structure	140-39
Lubrication and Maintenance/10 Hour	85-1	Storage	
 		Placing Tractor in Storage	145-1
Lubrication and Maintenance/After 100 Hours	90-1	Removing Tractor From Storage	145-3
Lubrication and Maintenance/250 Hours	95-1	Crime Prevention Tips	150-1
Lubrication and Maintenance/500 Hours	100-1	Specifications	
 		General	155-1
Lubrication and Maintenance/750 Hours	105-1	Ground Speeds	155-4
Lubrication and Maintenance/1000 Hour	110-1	Identification Numbers	
 		Identification Plates	160-1
Lubrication and Maintenance/1500 Hour	115-1	 	
 		Daily Maintenance	165-1
Lubrication and Maintenance/Annually	120-1	 	
 		Lubrication and Maintenance Records	170-1
Lubrication and Maintenance/2 Year	125-1	 	
 		Index	
Lubrication and Maintenance/As Required	130-1		
Troubleshooting			
Engine	135-1		
Transmission	135-4		
Drive Line	135-4		
Hydraulic System	135-5		
Brakes	135-6		
Axles	135-6		
3-Point Hitch and Quick-Coupler	135-7		
Remote Hydraulic Cylinders	135-9		
Electrical	135-10		
SOUND-GARD® Body	135-12		
Service			
Access	140-1		
Air Cleaner	140-3		
Fuel System	140-6		
Cooling System	140-11		
Belts	140-17		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

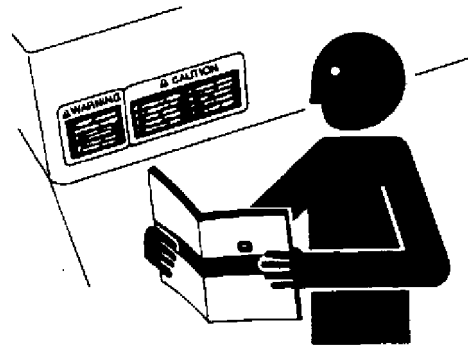

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com