

**8100, 8200, 8300
and 8400 Tractors
(P.I.N. 10,001—)**

**John Deere Waterloo Works
OMAR116936 Issue J7
(This manual replaces OMAR116936 L6)
European Edition
LITHO IN U.S.A.
ENGLISH**

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere Dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.



RW75068
-UN-17JUN96

RX8000E,IFCA -19-03JUL96



John Deere Waterloo Works

Deere Customer:

Congratulations on the purchase of your John Deere tractor and, if you are a new customer, welcome to the John Deere family. We believe you will find your new tractor meets your expectations.

Of course, the tractor is just one aspect of the John Deere ownership experience. A great deal of your satisfaction also depends on the performance of the people who represent the care and service of John Deere products. From your dealer sales representative, to the service department, to the parts department, the people of John Deere will strive to make your ownership experience truly exceptional.

This operator's manual provides information for the safe operation of your tractor. Recommendations for service and maintenance are also included.

The Technical Publications Group, and the entire team at John Deere Waterloo Works, would like to confirm our commitment to your satisfaction. Our goal is to assure your John Deere tractor brings you many years of satisfactory service.

Technical Publications
John Deere Waterloo Works

Contents

Page	Page		
Safety	05-1	Break-In Period	
Safety Signs	10-1	Break-In Check	
Controls and Instruments		First 100 Hours	30-1
Front Console	15-1	After First 100 Hours	30-2
Corner Post Display	15-1	Tighten Wheel Bolts	30-2
Side Console	15-2	Operating the Engine	
Armrest Controls	15-2	Emissions	35-1
Vehicle Monitor	15-4	Pre-Starting Checks	35-1
Display Functions	15-6	Starting the Engine	35-2
Calibrating Tire Size	15-7	Restarting Stalled Engine	35-3
Calibrating Radar	15-8	Stopping the Engine	35-3
Performance Monitor	15-9	Field Cruise	35-4
Lights		Cold Weather Starting	35-5
Operating Lights	20-1	Auxiliary Heaters	35-6
Operating Turn Signals, Horn and Hi/Low Beam	20-4	Operating the Tractor	
Seven-Terminal Outlet	20-5	Avoid Contact with Pesticides	40-1
Nine-Terminal Connector	20-5	Operating Transmission	40-2
Operator Station		PTO Load Compensation	40-7
Adjusting Air Suspension Seat	25-1	Mechanical Front-Wheel Drive	40-11
Secondary Hand Brake	25-2	Differential Lock	40-12
Controlling Air Flow	25-2	Brakes	40-12
Operating Windshield Wiper	25-4	Trailer Hydraulic Brakes	40-12
Adjusting Steering Wheel	25-5	Trailer Air Brakes	40-13
Setting the Clock	25-5	Chock Block	40-13
Field Office	25-6	Rear Three-Point Hitch	
Accessory Electrical Outlets	25-7	Hitch Components	45-1
Auxiliary Power Strip	25-8	Hitch Controls	45-1
Installing Mobile Radio and Antenna	25-9	Using External Raise/Lower Switch	45-5
Emergency Exit	25-13	Adjusting Quick-Coupling Draft Links	45-6
Passenger Seat	25-14	Attaching Implement to Hitch	45-7
Electrical Rear View Mirror	25-15	Using Correct Hitch Category	45-8
Adjusting or Removing Step	25-16	Detaching Implement from Hitch	45-9
		Adjusting Center Link	45-11
		Adjusting Lift Links	45-11
		Using Sway Blocks	45-12
		Stabilizing System	45-13
		Converting Hitch Category	45-14

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR116936 J7-19-16SEP97

COPYRIGHT© 1997
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996 Deere & Company

Contents

	Page		Page
Trailer Hitch	45-14	Adjusting Fenders	75-12
Pickup Hitch	45-14	Adjusting Rear Wheels	75-13
Changing Pickup Hitch Hook	45-16	Rear Wheel Tread Setting Ranges	75-14
 TouchSet Depth Control		 Transport	
TouchSet Depth Control	50-1	Driving Tractor on Roads	80-1
Enabling System	50-1	Towing Loads	80-2
Attaching Implement	50-3	Towing Tractor	80-3
Checking Depth Control Operations with Depth Control System	50-3	Freeing a Mired Machine	80-6
Detaching Implement	50-5	Transporting on Carrier	80-7
Restoring SCV Control	50-5	 Fuels, Lubricants, and Coolant	
 Hydraulics and Selective Control Valves		Fuel	85-1
Using Tractor Hydraulics	55-1	Diesel Engine Oil	85-3
Cylinder Hoses	55-2	Engine Coolant	85-4
SCV Touchset Controls and Monitor	55-4	Transmission and Hydraulic Oil	85-6
 Remote Hydraulic Connections		Power Shift Transmission Recalibration	85-6
Hydraulic Component Identification	60-1	MFWD Axle Housing Oil	85-7
Using Hydraulic Motor Return	60-3	MFWD Wheel Hub Oil	85-7
Power-Beyond	60-5	Grease	85-8
Examples Using Load-Sensing Hydraulic System	60-6	 Service	
Cylinder Stop	60-15	Service Intervals	90-1
 Drawbar and PTO		Front Grille	90-1
Drawbar	65-1	Side Shields	90-2
PTO	65-3	Hood	90-3
 Optimum Performance/Ballast		Hose Clamps	90-3
General Performance Guidelines	70-1	Batteries	90-4
Ballasting for PTO Horsepower	70-2	High-Pressure Washers	90-4
Controlling Power Hop	70-3	Compressed Air	90-5
Measuring Wheel Slip	70-5	Service Interval Chart	90-7
Determining Maximum Ballast	70-6	 Service/Daily or Every 10 Hours	
Liquid Ballast	70-7	Engine Oil Level	95-1
Using Rear Cast Iron Weights	70-9	Coolant Level	95-1
Installing Quik-Tatch™ Weights	70-10	Water Separator	95-2
 Wheels, Tires, and Treads		Transmission-Hydraulic Oil Level	95-2
General Wheel, Tire, and Tread Guidelines	75-1	MFWD Axle	95-3
Tire Inflation Pressure	75-2	Three-Point Hitch and Lift Links	95-3
Tire Combinations	75-5	Tires	95-4
Tightening Wheel Bolts	75-6	Trailer Air Brake Accumulator	95-4
Toe-In	75-7	 Service/250 Hours	
Tread Settings	75-8	Engine Oil and Filter	100-1
Steering Stops	75-10	Manual Brakes	100-2
		Batteries	100-3
		Fuel Tank Sump	100-5
		Bolts	100-5
		Neutral Start System	100-5
		Park Brake System	100-6

Continued on next page

Contents


	Page		Page
Secondary Brake Reservoir	100-6	Load Center Fuses	130-21
Operator Enclosure Air Filter	100-7	Load Center Relays and Diodes	130-22
MFWD Axle	100-7	Service Air Conditioner	130-23
Rear Window Hinge	100-8	Alternator	130-24
Pickup Hitch	100-9		
Trailer Hitch	100-9	Troubleshooting	
Service/750 Hours		Engine	135-1
Transmission/Hydraulic Filter Element	105-1	Transmission	135-5
Air Intake System	105-1	Hydraulic System	135-6
Engine Idle Speeds	105-2	Brakes	135-6
Fuel Tank Vent Filter	105-2	Hitch	135-7
		TouchSet Depth Control	135-8
Service/1500 Hours		Hydraulics/Selective Control Valve	135-9
Transmission-Hydraulic Oil	110-1	Electrical System	135-10
Clean Oil Reservoir	110-2	Operator Enclosure	135-12
Transmission Filter Screen	110-2	Tractor Operation	135-13
Hydraulic Oil Suction Screen	110-2		
MFWD Hub and Axle Housing Oil	110-3	Diagnostic Codes	140-1
Fuel Injection Nozzles	110-3		
Draft Link Support Shaft Bushing	110-4	Storage	145-1
Belt Tensioner	110-4		
		Specifications	150-1
Service/2000 Hours		Identification Numbers	155-1
Engine Valve Clearance	115-1		
		Lubrication and Maintenance Charts	160-1
Service/Annual			
Air Cleaner Elements	120-1	Glossary	165-1
Service/Two Years		Index	
Cooling System Service	125-1		
Service/As Required			
Transmission/Hydraulic Filter Element	130-1		
Fuel System Pressure	130-1		
Fuel Prefilter	130-2		
Water Separator	130-3		
Fuel Filter	130-4		
Fuel System	130-5		
Thermostats	130-6		
Brake Bleed	130-7		
Hydraulic Trailer Brake Bleed	130-8		
Secondary Brake Bleed	130-8		
Primary Element	130-11		
Alternator Belt	130-12		
Fan Belt	130-13		
Lights/Bulbs	130-14		
Headlights	130-19		
Fuses and Relays	130-20		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

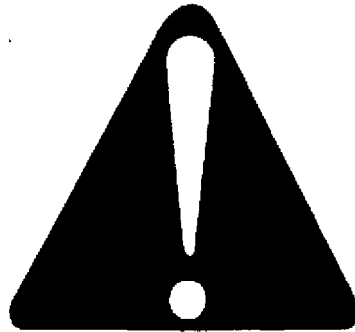

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

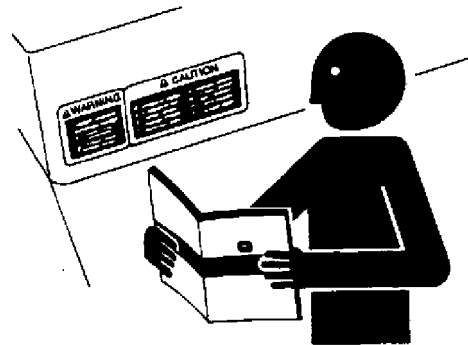


DX,READ -19-03MAR93


TS201 -UN-23AUG88



OPERATING THE TRACTOR SAFELY

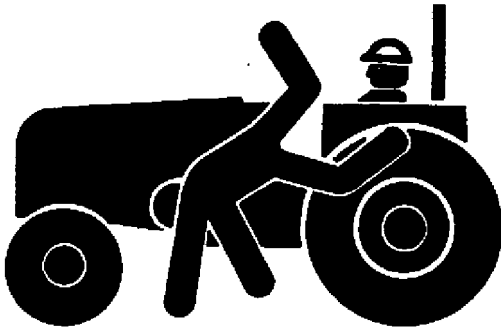

TS213 -JUN-23AUG88

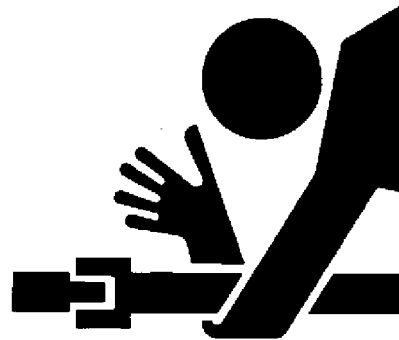

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95




PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

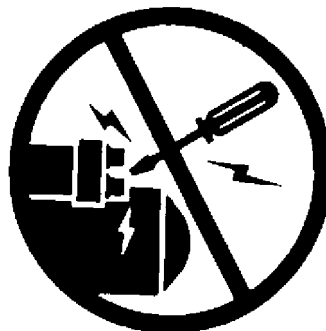

DX,BYPAS1 -19-03MAR93


TS177 -UN-11JAN89

STOPPING AND PARKING TRACTOR

Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

- Signal before stopping, turning, or slowing down on public roads
- Pull over to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Remove key

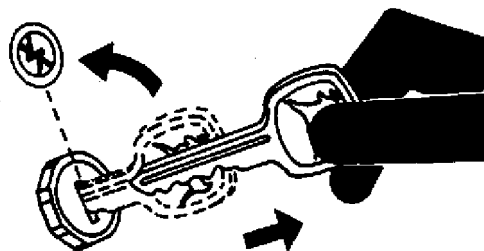

RX,STOP,PARK -19-21SEP92

TS230 -UN-24MAY89

USE SEAT BELT

Use a seat belt to minimize chance of injury from an accident such as a roll-over.



RX,ROPS1 -19-22SEP92


RW16064 -UN-05JAN89



KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

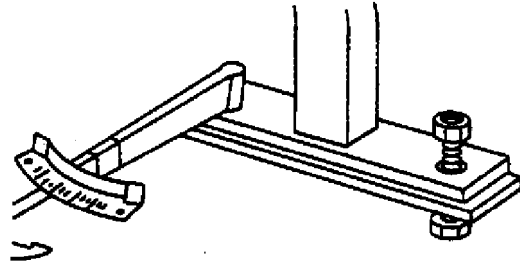

DX,ROPS3 -19-03MAR93


-UN-23AUG88
TS212

USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.

Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

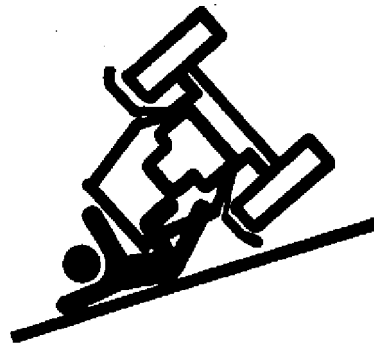


RX,HILL,SIDE1 -19-22SEP92

-UN-07DEC88
RW13093

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

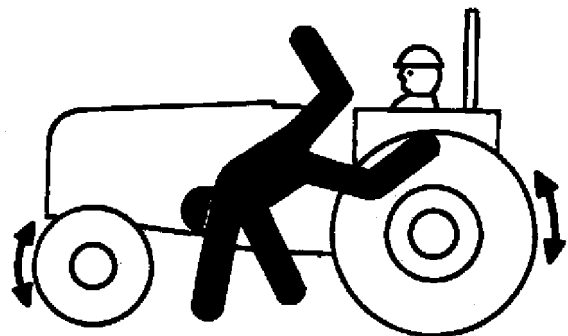


DX,RIDER -19-03MAR93

-UN-23AUG88
TS290



AVOID EYE CONTACT WITH RADAR

Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

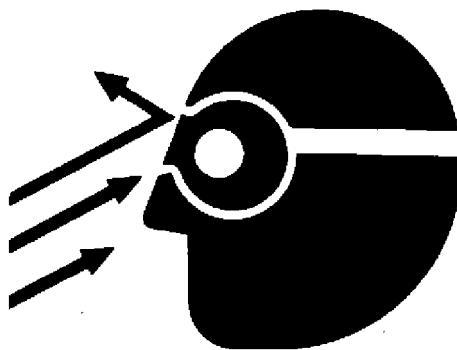


RX,SAFTY,RADAR1-19-21SEP92

TS266
-UN-23AUG88

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

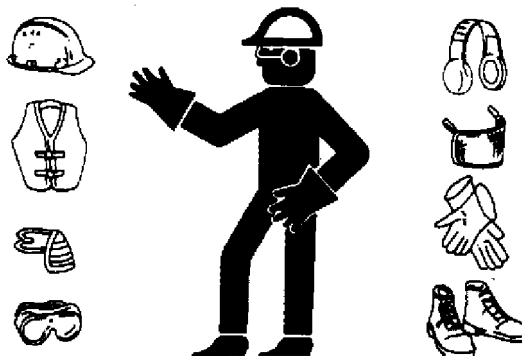

DX,WEAR2 -19-03MAR93

TS206
-UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

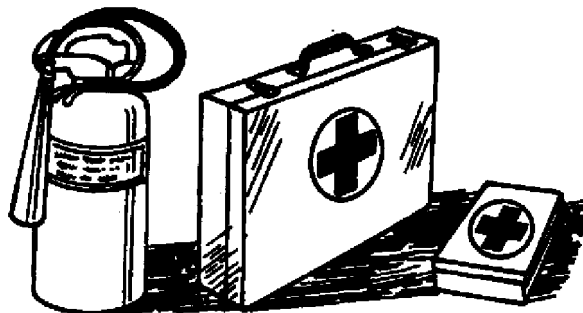

DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88



HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92


TS1356 -UN-18MAR92

AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

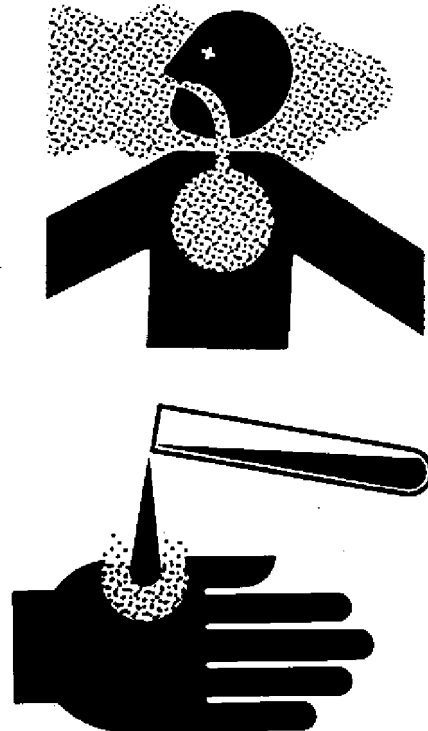

DX,CABS -19-03MAR93

TS220 -UN-23AUG88

TS272

-UN-23AUG88

TS272

Buy Now



Our support email:

ebooklibonline@outlook.com