

8100T, 8200T, 8300T and 8400T Tractors

John Deere Waterloo Works
OMAR152294 Issue L8
(This manual replaces OMAR152294 A8)
European Edition
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere Dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.



RW56478
-JUN-15DEC97

RX8000TE,IFC -19-11DEC97



John Deere Waterloo Works

Deere Customer:

Congratulations on the purchase of your John Deere tractor and, if you are a new customer, welcome to the John Deere family. We believe you will find your new tractor meets your expectations.

Of course, the tractor is just one aspect of the John Deere ownership experience. A great deal of your satisfaction also depends on the performance of the people who represent the care and service of John Deere products. From your dealer sales representative, to the service department, to the parts department, the people of John Deere will strive to make your ownership experience truly exceptional.

This operator's manual provides information for the safe operation of your tractor. Recommendations for service and maintenance are also included.

The Technical Publications Group, and the entire team at John Deere Waterloo Works, would like to confirm our commitment to your satisfaction. Our goal is to assure your John Deere tractor brings you many years of satisfactory service.

Technical Publications
John Deere Waterloo Works

Contents

	Page		Page
Safety	05-1	Starting the Engine	30-2
Safety Signs	10-1	Field Cruise	30-4
Controls and Instruments		Cold Weather Starting	30-5
Front Console	15-1	Operating the Tractor	
Corner Post Display	15-1	Avoid Pesticides	35-1
Side Console	15-2	Avoid Trash Buildup	35-2
Arm Rest Controls	15-2	Transmission	
Vehicle Monitor System	15-3	Operating	35-3
Calibrating Ground Speed	15-9	Selecting Gears	35-4
Calibrating Radar	15-10	Shifting	35-5
Performance Monitor	15-11	Shifting Features	35-6
Lights		Shifting Characteristics	35-7
Road Lights	20-1	Diagnostic Codes	35-8
Field Lights	20-2	Enabling Feature	35-9
Hazard Light	20-3	Warmup	35-10
Turn Signals, Horn, and Head Lights	20-4	Steering Characteristics	35-11
Seven-Terminal Outlet	20-5	Operating Considerations	35-12
Nine-Terminal Connector	20-5	PTO Load Compensation	35-13
Operator Station		Brakes	35-14
Seat	25-1	Chock Block	35-14
Steps	25-2	Rear Three-Point Hitch	
Hand Brake	25-3	Components and Control	40-1
Air Flow and Temperature	25-3	Raise/Lower Switch	40-5
Windshield Wipers	25-5	External Raise/Lower Switch	40-6
Steering Wheel	25-6	Hook-Type Draft Links	40-7
Clock	25-6	Attaching Implement	40-8
Field Office	25-7	Correct Hitch Category	40-9
Accessory Electrical Outlets	25-8	Detaching Implement	40-10
Auxiliary Power Strip	25-9	Center Link Position	40-11
Mobile Radio and Antenna	25-11	Center Link Adjustment	40-12
Monitor Mounts	25-14	Lift Link Adjustment	40-12
Emergency Exit	25-14	Lateral Float	40-13
Passenger Seat	25-15	Sway Blocks	40-13
Rear View Mirror	25-16	Hitch Category	40-14
Operating the Engine		TouchSet Scraper Control	
Pre-Starting Checks	30-1	TouchSet Scraper Control	45-1
		Enabling System	45-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR152294 L8-19-17NOV98

COPYRIGHT© 1998
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Attaching Scraper	45-3	Towing Loads	75-1
Checking Scraper Control Operations with Depth Control System	45-4	Towing Tractor	75-3
Detaching Scraper	45-5	Transporting on Carrier	75-5
Restoring SCV Control	45-5		
Hydraulics and Selective Control Valves		Fuels, Lubricants, and Coolants	
Tractor Hydraulics	50-1	Fuel	80-1
Cylinder Hoses	50-2	Engine Oil	80-3
SCV TouchSet		Engine Coolant	80-5
Controls and Monitor	50-4	Transmission-Hydraulic Oil	80-6
Flow Rate	50-5	Grease	80-7
Flow Demand	50-6		
Detent Time	50-7	Break-in Period	
Control Levers	50-8	Break-in Check	
		First 100 Hours	85-1
		After First 100 Hours	85-2
		Wheel Bolts	85-2
Remote Hydraulic Connections		Service	
Component Identification	55-1	Service Intervals	90-1
Hydraulic Implements	55-2	Front Grille	90-1
Hydraulic Motors	55-3	Side Shields	90-2
Power Beyond	55-5	Hood	90-3
Load Sensing	55-6	Batteries	
Spray Pumps	55-7	Accessing	90-4
Implement Connection Examples	55-8	Charging	90-4
Oil Volume Requirements	55-15	High-Pressure Washer	90-5
Remote Cylinder Stop	55-15	Compressed Air	90-5
		Implement Service	90-5
		Service Interval Charts	90-6
Drawbar and PTO		Service/Daily or Every 10 Hours	
Drawbar	60-1	Engine Oil	95-1
PTO	60-5	Coolant	95-1
		Water Separator	95-2
		Transmission-Hydraulic Oil	95-2
		Three-Point Hitch	95-3
		Rockshaft	95-3
		Tracks	95-3
Optimum Performance/Ballast		Service/250 Hours	
Performance Guidelines	65-1	Engine Oil and Filter	100-1
Ballast Guide	65-3	Manual Brakes	100-2
Spray Tanks	65-5	Batteries	100-2
Scrapers	65-6	Fuel Tank Sump	100-4
Implement Guidelines	65-7	Loose Bolts	100-4
Quik-Tatch™ Weights	65-8	Neutral Start	100-5
Frame Weights	65-9	Park Brake	100-5
Drive Wheel Weights	65-9	Operator Enclosure Air Filter	100-6
		Tension Cylinder	100-6
		Front Idler	100-7
Tracks and Track Tread Settings			
Tread Settings	70-1		
Aligning	70-8		
Tensioning	70-9		
Removing and Installing	70-10		
Transport			
Driving	75-1		

Continued on next page

Contents


	Page		Page
Fire Extinguisher	100-7	Fuses and Relays	130-19
Service/750 Hours		Load Center Fuses	130-20
Transmission-Hydraulic Filter Element	105-1	Load Center Relays and Diodes	130-21
Steering Filter	105-1	Service Air Conditioner	130-22
Air Intake	105-2	Alternator	130-23
Engine Idle Speeds	105-2	Mid Frame Rollers	130-23
Coolant Conditioner	105-3		
Fuel Tank Vent Filter	105-3	Troubleshooting	
		Engine	135-1
Service/1500 Hours		Transmission	135-5
Transmission-Hydraulic Oil	110-1	Hydraulic System	135-6
Clean Oil Reservoir	110-2	Brakes	135-6
Pump Drive Housing	110-2	Hitch	135-7
Transmission Filter Screen	110-3	TouchSet Scraper Control	135-8
Hydraulic Oil Suction Screen	110-3	Hydraulics/Selective Control Valves	135-9
Hub Oil	110-4	Electrical	135-10
Draft Link Support Shaft Bushing	110-4	Operator Enclosure	135-12
Alternator Belt Tensioner	110-5	Steering System	135-13
Fan Belt Tensioner	110-5		
		Diagnostic Codes	140-1
Service/2000 Hours		Storage	145-1
Engine Valve Clearance	115-1	Specifications	150-1
		Identification Numbers	155-1
Service/Annual		Lubrication and Maintenance Charts	160-1
Air Cleaner Elements	120-1	Glossary	165-1
Service/Two Years		Index	
Cooling System Flush and Thermostat Check	125-1		
Service /As Required			
Transmission-Hydraulic Filter Element	130-1		
Steering Filter	130-1		
Fuel System Pressure	130-2		
Fuel Prefilter	130-3		
Fuel Filter	130-4		
Water Separator	130-5		
Fuel System	130-6		
Thermostat Test	130-7		
Brake Bleeding	130-8		
Engine Compartment Check	130-8		
Grille Screens, Radiator, and Oil-Cooler Condenser	130-9		
Air Pre-Cleaner	130-9		
Air Cleaner	130-10		
Alternator Belt	130-12		
Fan Belt	130-13		
Light Replacement	130-13		
Head Light Adjustment	130-17		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

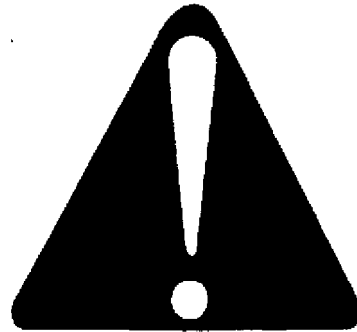

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

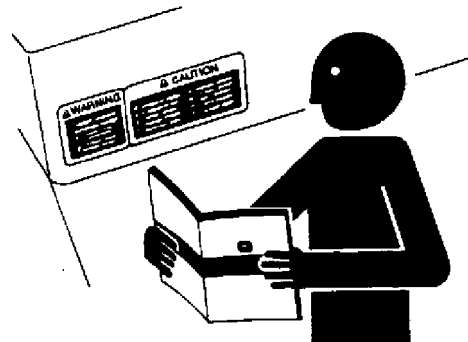

DX,READ -19-03MAR93


TS201 -UN-23AUG88



OPERATING THE TRACTOR SAFELY



 TS213 -JUN-23AUG88

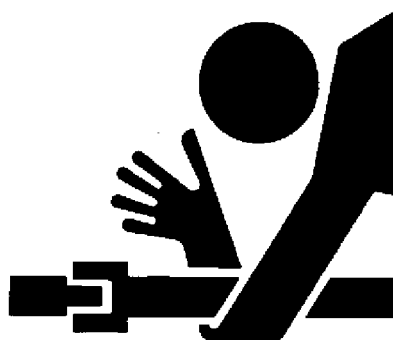

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95

 


PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

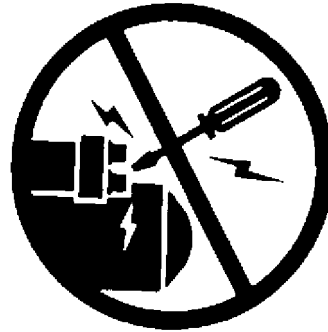

DX,BYPAS1 -19-29SEP98


TS177 -UN-11JAN89

STOPPING AND PARKING TRACTOR

Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

 - Signal before stopping, turning, or slowing down on public roads
- Pull over to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Remove key

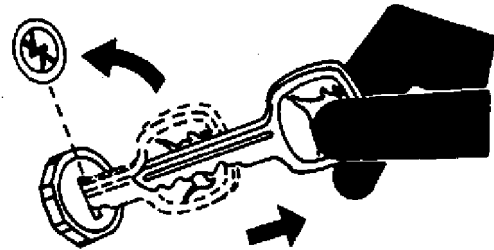

RX,STOP,PARK -19-21SEP92

TS230 -UN-24MAY89

USE SEAT BELT

Use a seat belt to minimize chance of injury from an accident such as a roll-over.



RX,ROPS1 -19-22SEP92


RW16064 -UN-05JAN89



KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

 The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

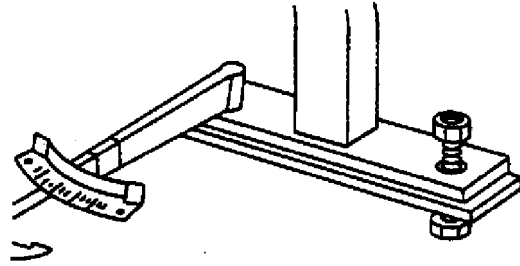

DX,ROPS3 -19-03MAR93

 
-UN-23AUG88
TS212

USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.

Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

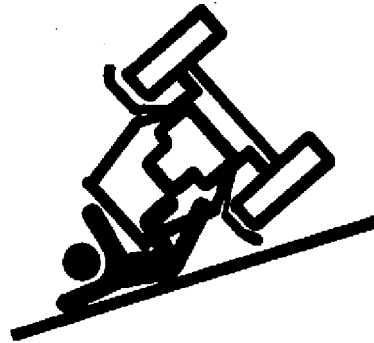


RX,HILL,SIDE1 -19-22SEP92

-UN-07DEC88
RW13093

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

 Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

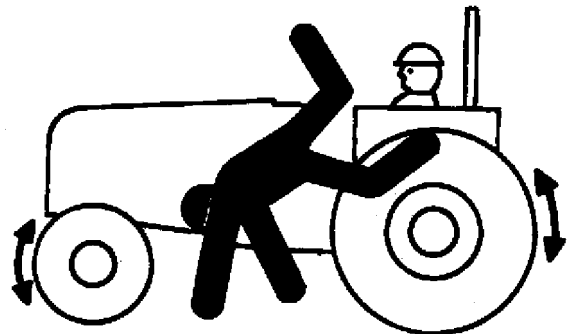


DX,RIDER -19-03MAR93

-UN-23AUG88
TS290



AVOID EYE CONTACT WITH RADAR

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

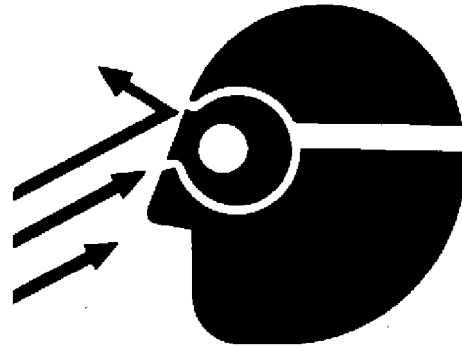


RX,SAFTY,RADAR1-19-21SEP92

TS266
-UN-23AUG88

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

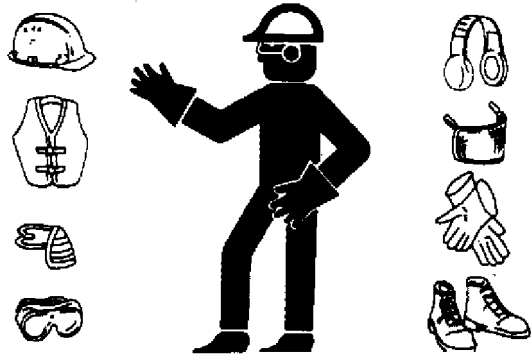

DX,WEAR2 -19-03MAR93

TS206
-UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

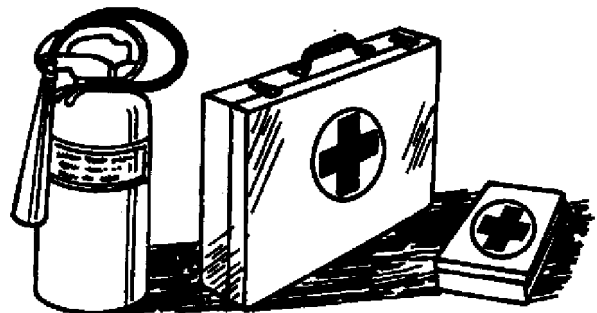

DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88

Buy Now



Our support email:

ebooklibonline@outlook.com