

**8100, 8200, 8300
and 8400 Tractors
(P.I.N. 24,001—)**

**John Deere Waterloo Works
OMAR162536 Issue K8**

**European Edition
LITHO IN U.S.A.
ENGLISH**

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere Dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.



RW75068
-UN-17JUN96

RX8000E,IFCA -19-03JUL96



John Deere Waterloo Works

Deere Customer:

Congratulations on the purchase of your John Deere tractor and, if you are a new customer, welcome to the John Deere family. We believe you will find your new tractor meets your expectations.

Of course, the tractor is just one aspect of the John Deere ownership experience. A great deal of your satisfaction also depends on the performance of the people who represent the care and service of John Deere products. From your dealer sales representative, to the service department, to the parts department, the people of John Deere will strive to make your ownership experience truly exceptional.

This operator's manual provides information for the safe operation of your tractor. Recommendations for service and maintenance are also included.

The Technical Publications Group, and the entire team at John Deere Waterloo Works, would like to confirm our commitment to your satisfaction. Our goal is to assure your John Deere tractor brings you many years of satisfactory service.

Technical Publications
John Deere Waterloo Works

Contents

	Page		Page
Safety	05-1	Starting the Engine	30-2
Safety Signs	10-1	Restarting Stalled Engine	30-3
Controls and Instruments		Stopping the Engine	30-3
Front Console	15-1	Field Cruise	30-4
Corner Post Display	15-1	Cold Weather Starting	30-5
Side Console	15-2	Auxiliary Heaters	30-6
Armrest Controls	15-2	Operating the Tractor	
Vehicle Monitor	15-4	Avoid Contact with Pesticides	35-1
Display Functions	15-6	Operating Transmission	35-2
Calibrating Tire Size	15-7	PTO Load Compensation	35-7
Calibrating Radar	15-8	Mechanical Front-Wheel Drive	35-11
Performance Monitor	15-9	Differential Lock	35-12
Lights		Brakes	35-12
Operating Lights	20-1	Trailer Hydraulic Brakes	35-12
Operating Turn Signals, Horn and Hi/Low		Trailer Air Brakes	35-13
Beam	20-4	Chock Block	35-13
Seven-Terminal Outlet	20-5	Rear Three-Point Hitch	
Nine-Terminal Connector	20-5	Hitch Components	40-1
Operator Station		Hitch Controls	40-1
Adjusting Air Suspension Seat	25-1	Using External Raise/Lower Switch	40-6
Secondary Hand Brake	25-2	Adjusting Quick-Coupling Draft Links	40-7
Controlling Air Flow	25-2	Attaching Implement to Hitch	40-8
Operating Windshield Wiper	25-4	Using Correct Hitch Category	40-9
Adjusting Steering Wheel	25-5	Detaching Implement from Hitch	40-10
Setting the Clock	25-5	Adjusting Center Link	40-12
Field Office	25-6	Adjusting Lift Links	40-12
Accessory Electrical Outlets	25-7	Using Sway Blocks	40-13
Auxiliary Power Strip	25-8	Stabilizing System	40-14
Installing Mobile Radio and Antenna	25-9	Converting Hitch Category	40-15
Emergency Exit	25-13	Trailer Hitch	40-15
Passenger Seat	25-14	Pickup Hitch	40-15
Electrical Rear View Mirror	25-15	Changing Pickup Hitch Hook	40-17
Adjusting or Removing Step	25-16	TouchSet Scraper Control	
Operating the Engine		TouchSet Scraper Control	45-1
Emissions	30-1	Enabling System	45-1
Pre-Starting Checks	30-1	Attaching Scraper	45-3

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR162536 K8-19-09OCT98

COPYRIGHT© 1998
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions

Contents

	Page		Page
Checking Scraper Control Operations with Depth		Freeing a Mired Machine	75-6
Control System	45-4	Transporting on Carrier	75-7
Detaching Implement	45-5		
Restoring SCV Control	45-5		
Hydraulics and Selective Control Valves		Fuels, Lubricants, and Coolant	
Using Tractor Hydraulics	50-1	Fuel	80-1
Cylinder Hoses	50-2	Diesel Engine Oil	80-3
SCV Touchset Controls and Monitor	50-4	Engine Coolant	80-4
		Transmission and Hydraulic Oil	80-5
Remote Hydraulic Connections		Power Shift Transmission Recalibration	80-6
Hydraulic Component Identification	55-1	MFWD Axle Housing Oil	80-6
Using Hydraulic Motor Return	55-3	MFWD Wheel Hub Oil	80-7
Power-Beyond	55-5	Grease	80-7
Examples Using Load-Sensing Hydraulic			
System	55-6	Break-In Period	
Cylinder Stop	55-15	Break-In Check	
		First 100 Hours	85-1
Drawbar and PTO		After First 100 Hours	85-2
Drawbar	60-1	Tighten Wheel Bolts	85-2
PTO	60-3		
		Service	
Optimum Performance/Ballast		Service Intervals	90-1
General Performance Guidelines	65-1	Front Grille	90-1
Ballasting for PTO Horsepower	65-2	Side Shields	90-2
Controlling Power Hop	65-3	Hood	90-3
Measuring Wheel Slip	65-5	Hose Clamps	90-3
Determining Maximum Ballast	65-6	Batteries	90-4
Liquid Ballast	65-8	High-Pressure Washers	90-4
Using Rear Cast Iron Weights	65-10	Compressed Air	90-5
Using Towed Scrapers	65-11	Implement Service	90-5
Installing Quik-Tatch™ Weights	65-12	Service Interval Chart	90-7
Wheels, Tires, and Treads		Service/Daily or Every 10 Hours	
General Wheel, Tire, and Tread		Engine Oil Level	95-1
Guidelines	70-1	Coolant Level	95-1
Tire Inflation Pressure	70-2	Water Separator	95-2
Tire Combinations	70-5	Transmission-Hydraulic Oil Level	95-2
Tightening Wheel Bolts	70-6	MFWD Axle	95-3
Toe-In	70-7	Rockshaft, Three-Point Hitch and Lift	
Tread Settings	70-8	Links	95-3
Steering Stops	70-10	Tires	95-4
Adjusting Fenders	70-12	Trailer Air Brake Accumulator	95-4
Adjusting Rear Wheels	70-13		
Rear Wheel Tread Setting Ranges	70-14	Service/250 Hours	
		Engine Oil and Filter	100-1
Transport		Manual Brakes	100-2
Driving Tractor on Roads	75-1	Batteries	100-3
Towing Loads	75-2	Fuel Tank Sump	100-5
Towing Tractor	75-3	Bolts	100-5
		Neutral Start System	100-5
		Park Brake System	100-6

Continued on next page

Contents


	Page		Page
Secondary Brake Reservoir	100-6	Load Center Relays and Diodes	130-22
Operator Enclosure Air Filter	100-7	Service Air Conditioner	130-23
MFWD Axle	100-7	Alternator	130-24
Pickup Hitch	100-8		
Trailer Hitch	100-9	Troubleshooting	
Service/750 Hours		Engine	135-1
Transmission/Hydraulic Filter Element	105-1	Transmission	135-5
Air Intake System	105-1	Hydraulic System	135-6
Engine Idle Speeds	105-2	Brakes	135-6
Fuel Tank Vent Filter	105-2	Hitch	135-7
Service/1500 Hours		Hydraulics/Selective Control Valve	135-9
Transmission-Hydraulic Oil	110-1	Electrical System	135-10
Clean Oil Reservoir	110-2	Operator Enclosure	135-12
Transmission Filter Screen	110-2	Tractor Operation	135-13
Hydraulic Oil Suction Screen	110-2		
MFWD Hub and Axle Housing Oil	110-3	Diagnostic Codes	140-1
Fuel Injection Nozzles	110-3	Storage	145-1
Draft Link Support Shaft Bushing	110-4	Specifications	150-1
Belt Tensioner	110-4	Identification Numbers	155-1
Service/2000 Hours		Lubrication and Maintenance Charts	160-1
Engine Valve Clearance	115-1	Glossary	165-1
Service/Annual		Index	
Air Cleaner Elements	120-1		
Service/Two Years			
Cooling System Service	125-1		
Service/As Required			
Transmission/Hydraulic Filter Element	130-1		
Fuel System Pressure	130-1		
Fuel Prefilter	130-2		
Water Separator	130-3		
Fuel Filter	130-4		
Fuel System	130-5		
Thermostats	130-6		
Brake Bleed	130-7		
Hydraulic Trailer Brake Bleed	130-8		
Secondary Brake Bleed	130-8		
Primary Element	130-11		
Alternator Belt	130-12		
Fan Belt	130-13		
Lights/Bulbs	130-14		
Headlights	130-19		
Fuses and Relays	130-20		
Load Center Fuses	130-21		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

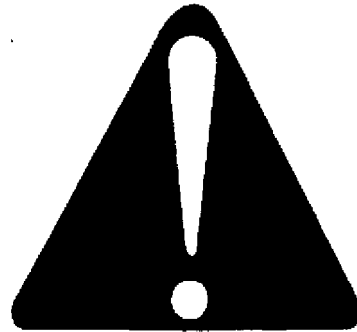

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

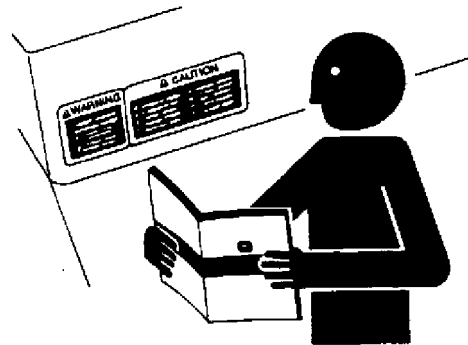


DX,READ -19-03MAR93


TS201 -UN-23AUG88



 OPERATING THE TRACTOR SAFELY

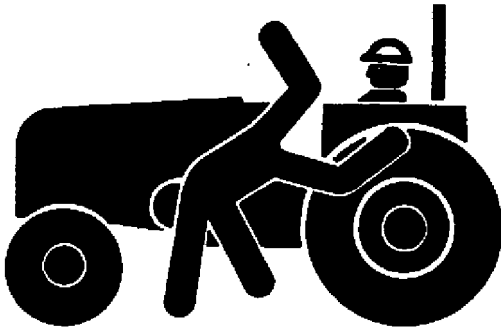

TS213 -JUN-23AUG88

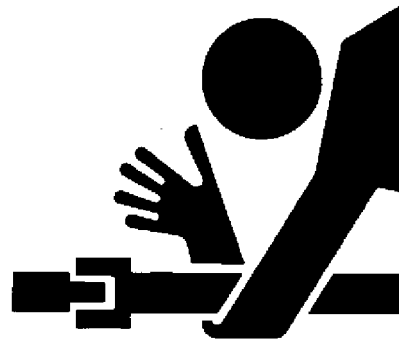 

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95

 


PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

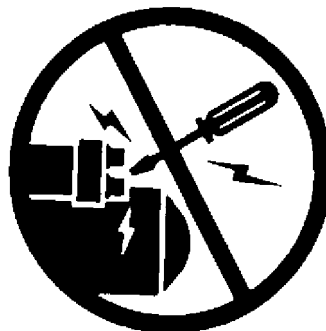

DX,BYPAS1 -19-29SEP98


TS177 -UN-11JAN89

STOPPING AND PARKING TRACTOR

Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

 - Signal before stopping, turning, or slowing down on public roads
- Pull over to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Remove key

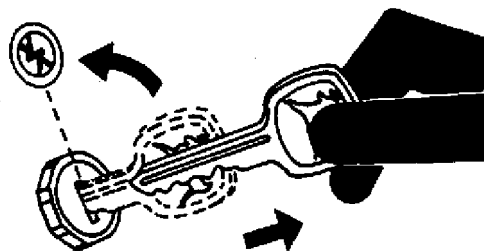

RX,STOP,PARK -19-21SEP92

TS230 -UN-24MAY89

USE SEAT BELT

Use a seat belt to minimize chance of injury from an accident such as a roll-over.



RX,ROPS1 -19-22SEP92


RW16064 -UN-05JAN89



KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

 The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

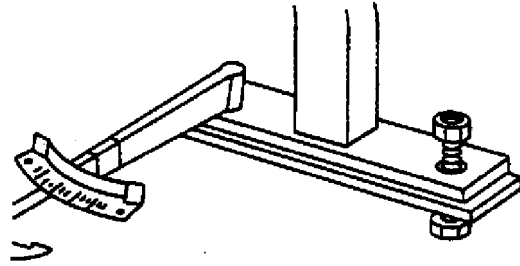

DX,ROPS3 -19-03MAR93

 
-UN-23AUG88
TS212

USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.

Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

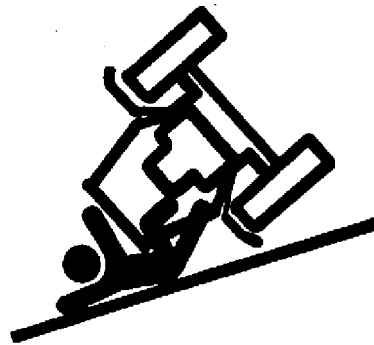


RX,HILL,SIDE1 -19-22SEP92

-UN-07DEC88
RW13093

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

 Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

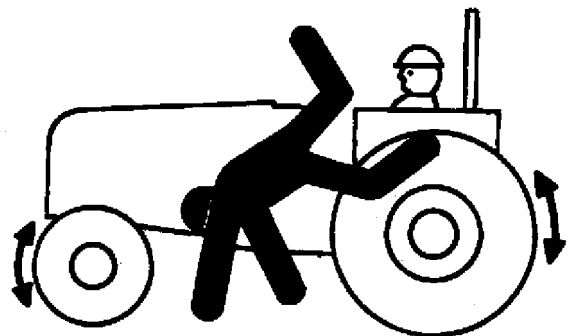


DX,RIDER -19-03MAR93

-UN-23AUG88
TS290



AVOID EYE CONTACT WITH RADAR

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, **DO NOT** look directly into face of sensor while in operation, to avoid any possible eye damage.

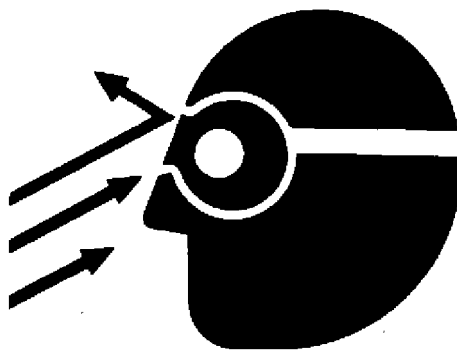


RX,SAFTY,RADAR1-19-21SEP92

TS266
-UN-23AUG88

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

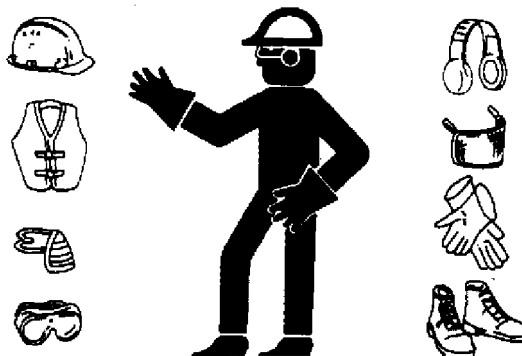

DX,WEAR2 -19-03MAR93

TS206
-UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

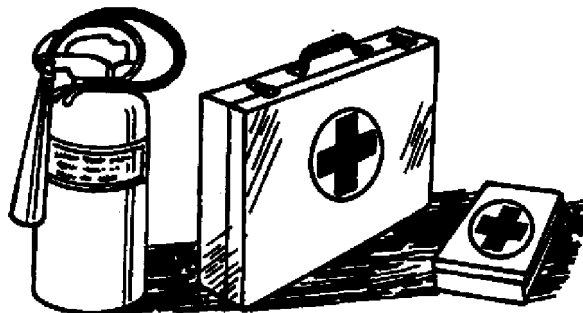

DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88

Buy Now



Our support email:

ebooklibonline@outlook.com