

# **7210 and 7410 Tractors**

**John Deere Waterloo Works**  
**OMAR162572 Issue F9**  
**(This manual replaces OMAR162572 K8)**  
Export Edition  
LITHO IN U.S.A.  
**ENGLISH**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



-UN-11JUL96

RW55930

RX7010WEXP,IFC -19-21AUG96



**John Deere Waterloo Works**

Deere Customer:

Congratulations on the purchase of your John Deere tractor and, if you are a new customer, welcome to the John Deere family. We believe you will find your new tractor meets your expectations.

Of course, the tractor is just one aspect of the John Deere ownership experience. A great deal of your satisfaction also depends on the performance of the people who represent the care and service of John Deere products. From your dealer sales representative, to the service department, to the parts department, the people of John Deere will strive to make your ownership experience truly exceptional.

This operator's manual provides information for the safe operation of your tractor. Recommendations for service and maintenance are also included.

The Technical Publications Group, and the entire team at John Deere Waterloo Works, would like to confirm our commitment to your satisfaction. Our goal is to assure your John Deere tractor brings you many years of satisfactory service.

Technical Publications  
John Deere Waterloo Works

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Starting the Engine .....	30-2
<b>Safety Signs</b> .....	10-1	Restarting the Engine .....	30-3
<b>Controls and Instruments</b>		Stopping the Engine .....	30-4
Command Console .....	15-1	Cold Weather Starting .....	30-4
Function Indicators .....	15-2	Auxiliary Heaters .....	30-5
Single Lever Control .....	15-3	Booster Battery .....	30-6
Control Console .....	15-4	<b>Operating the Tractor</b>	
Instrument Panels		Foldable ROPS .....	35-1
Analog .....	15-5	Avoid Pesticides .....	35-2
Digital .....	15-7	Transmission .....	35-3
Display Functions .....	15-9	Creeper .....	35-5
Calibrating Tire Size-With Radar .....	15-10	Headland Management .....	35-6
Performance Monitor .....	15-11	Reverser .....	35-7
<b>Lights</b>		Hydraulic System Warm-up .....	35-8
Operating Lights		Mechanical Front-Wheel Drive .....	35-9
Open Station .....	20-1	Differential Lock .....	35-9
Cab .....	20-2	Brakes .....	35-10
Hazard .....	20-3	<b>Hitch</b>	
Turn Signals, Horn, and Head Lights .....	20-3	Components and Controls .....	40-1
Seven-Terminal Outlet .....	20-4	Hitch Operation .....	40-1
<b>Operator Station</b>		External Raise/Lower Switch .....	40-6
Seats .....	25-1	Sway Blocks .....	40-6
Step Removal .....	25-2	Attaching and Detaching Implements .....	40-8
Heater/Air Conditioner .....	25-3	Adjusting Implement Level .....	40-11
Windshield Wiper .....	25-4	Adjusting Lift Links .....	40-12
Steering Wheel .....	25-4	Lateral Float .....	40-12
Radio .....	25-5	Hitch Conversion .....	40-13
Clock .....	25-6	<b>Remote Hydraulic Cylinders</b>	
Cassette .....	25-6	Cylinder Hoses .....	45-1
Mobile Radio .....	25-7	SCV Operation .....	45-2
Accessory Electrical Outlet .....	25-8	Detent Relief Setting .....	45-7
Power Strip .....	25-8	Relief Valve Manual Lowering .....	45-7
<b>Operating the Engine</b>		Low-Pressure Circuit .....	45-8
Emissions .....	30-1	Hydraulic Motor Return .....	45-9
Pre-starting Checks .....	30-1	Power Beyond .....	45-10
		Remote Cylinders .....	45-12

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMAR162572 F9-19-09JUN99

COPYRIGHT© 1999  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1998 Deere & Company

Contents

	<b>Page</b>		<b>Page</b>
<b>Drawbar and PTO</b>			
Drawbar . . . . .	50-1	Transmission-Hydraulic Oil . . . . .	70-8
PTO . . . . .	50-2	MFWD	
		Axle Housing Oil . . . . .	70-9
		Axle Wheel Hub Oil . . . . .	70-9
		Grease . . . . .	70-10
<b>Optimum Performance/Ballast</b>			
Guidelines . . . . .	55-1	<b>Break-In Period</b>	
Power Hop . . . . .	55-3	Engine . . . . .	75-1
Determining Ballast . . . . .	55-6	Wheel and Axle Bolts . . . . .	75-2
Liquid Weight . . . . .	55-8		
Rear Cast Iron Weights . . . . .	55-10	<b>Service</b>	
740 Loader . . . . .	55-11	Service Reference Chart . . . . .	80-1
Implement Codes . . . . .	55-11	High Pressure Washer . . . . .	80-1
Quik-Tatch Weights . . . . .	55-14	Hood and Side Shields . . . . .	80-2
		Accessing and Charging Batteries . . . . .	80-3
		Servicing Implements . . . . .	80-4
		Service Interval Charts . . . . .	80-5
<b>Wheels, Tires, and Treads</b>			
Guidelines . . . . .	60-1	<b>Service/Daily or Every 10 Hours</b>	
Inflation Pressures . . . . .	60-2	Engine Oil . . . . .	85-1
Tire Combinations . . . . .	60-7	Coolant . . . . .	85-1
Wheel and Axle Bolts . . . . .	60-8	Transmission-Hydraulic Oil . . . . .	85-2
Front Tread Settings		Water Separator . . . . .	85-2
Standard . . . . .	60-10	Rear Axle Bearings . . . . .	85-3
Extensions . . . . .	60-11	Front Wheel Bearings . . . . .	85-3
Hi-Crop . . . . .	60-12	Front Axle . . . . .	85-4
Front Axle Adjustment . . . . .	60-13	Front PTO . . . . .	85-4
Toe-In		MFWD Axle . . . . .	85-5
Adjustable Axle . . . . .	60-13	Hitch and Lift Linksa . . . . .	85-5
MFWD . . . . .	60-14	Tires . . . . .	85-6
MFWD Tread Settings . . . . .	60-15		
Steering Atops . . . . .	60-17	<b>Service/250 Hours</b>	
Adjust Fenders . . . . .	60-20	Engine Oil and Filter . . . . .	90-1
Rear Wheel Adjustment		Manual Brakes . . . . .	90-2
Cast . . . . .	60-23	Fire Extinguisher . . . . .	90-2
Steel . . . . .	60-24	Batteries . . . . .	90-3
Rear Wheel Tread Settings-Singles		Fuel Tank Sump . . . . .	90-5
Flanged Axles . . . . .	60-25	Wheel Bolts . . . . .	90-6
Rack and Pinion Axles . . . . .	60-29	Neutral Start System . . . . .	90-7
Duals . . . . .	60-32	Cab Air Filters . . . . .	90-9
Rear Wheel Tread Settings-Duals		Front or MFWD Axle . . . . .	90-9
Dual Hub Extensions . . . . .	60-33	MFWD Housing and Wheel Hub Oil . . . . .	90-10
		Hi-Crop Axle Housing Oil . . . . .	90-10
		Front PTO . . . . .	90-11
<b>Transport</b>			
Driving . . . . .	65-1	<b>Service/750 Hours</b>	
Towing Loads . . . . .	65-2	Transmission Filter . . . . .	95-1
Towing Tractor . . . . .	65-4	Hydraulic Filter . . . . .	95-1
Mired Machine . . . . .	65-6	Rear Axle Bearings . . . . .	95-2
		Air Intake System . . . . .	95-2
<b>Fuels, Lubricants, and Coolant</b>			
Fuel . . . . .	70-1		
Engine Oil . . . . .	70-3		
Engine Coolant . . . . .	70-5		

Continued on next page

Contents


	<b>Page</b>		<b>Page</b>
Engine Idle Speeds . . . . .	95-2	Hitch . . . . .	125-6
Coolant Conditioner . . . . .	95-3	Selective Control Valves . . . . .	125-8
Fuel Tank Vent Filter . . . . .	95-3	Electrical System . . . . .	125-9
<b>Service/1500 Hours</b>		Operator Enclosure . . . . .	125-11
Transmission-Hydraulic Oil . . . . .	100-1	Tractor Operation . . . . .	125-12
Hydraulic Oil Suction Screen . . . . .	100-1	<b>Storage</b> . . . . .	130-1
MFWD Housing and Wheel Hub Oil . . . . .	100-2	<b>Specifications</b>	
Hi-Crop Axle Housing Oil . . . . .	100-2	Specifications . . . . .	135-1
Fuel Injection Nozzles . . . . .	100-3	Ground Speeds . . . . .	135-6
Draft Link Support Shaft Bushing . . . . .	100-3	<b>Identification Numbers</b> . . . . .	140-1
Belt Tensioner . . . . .	100-3	<b>Lubrication and Maintenance Charts</b> . . . . .	145-1
Front Wheel Bearings . . . . .	100-4	<b>Glossary</b> . . . . .	150-1
Front PTO . . . . .	100-4	<b>Index</b>	
<b>Service/2000 Hours</b>			
Engine Valve Clearance . . . . .	105-1		
<b>Service/Annual</b>			
Air Cleaner . . . . .	110-1		
PTO Shaft . . . . .	110-2		
<b>Service/Two Years</b>			
Cooling System and Thermostat Service . . . . .	115-1		
<b>Service/As Required</b>			
Transmission Filter . . . . .	120-1		
Hydraulic Filter . . . . .	120-1		
Fuel Prefilter . . . . .	120-2		
Fuel Filter . . . . .	120-2		
Fuel System Bleed . . . . .	120-3		
Thermostat Test . . . . .	120-4		
Brakes Bleed . . . . .	120-5		
Engine Compartment . . . . .	120-5		
Grille Screens, Radiator, and Condenser . . . . .	120-6		
Air Cleaner . . . . .	120-7		
Fan Belt . . . . .	120-9		
Front Lights . . . . .	120-9		
Head Lights . . . . .	120-10		
Light Replacement . . . . .	120-11		
Fuses and Relays . . . . .	120-13		
Air Conditioning . . . . .	120-16		
Alternator Replacement . . . . .	120-16		
<b>Troubleshooting</b>			
Engine . . . . .	125-1		
Transmission . . . . .	125-4		
Hydraulic System . . . . .	125-5		
Brakes . . . . .	125-5		

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

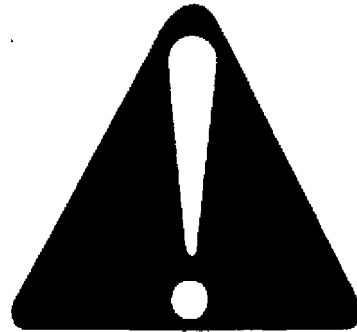

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

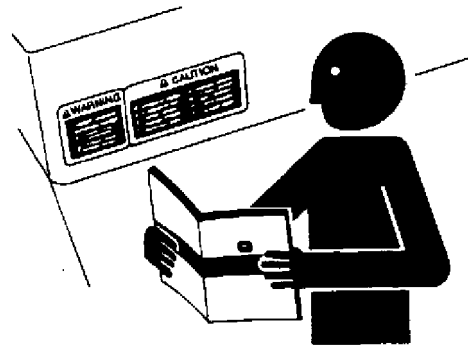


DX,READ -19-03MAR93


TS201 -UN-23AUG88



## OPERATING THE TRACTOR SAFELY

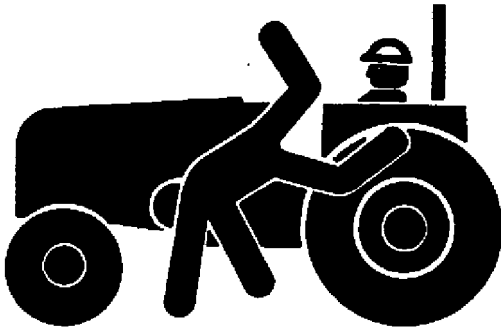 

TS213 -JUN-23AUG88

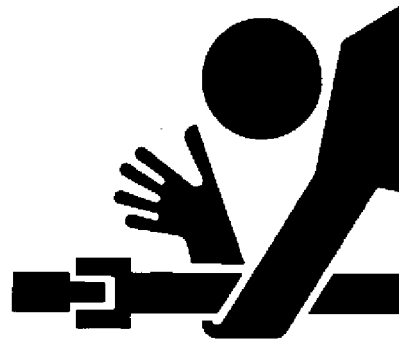 

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95






## PREVENT MACHINE RUNAWAY

 Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

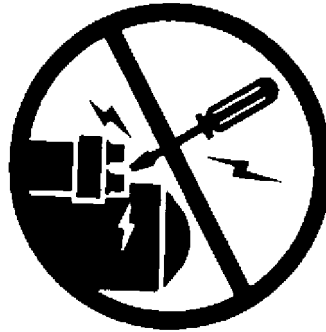

DX,BYPAS1 -19-29SEP98


TS177 -UN-11JAN89

## STOPPING AND PARKING TRACTOR

 Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

- Signal before stopping, turning, or slowing down on public roads
- Pull over to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Remove key

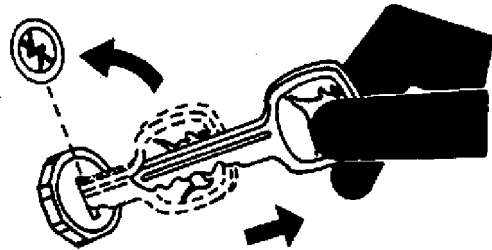

RX,STOP,PARK -19-21SEP92


TS230 -UN-24MAY89



## USE ROPS AND SEAT BELT PROPERLY

 If this tractor is equipped with a foldable ROPS, keep the ROPS in the fully extended and locked position. If the tractor is ever operated with ROPS folded (e.g., to enter a low building), drive with extreme caution. Do NOT use seat belt with the ROPS folded.

Return the ROPS to the raised, fully extended and locked position as soon as the tractor is operated under normal conditions. Always fasten your seat belt when the ROPS is fully extended and locked.

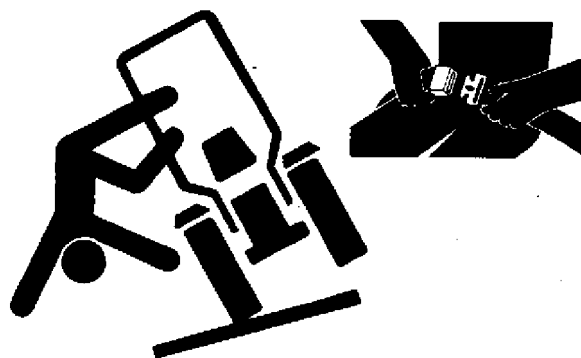


DX,FOLDROPS -19-16APR92

-UN-23AUG88  
TS205

## KEEP ROPS INSTALLED PROPERLY

 Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

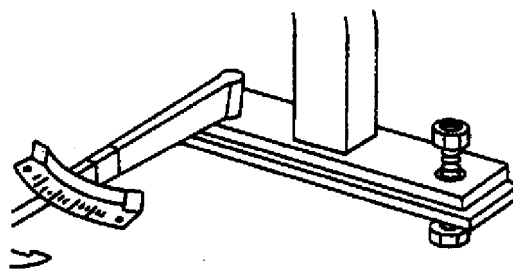

DX,ROPS3 -19-03MAR93

-UN-23AUG88  
TS212




## USE CAUTION ON HILLSIDES

 Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.

Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

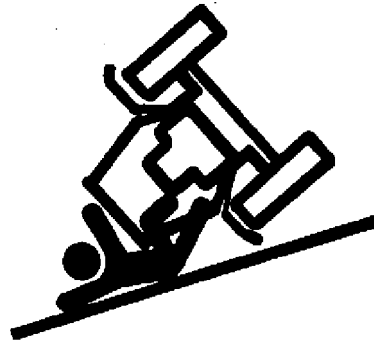


RX,HILL,SIDE1 -19-22SEP92

RW13093 -UN-07DEC88

## KEEP RIDERS OFF MACHINE

 Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

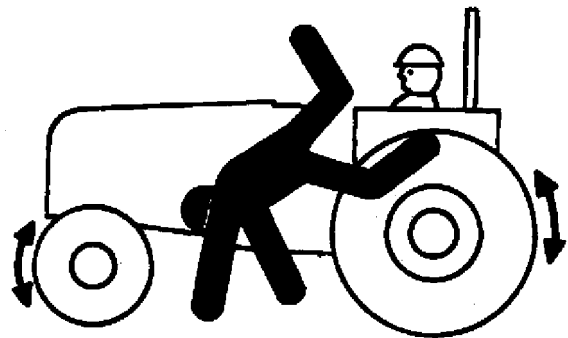


DX,RIDER -19-03MAR93

TS290 -UN-23AUG88

## WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

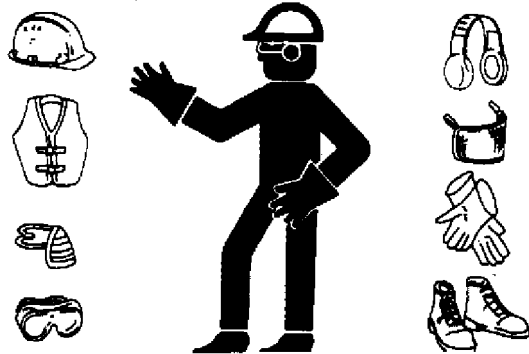

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG88

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)