



444E LOADER



 
JOHN DEERE

OPERATORS MANUAL 444E LOADER

OMAT123458 F1 English

JOHN DEERE DUBUQUE WORKS
OMAT123458 F1
(This manual replaces AT139654)

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.



THIS MACHINE IS OF METRIC design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.


WRITE PRODUCT IDENTIFICATION NUMBERS in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the

machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

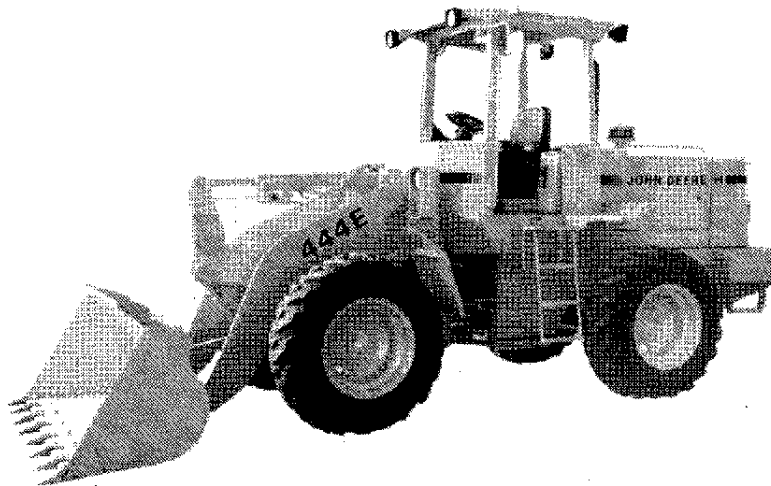

T6642CM
-UN-04MAY89

Contents

	Page		Page
Safety	05-1	Horn	10-18
Safety Signs	06-1	Steering Wheel Tilt Lever	10-18
Operator's Station		Door Stop	10-18
Console Indicators	10-1	Side Window Latch	10-18
Switches	10-2	Window Hold-Open Latch	10-19
Service Required Indicator	10-3	Mirrors	10-19
Engine Coolant Temperature Indicator	10-4	Break-In	15-1
Engine Oil Pressure Indicator	10-4	Pre-Start Inspection	
Alternator Voltage Indicator	10-4	General	20-1
Air Filter Restriction Indicator	10-5	Operating the Engine	
Hi-Lo Control Indicator	10-5	Check Console Before Starting	25-1
Hi-Lo Charge Indicator	10-5	Starting the Engine	25-1
Secondary Steering Indicator	10-6	Replacing Starting Fluid Can	25-3
HST Charge Pressure Indicator	10-6	Replacing Starting Aid Can	25-3
HST Oil Temperature Indicator	10-7	Battery Jump Starting	25-4
Park Brake Indicator	10-7	Coolant Heater	25-5
Low Pressure Brake Indicator	10-7	Check Instruments After Starting	25-5
HST Hydraulic Filter Indicator	10-7	Engine Warm Up	25-5
Hydraulic Oil Filter Indicator	10-8	Engine Cold Weather Warm-up	25-6
Left Turn Indicator	10-8	Stopping the Engine	25-6
Right Turn Indicator	10-8	High Elevation Engine Adjustment	25-6
Control Levers	10-9	Driving the Loader	
Levers	10-9	Driving On Public Roads	30-1
Park Brake Lever	10-10	Driving Precaution	30-1
Transmission Speed Switch	10-11	Neutral Lock	30-2
Pedals	10-11	Shifting the Transmission	30-2
Air Conditioner Controls	10-12	Travel Speeds	30-3
Differential Switch	10-12	Secondary Steering-If Equipped	30-4
Seat Adjustments	10-13	Stopping the Machine	30-4
Manual Holder	10-13	Parking the Machine	30-5
Vandal Shield—If Equipped	10-14	Compartments	30-5
Neutral Lock	10-14	Operating the Loader	
Dome Light	10-15	Controls	35-1
Door Hold-Open Lever	10-15	Two Lever Controls	35-2
Storage Compartment	10-15		
Turn Signal and Hazard Light Switch	10-16		
Windshield Wiper Switch	10-16		
Operating Lights	10-17		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAT123458 F1-19-28MAY91

COPYRIGHT©1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright©1989,1988,1987 Deere & Company

Contents

	Page		Page
Inching Pedal	35-2	Maintenance—Every 250 Hours	
Operating Tips	35-3	Engine Oil and Filter	75-1
Excavating	35-4	Cab Fresh Air Filter	75-2
Manual Adjust Low Range Digging	35-4	Maintenance—Every 500 Hours	
Backfilling	35-5	Lubricate Steering Cyl Pivots	80-1
Transporting		Battery Electrolyte Level	80-2
General	40-1	Coolant Conditioner	80-5
Loading Machine	40-1	Lubricate Frame Hinge Pivot	80-6
Towing	40-3	Water Separator Filter—If Equipped	80-7
Lifting the Machine	40-4	Lubricate Oscillating Rear Axle	80-7
Fuels and Lubricants		Bleeding Fuel System	80-8
Fuel Specifications	45-1	Hydraulic System Oil Filter	80-8
Fuel Storage	45-1	Replace Hi-Lo Transmission Filter	80-9
Fuel Containers	45-2	Differential Oil Level	80-10
Fuel Tank	45-2	Replace HST Oil Filter	80-11
Engine Oil	45-3	Maintenance—Every 1000 Hours	
Transmission and Brake System Oil	45-4	Lubricate Trans-To-Front Differential	
Steering, Hydraulic, and HST Oil	45-5	Drivelines	85-1
Differential Oil	45-6	Change Air Cleaner Elements	85-1
Grease	45-7	Engine Speed Control Linkage	
Alternative Lubricants	45-7	Adjustment	85-3
Lubricant Storage	45-8	Engine Valve Clearance Adjustment	85-5
Synthetic Lubricants	45-8	Drain Hi-Lo Transmission Oil	85-6
Periodic Maintenance		Hydraulic Oil Filler Cap Filter	85-7
Hour Meter	50-1	Maintenance—Every 2000 Hours	
Prepare Machine for Maintenance	50-2	Coolant Freeze Protection	86-1
Engine Side Shield	50-3	Drain the Cooling System	86-2
Locking Machine Frame	50-4	Drain HST System Oil and Clean Strainer ...	86-3
Maintenance-As Required		Lubricate control lever and pedal pivots ...	86-6
Tire Pressure	55-1	Maintenance—Every 3000 Hours	
Air Filter Restriction Indicator	55-2	Differential Oil Change	87-1
Air Cleaner Elements	55-2	Maintenance	
Drain Fuel Tank Sump	55-5	Injection Nozzles	90-1
Clean Fuel Inlet Strainer	55-5	Injection Pump	90-1
Alternator Belt Adjustment	55-7	Drain Fuel Filter Sediment	90-1
Maintenance—Every 10 Hours or Daily		Alternator and Regulator Precautions	90-2
Lubricate Driveshaft Support Bearing	60-1	Battery Service	90-2
Transmission Oil Level	60-4	Electrolyte Specific Gravity	90-3
Maintenance—Every 50 Hours	65-1	Battery Charger	90-3
Maintenance—Every 100 Hours		Battery Specifications	90-4
Greasing Telescoping Shaft	70-1	Fuses	90-4
Cab Recirculating Air Filter	70-1	Halogen Bulbs	90-5
		Checking Neutral Start	90-6
		Air Condition System Service	90-7
		Secondary Steering Check	90-8

Continued on next page

Contents

	Page		Page
Engine Speeds	90-11	Priority Valve Operation Check	95-9
Backup Alarm—If Equipped	90-11	Priority Valve Pressure Check	95-9
Bleeding the Brakes	90-12	Crossover Relief Valve Check	95-9
Park Brake Adjustment	90-21	Steering System Leakage Check	95-10
Front Axle Disconnect Cable	90-22	Secondary Steering Check	95-10
Boom Height Kickout Adjustment	90-23	Steering Inlet Valve Check	95-10
Return To Dig Adjustment	90-23	Driving Checks	95-11
Bucket Replacement	90-24	Transmission Noise Check	95-11
Replacing Bucket Teeth	90-24	Transmission Downshift Check	95-11
ROPS Attachments	90-25	Transmission Modulation Check	95-11
Service of Control Valves, Cyl, Motors, and Pumps	90-25	Transmission Operating Check	95-12
Hardware Torque Specifications	90-25	Transmission Shift Modulation Check	95-12
ROPS Installation	90-26	HST Speed Check	95-12
Inch Bolt and Cap Screw Torque	90-27	HST Transmission Pressure Check	95-12
Metric Bolt and Cap Screw Torque	90-28	Hydraulic Systems Checks	95-14
Oil Lines and Fittings	90-30	RTD and BHKO Check	95-14
Flare and Cone Seat Connectors	90-31	Accessory Checks	95-16
O-Ring Boss Fittings	90-32	Cab Component and Protection Check	95-19
O-Ring Flat Face Seal Fittings	90-33	Storage Cover Check	95-23
Inch Four Bolt Flange Fittings	90-34		
Metric Four Bolt Flange Fittings	90-35		
Operational Checkout			
Operational Checkout Chapter	95-1	Troubleshooting	
Monitor/Gauge Checks(Engine Off)	95-2	Engine	100-1
Key Switch Check	95-2	Electrical	100-11
Bulb Check	95-2	Transmission	100-19
Monitor Check	95-2	Brake	100-23
Monitor Primary and Secondary Check	95-3	Differential and Axle	100-24
Monitor Operation Information	95-3	Drive Line	100-25
Fuel Gauge Check	95-3	Park Brake	100-25
Hour Meter Check	95-3	Hydraulic	100-26
Transmission and Engine Linkages	95-4	Steering	100-29
FNR and Neutral Levers Check	95-4	Air Conditioning	100-32
Neutral and Reverse Warning Checks	95-4		
Engine Speed Linkage Check	95-4	Storage	105-1
Monitor/Gauge Checks(Engine On)	95-5		
Monitor Check	95-5	Crime Prevention Tips	110-1
Starting Aid Check	95-5		
Brake Check	95-6	Specifications	115-1
Brake System Checks	95-6		
Park Brake Check	95-6	Machine Numbers	120-1
Transmission Lockout Check	95-6		
Service Brake Check	95-7		
Brake Leakage Check	95-7		
Service Brake Linkage Check	95-7		
System Drag Check	95-8		
Steering System Check	95-8		
Steering System Checks	95-8		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com