

NO. 114-A ROUGHAGE MILL AND FEED GRINDER



JOHN DEERE

OPERATORS MANUAL NO. 114-A ROUGHAGE MILL AND FEED GRINDER

OMC91249 (01DEC49) English

OMC91249 (01DEC49)

LITHO IN THE U.S.A.
ENGLISH



TO THE PURCHASER

The successful operation of your mill, which is designed to give you many years of satisfactory service, depends upon the care given it and how it is operated.

Dull knives and hammers will not do good work but cause unsatisfactory service and expense. **KEEP KNIVES SHARP.**

The object of this Manual is to assist in setting up this mill correctly and to aid the user in operating it to the best advantage. See that the operator follows these instructions.

A mill incorrectly assembled or improperly operated cannot produce the best results.

Greasing is important. Use the type of grease recommended.

LOCATION REFERENCES

“Right” refers to the pulley side of mill and “Left” to the fan side.

SERIAL NUMBER

Always give the SERIAL number of your mill when ordering PARTS. This number is located on the body under the small feed table.


<p>The Serial Number of your Mill is.....</p> <p>Date Purchased.....19.....</p>

KEEP THIS MANUAL FOR FUTURE USE.


(Detail design subject to change without notice.)

TABLE OF CONTENTS

	<i>Page</i>
OPERATING INSTRUCTIONS	8-20
Anchor Stakes	8
Before Starting Mill	9
Bearings	11
Belt for Driving Mill	8
Chains	5
Chopping Dry Roughage	15
Chopping Roughage and Adding Grain	15
Clogged Feed Throat	15
Cutting Hay	15
Drive Pulley	8
Hammers	11
Knife Grinder	13
Lubrication	5-7
Molasses Pump	18-20
Preparing Green Ensilage	16
Replacing and Adjusting Knives	14
Shear Bar and Combing Bar	12
To Adjust Governor	9
To Adjust Fan Drive Belt	10
To Adjust Governor Drive Belt	9
To Adjust Compressor Web	14
To Vary Length of Cut	16
To Use as Hammer Mill Only	17
To Change Screens	10
To Sharpen Knives	13-14
SETTING-UP INSTRUCTIONS	21-31
Blower Pipes	24-25
Drive Belts	23
Drive Pulley	23
Feed Collector and Support	26
Grain Shield	31
Guards	23
Hay Roll Attachment	27
Knife Grinder	22
Molasses Pump	28-29
Secondary Shear Bar	30-31
Small Grain Hopper	23
Traveling Feed Table	21
CORRECT PULLEY SIZES FOR MILL	31-32
SCREENS TO USE FOR VARIOUS MATERIALS	34
INFORMATION ON V-BELT MAIN DRIVES	33
SPACE REQUIREMENTS FOR MILL	35-36
PARTS LIST AND ILLUSTRATIONS	37-76
NUMERICAL INDEX OF PARTS	77-80

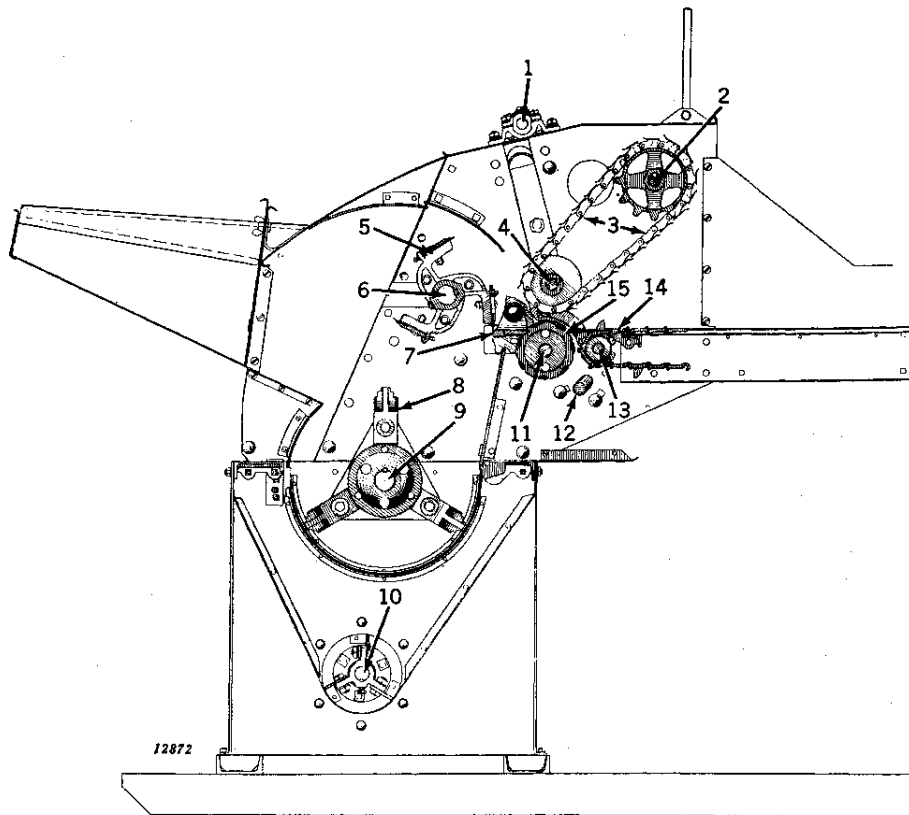


1. Governor Shaft.
2. Compressor Web Shaft.
3. Compressor Web.
4. Idler Roll Shaft.
5. Cutterhead.
6. Cutterhead Shaft.
7. Shear Bar.
8. Hammers on Rotor.
9. Rotor Shaft.
10. Blower Fan Shaft.
11. Feed Roll Shaft.
12. Jack Shaft.
13. Conveyor Shaft.
14. Feed Table Conveyor Chains.
15. Feed Roll.

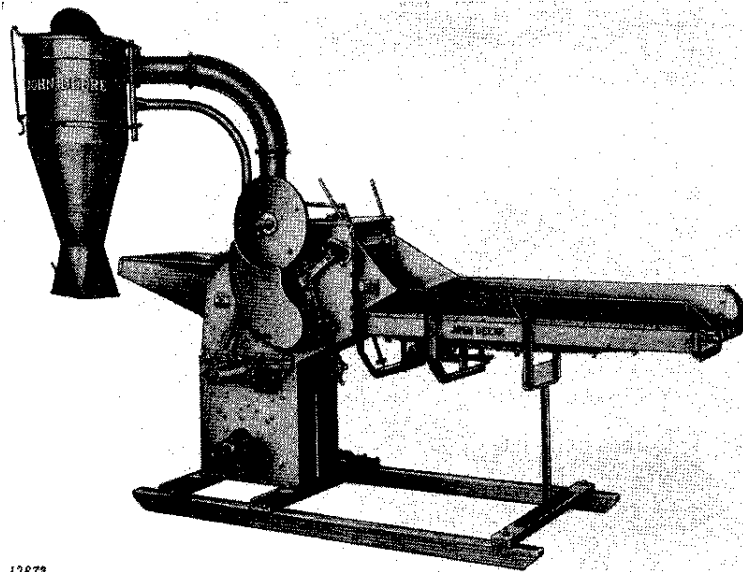

12873

John Deere No. 114-A Roughage Mill with Sacking Equipment

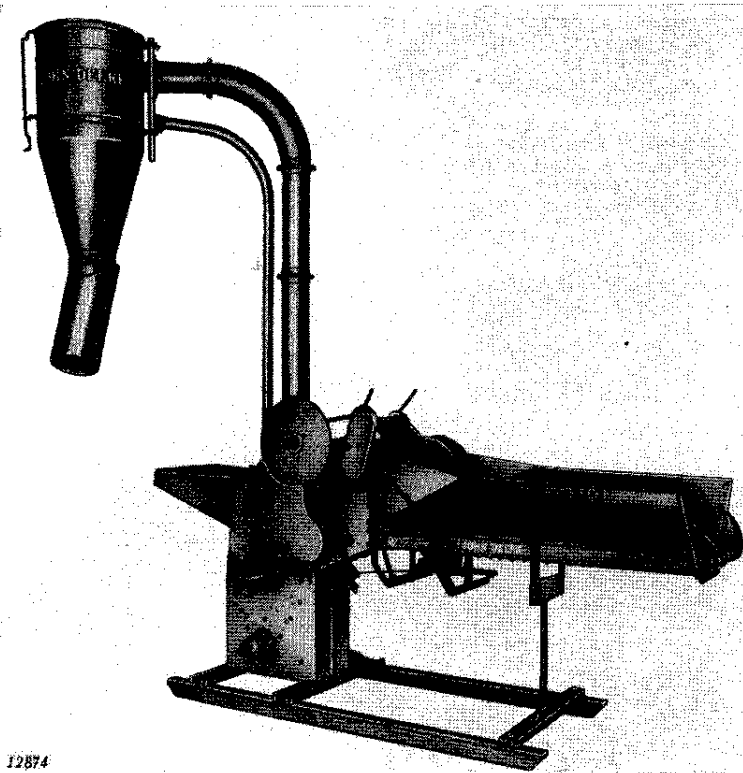

12874

John Deere No. 114-A Roughage Mill with Wagon Box Equipment, Hay Roll, and Sideboards

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com