

**540A, 640A
and 740A
Loaders**
(From Serial No. 012001)

**John Deere Arc-lès-Gray
OMCC42119 Issue B5**

European Edition
Printed in Germany
ANGLAIS

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS LOADER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS LOADER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this loader will relieve the manufacturer of all liability for any resulting damage or injury.

Predelivery Inspection

Dealer's name	Town	Dealer's Account No.	J.D. Branch No.
Servicing Dealer, if not identical with above — Name, Address			
Customer (initials and surname)		Street + No.	
Town and Postcode		Vehicle Registration No.	
Delivery Day	Month	Year	Machine Name
Date			
Product Identification No. (Serial No.)		Customer Group	
		A <input type="checkbox"/> B <input type="checkbox"/> C <input type="checkbox"/> D <input type="checkbox"/> E <input type="checkbox"/>	
		A = Farmer B = Contractor C = Commercial D = Community E = Home Owner	

TO THE DEALER

THE FOLLOWING PREDELIVERY SERVICE MUST be performed by you. Refer to the Operator's Manual for detailed information.

- | | | |
|---|--|---|
| <input type="checkbox"/> 1. Lubricate all grease fittings | <input type="checkbox"/> 2. Tighten all bolts and nuts to specified torque | <input type="checkbox"/> 3. Check and adjust tire pressures |
| | | <input type="checkbox"/> 4. Make a test run of the machine |

The following inspections have been made at the factory. Prior to delivery the following items must be rechecked by you. Refer to the Operator's Manual for detailed information.

Mark the YES box if condition WAS FOUND acceptable, or NO, if not. If the answer is NO, give a short explanation in the "COMMENTS" column. Following this, make corrections if necessary prior to delivery.

- | | | |
|---|--|---|
| <p>Yes No</p> <p><input type="checkbox"/> <input type="checkbox"/> 1. Loader installed correctly?</p> <p><input type="checkbox"/> <input type="checkbox"/> 2. Wheel treads correct?</p> <p><input type="checkbox"/> <input type="checkbox"/> 3. Operator's Manual given to customer?</p> <p><input type="checkbox"/> <input type="checkbox"/> 4. Have all controls and safety rules etc. been explained to the customer?</p> | <p>Yes No</p> <p><input type="checkbox"/> <input type="checkbox"/> 5. Loader functioning correctly?</p> <p><input type="checkbox"/> <input type="checkbox"/> 6. Attaching bolts tightened to specified torque?</p> <p><input type="checkbox"/> <input type="checkbox"/> 7. Loader lubricated?</p> <p><input type="checkbox"/> <input type="checkbox"/> 8. Are paint and decals smooth and neat?</p> | <p>Yes No</p> <p><input type="checkbox"/> <input type="checkbox"/> 9. Are hydraulic system lines free from leaks?</p> <p><input type="checkbox"/> <input type="checkbox"/> 10. Hydraulic lines correctly laid out?</p> <p><input type="checkbox"/> <input type="checkbox"/> 11. Transmission/hydraulic system oil level correct?</p> |
|---|--|---|

COMMENTS: _____

Delivery Report and Operator's Manual OMCC42119 Issue B5 were handed over to the customer together with the machine.

Dealer — Service Technician

Date

DISTRIBUTION:

1—white = JD Sales Branch, 2—green = Factory, 3—yellow = JD Dealer, 4—blue = Servicing Dealer, 5—pink = Customer

Contents

	Page		Page
Identification Views	00-1	Attaching the Loader	
Safety	05-1	Loader preparation	30-1
Safety Decals	10-1	Relieving hydraulic pressure	30-2
Application Charts		Connecting individual couplers	30-3
Approved tractors for 540A/540A NSL loader	15-1	Connecting the multi coupler	30-4
Approved tractors for 640A loader	15-2	Attaching the loader	30-4
Approved tractors for 740A loader	15-3	Connecting hose clamp	30-7
Approved front tires (540A/540A NSL)	15-4	Attaching/Detaching Attachments	
Approved front tires (640A)	15-4	Attaching the attachment	35-1
Approved front tires (740A)	15-5	Detaching the attachment	35-2
Preparing the Tractor		Storing hydraulic hoses	35-2
Checking front tire pressure	20-1	Protecting wiring harness	35-3
Checking front wheel bolts	20-1	Operating the Loader	
Removing front weights	20-1	Setting the self-leveling linkage	40-1
Adjusting front tread of tractor (540A/540A NSL)	20-2	Operating the selective control valves	40-3
Adjusting front tread of tractor (640A)	20-3	Operating the single-lever control	40-4
Adjusting front tread of tractor (740A)	20-4	Operating the 2-spool control valve	40-5
Adjusting rear tire spacing	20-7	Operating the diverter valve	40-6
Adding rear ballast (540A/540A NSL)	20-7	Operating the 3-spool control valve	40-7
Adding rear ballast (640A)	20-8	Locking / unlocking the single-lever control	40-8
Adding rear ballast (740A)	20-9	Swing-away single-lever control	40-9
Rear ballast box	20-9	Raising and lowering the loader	40-10
Tractor valve detent selector	20-10	Bucket level indicator	40-11
Detaching the Loader		Removing material from a pile	40-11
Loader preparation	25-1	Dumping the bucket	40-12
Disconnect the hose clamp	25-2	Digging	40-12
Lowering the parking stands	25-2	Leveling and scraping forward	40-13
Removing the mounting pins	25-3	Leveling in reverse	40-13
Detaching the loader	25-5	Driving on public roads	40-14
Relieving hydraulic pressure	25-6	Operating the Round Bale Fork	
Disconnecting individual couplers	25-7	Avoiding injury or death	45-1
Disconnecting the multi coupler	25-7	Picking up a round bale	45-2

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMCC42119 B5-19-28FEB95

COPYRIGHT© 1995
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Operating the Round Bale Gripper			
Avoiding injury or death	50-1	Single-lever control	70-9
Operating on 30, 40, 50 and 55 series tractors	50-2	One-way self-leveling valve (540A NSL)	70-10
Operating on 3000, 6000 and 7000 series tractors	50-3	Lubrication and Maintenance	
Handling a round bale	50-4	Service intervals	75-1
Transporting a round bale	50-5	Once a day	75-2
		Every 10 hours	75-2
		Auto-latch device	75-6
		Every 10/50 hours	75-7
Operating the Round Bale Elevator		Troubleshooting	
Avoiding injury or death	55-1	Hydraulic troubleshooting	80-1
Operating on 30, 40, 50 and 55 series tractors	55-2	Mechanical troubleshooting	80-2
Operating on 3000, 6000 and 7000 series tractors	55-3	Service	
Handling a round bale	55-4	Torques for hardware	85-1
Transporting a round bale	55-5	Tightening the control lever	85-2
		Hose connections (540A NSL)	85-3
		Hose connections (540A)	85-4
		Hose connections (640A-740A)	85-5
		Replacing hydraulic components	85-6
		Servicing the tractor	85-7
		Sharpening silage cutter blades	85-8
		Load holding valve microswitch	85-9
Operating the Square Bale Handler		Storage	
Avoiding injury or death	60-1	Preparing loader for storage	90-1
Operating on 30, 40, 50 and 55 series tractors	60-2	Storing the loader	90-1
Operating on 3000, 6000 and 7000 series tractors	60-3	Specifications	
Adjusting the tongue frame position	60-4	540A loader capacity	95-1
		540A NSL loader capacity	95-2
		640A loader capacity	95-3
		740A loader capacity	95-4
Operating the Silage Cutter		Serial Numbers	
Operating on 30, 40, 50 and 55 series tractors	65-1	Serial number plates	100-1
Operating on 3000, 6000 and 7000 series tractors	65-2	Product identification number	100-1
Operating in the silo	65-3	Bucket serial number	100-1
Attachments		Index	
Buckets	70-1		
Teeth for heavy-duty buckets	70-2		
Bucket cutting edge	70-2		
Pallet fork	70-3		
Round bale fork	70-3		
Square bale handler (640A-740A)	70-4		
Round bale gripper	70-5		
Round bale elevator (640A-740A)	70-5		
Round bale clamps	70-6		
Silage cutter (640A-740A)	70-6		
Manure / silage fork	70-7		
Tractor hood guard	70-7		
Conversion brackets	70-8		
Rear ballast box	70-8		
Quick dump valve (640A-740A)	70-8		
Diverter valve (3rd function)	70-9		

Identification Views



540A NSL Loader*



540A Loader

* NSL Loader: Non Self-Leveling Loader

CC.540FLE002594-19-28FEB95

Identification Views



CC000576

CC000576 -UN-29MAR95

640A Loader



CC 000643

CC000643 -UN-29MAR95

740A Loader

CC.540FLE002595-19-28FEB94

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

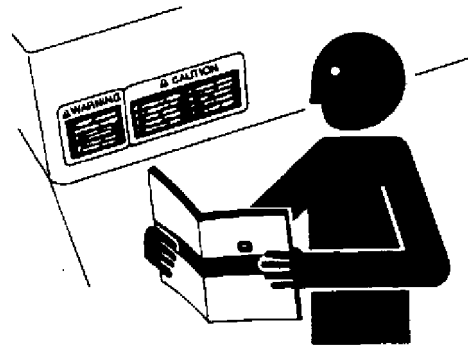

DX,READ -19-03MAR93

TS201 -UN-23AUG88

Buy Now



Our support email:

ebooklibonline@outlook.com