

# 55 FORAGE BLOWER



 
JOHN DEERE

## OPERATORS MANUAL 55 FORAGE BLOWER


OME16168 D1 English

**OME16168 D1**


LITHO IN THE U.S.A.  
ENGLISH



## INTRODUCTION

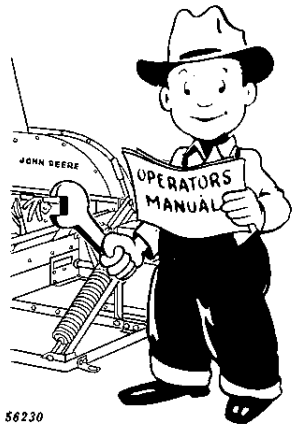


There is a  
**RIGHT WAY**  
←  
and a  
**WRONG WAY**  
→  
to do  
**Everything**

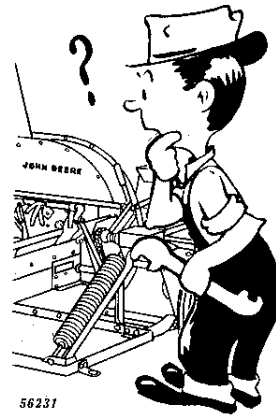

Your new 55 Forage Blower is a dependable machine. With proper care and operation you can expect to receive the service and long life designed and built into it. Like any precision machine, your blower will require a certain amount of attention at regular intervals. When any questions arise regarding lubrication, operation, or maintenance, use your manual as a guide to service your machine the **RIGHT WAY**.

If you need additional information or if your blower requires special servicing, see your John Deere dealer—he has all the facilities required to keep your blower in A-1 condition. He will be glad to serve you.

When in need of parts either to replace worn parts or to make emergency repairs, see your local John Deere dealer.

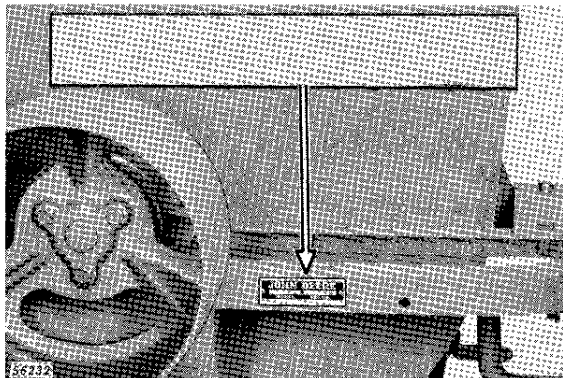


When ordering parts, give your dealer the serial number of your blower. This information will help him give you prompt and efficient service.

The serial number of your blower is located on the rear frame angle to the right of the drive pulley. (Record it in the space at the left.)

# TABLE OF CONTENTS

	<i>Page</i>
<b>SPECIFICATIONS</b>	
Identification View .....	2
Specifications .....	3
<b>OPERATION AND ADJUSTMENTS</b>	
Description .....	4
Before Operation .....	4
Locating the Blower at Silo .....	4
Blower Pipe and Hinged Deflector .....	4
Securing Blower Pipe .....	5
Bucket Pipe and Distributor Pipe .....	5
Elbows .....	6
Operation .....	6
Blower Fan Speed .....	6
V-Belt Adjustment .....	6
Fan and Bearings .....	7
Conveyor Stand .....	7
Conveyor Belt Adjustment .....	7
Conveyor Side Strippers .....	8
Conveyor End Strippers .....	8
Conveyor Clutch .....	8
Conveyor Hook .....	8
Conveyor Lift Spring Adjustment .....	8
Conveyor Leveler .....	9
Leveler Pitman .....	9
Conveyor Drive Chain .....	9
Transporting Blower .....	10
Storage .....	10
Pneumatic Tires .....	10
Safety Suggestions .....	11
Blower Pulleys .....	12
Speed and Diameter of Pulleys .....	13
Blower Drive Belt .....	13
<b>LUBRICATION</b>	
Blower .....	14
Attachments .....	15
<b>ATTACHMENTS</b>	
Attachments and Operation .....	16

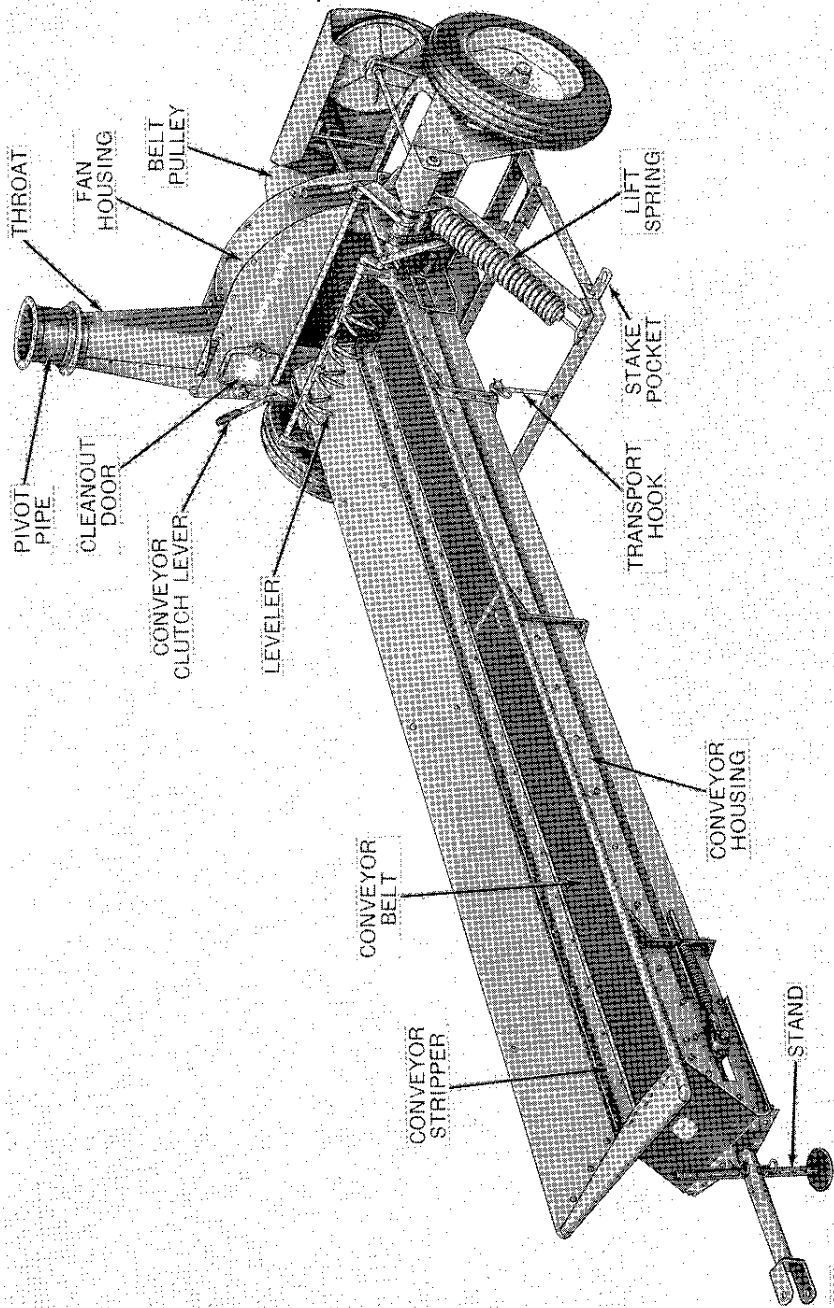

55 Forage Blower

## SPECIFICATIONS

Width in Operating and Transport Positions.....	6 Ft. 4 In.
Length.....	15 Ft. 6 In.
Height in Transport.....	5 Ft. 8 In.
Height When Conveyor Is Raised.....	12 Ft. 5 In.
Weight (Less Pipe).....	1033 Lbs. (Approx.)
Conveyor Belt.....	15-1/4 In. Wide
Conveyor.....	Hinged—May Be Raised to Allow Wagon to Pass
Length.....	11 Ft. 6 In.
Width.....	2 Ft. 6 In.
Height.....	2 Ft.
Blower Fan.....	Steel, 4-Blade, 34 In. Diameter
Fan Speed.....	.850 to 1000 rpm
Tires (Pneumatic Implement).....	Size: 4-Ply 5:90 x 15 Pressure: 23 Lbs.
Blower Pipe.....	Diameter: 8-In. Length: 1, 2, 4, and 7 Ft. Telescoping Section: 4 to 6-1/2 Ft.
Size of Tractor Recommended.....	2-Plow Tractor or Larger Single Phase Electric Motor 10 to 20 h.p.
Belt Pulley.....	Face Width 7-3/4 In. by 10-1/2-, 12-, 13-1/2-, or 15- In. Diameter as Required for Tractor Used .540 or 1000 rpm Available as Attachment
Power Take-Off.....	

*NOTE: Right-and left-hand referred to in this manual are determined from a position at the rear of the machine facing in the direction of travel in transport.*

*Specifications and design subject to change without notice.*

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)