


John Deere

1263

Harvester

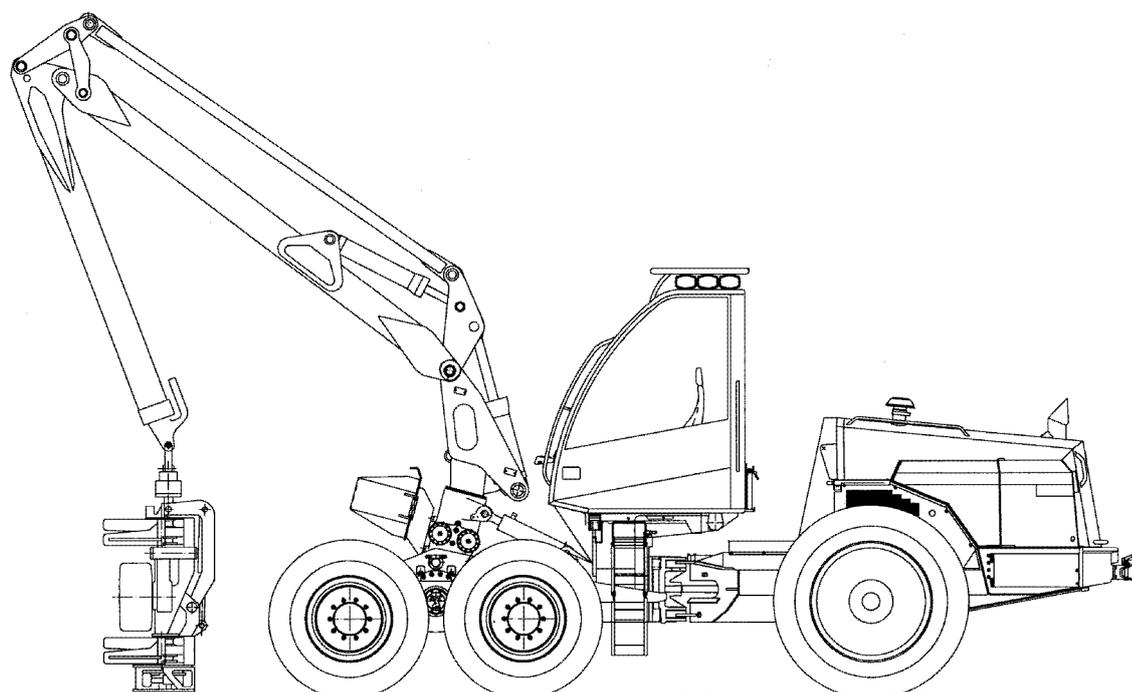

OMF061744

Operator's and Maintenance Manual

Serial number WH1263X005001...

ENG

John Deere

Harvester

OMF061744

**Operator's and
Maintenance Manual**

Serial number WH1263X005001...

ENG

OPERATOR'S AND MAINTENANCE MANUAL

John Deere Harvester

1263

| | |
|------------------------|-----------|
| INTRODUCTION | 1 |
| WARRANTY | 2 |
| SAFETY INSTRUCTIONS | 3 |
| CABIN AND CONTROLS | 4 |
| OPERATING INSTRUCTIONS | 5 |
| MAINTENANCE | 6 |
| HYDRAULIC SYSTEM | 7 |
| ELECTRICAL SYSTEM | 8 |
| TRANSMISSION | 9 |
| BOOM | 10 |
| EQUIPMENT | 11 |
| TECHNICAL DATA | 12 |
| TROUBLESHOOTING | 13 |

The information contained in this manual is comprised of instructions which will assist the operator to operate the machine in a safe and efficient manner. Make sure this manual is always close at hand and available to all who work on the machine. Should this manual be lost or should it deteriorate to an unintelligible state, contact John Deere or your nearest John Deere dealer for a replacement manual.

If you sell the machine, be sure to give this manual to the new owners.

Continuing product improvement made by John Deere may result in changes to the machine which are not covered in this manual. Should you need up-to-date information about your machine or should you have questions in regards to this manual, please contact John Deere or your John Deere dealer.



CAUTION

Only persons whose training has been approved by John Deere are permitted to operate John Deere machinery.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Therefore, it is of paramount importance that all the instructions given in this manual and during training be followed when the machine is operated or serviced.

The safety rules are given in the group 3.

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT E 2001
DEERE & COMPANY
Moline, Illinois
All rights reserved.

| | | |
|-----------|---|------------|
| 1. | Introduction | 1-1 |
| 1.1 | General | 1-2 |
| 1.2 | Location of rating plates and serial numbers | 1-3 |
| 2. | Warranty | 2-1 |
| 2.1 | Warranty information | 2-1 |
| 3. | Safety instructions | 3-1 |
| 3.1 | Safety features | 3-1 |
| 3.2 | General | 3-2 |
| 3.3 | Safety symbol | 3-2 |
| 3.3.1 | Signal words | 3-3 |
| 3.4 | General safety rules | 3-3 |
| 3.4.1 | Protective Structures | 3-6 |
| 3.4.2 | Boarding the machine | 3-7 |
| 3.5 | Operating safety precautions | 3-8 |
| 3.5.1 | Alarms | 3-10 |
| 3.5.2 | Secondary exits | 3-11 |
| 3.5.3 | Driving on frozen waters | 3-11 |
| 3.5.4 | Power cables | 3-12 |
| 3.5.5 | Driving on public roads and other transport driving | 3-13 |
| 3.6 | Servicing safety precautions | 3-14 |
| 3.7 | Fire prevention | 3-18 |
| 3.7.1 | What to do if the machine catches fire | 3-19 |
| 3.8 | Safety signs | 3-20 |
| 4. | Cabin and controls | 4-1 |
| 4.1 | Main switch | 4-2 |
| 4.2 | Control lights | 4-3 |
| 4.2.1 | Warning lamps and beeper on the roof | 4-3 |
| 4.3 | Dashboard | 4-4 |
| 4.3.1 | Ignition switch | 4-5 |
| 4.3.2 | Window wipers and washers | 4-6 |
| 4.4 | Control panels | 4-7 |
| 4.4.1 | Boom control levers | 4-8 |
| 4.5 | Tj 3000, functions | 4-9 |
| 4.6 | Air conditioner | 4-10 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com