

1270D Harvester Serial Number WH1270D000003-

OPERATOR'S MANUAL 1270D Harvester OMF063723 (ENGLISH)

CALIFORNIA Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

**Worldwide Construction
And Forestry Division**

LITHO IN FINLAND, REV 210203

Introduction

Introduction

The information contained in this manual is comprised of instructions which will assist the operator to operate the machine in a safe and efficient manner. Make sure this manual is always close at hand and available to all who work on the machine. Should this manual be lost or should it deteriorate to an unintelligible state, contact Timberjack or your nearest Timberjack dealer for a replacement manual.

If you sell the machine, be sure to give this manual to the new owners.

Continuing product improvement made by Timberjack may result in changes to the machine which are not covered in this manual. Should you need up-to-date information about your machine or should you have questions in regards to this manual, please contact Timberjack or your Timberjack dealer.



CAUTION: Only persons whose training has been approved by Timberjack are permitted to operate Timberjack machinery.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Therefore, it is of paramount importance that all the instructions given in this manual and during training be followed when the machine is operated or serviced.

This instruction manual describes the operation of your **Timberjack 1270D** single grip harvester.

Only operators and service personnel who have completed and passed Timberjack's course for the 1270D may use the machine.

Furthermore, the operator must have studied and understood the entire manual.

The manual provides you with information about the machine's design and function, which is necessary in order to use and look after the machine in the proper manner. It also serves to offer guidance during maintenance and certain adjustment work.

Please contact your nearest authorized service workshop for more complicated maintenance and repair work. Our service personnel have the training and special tools that are required for such tasks.

AK12300,0000030 -19-10OCT01-1/1

Timberjack 1270D Harvester

Timberjack 1270D harvester is intended for felling, delimiting and crosscutting trees. The machine must not be used for any other purposes.

We designed the Timberjack 1270D harvester to operate under difficult off-road circumstances. Still it is important that you always adapt your driving speed to the surroundings. Use chains if necessary.


Regular servicing and proper operation is of vital significance for long service life of the machine. The instructions contained in this manual should therefore be adhered to.

Experience shows that a thorough check of the machine at regular intervals is a guarantee for favourable cost efficiency.

Do not pollute the environment. It is imperative that you do not allow oil to leak into the ground or water because it only takes one liter of mineral oil to contaminate one million liters of water. Should you see a leaky joint, fix it immediately.

Remember fire prevention. Keep the machine clean at all times for this reduces the risk of overheating and chance of a fire starting. Have the fire extinguishers checked regularly.

Location of Rating Plates and Serial Numbers

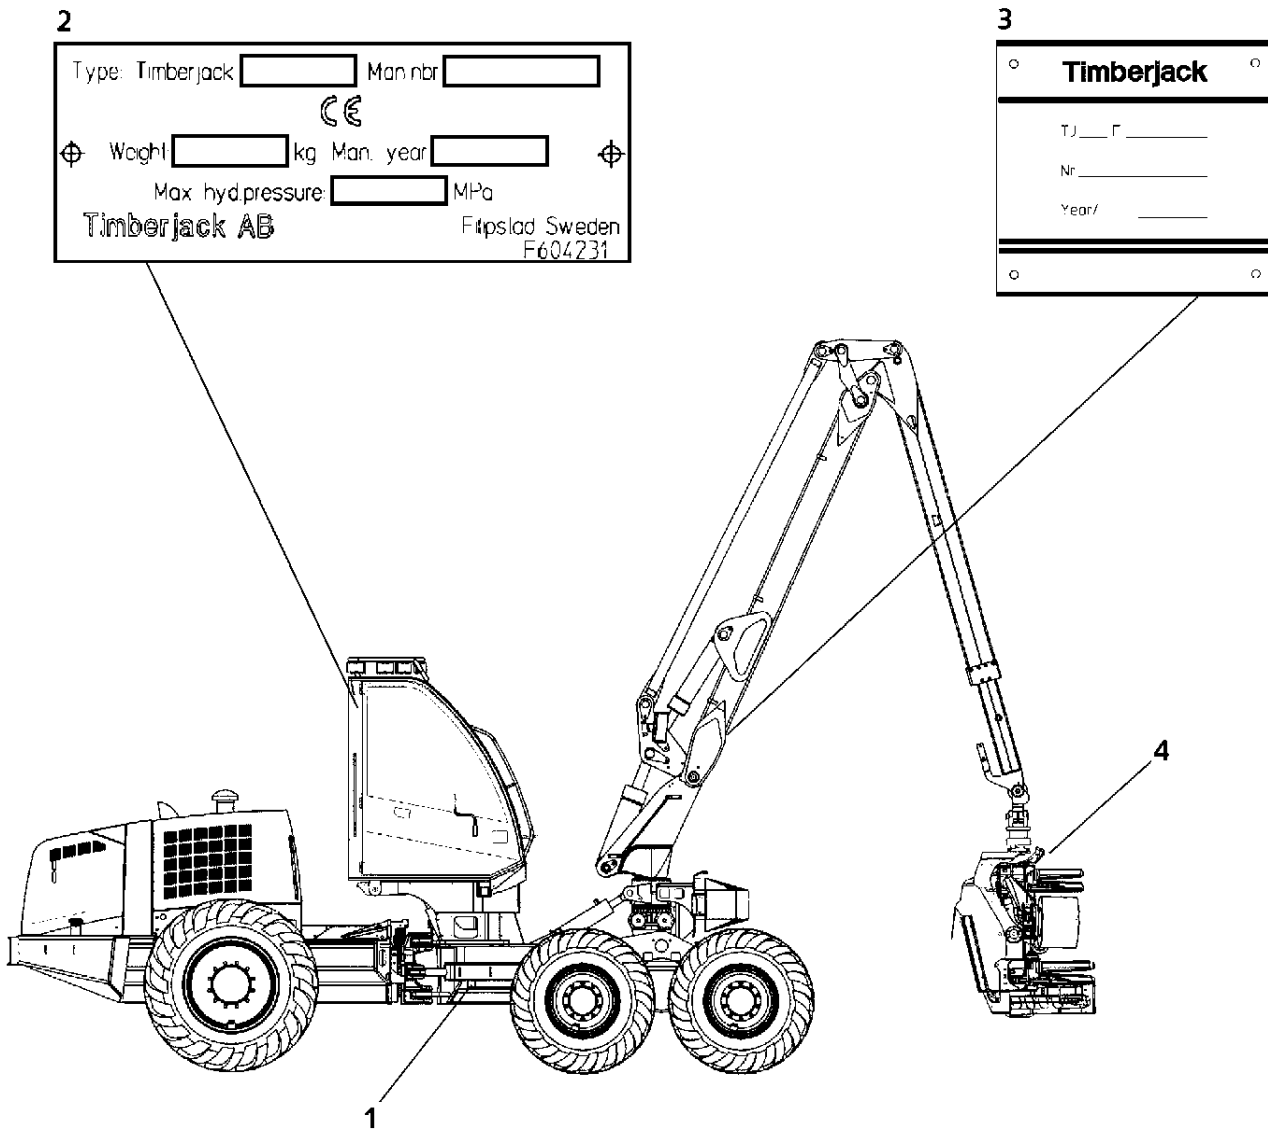

1. Punched serial number is located on right side of the frame.
2. Rating plate inside the cabin on right rear cab pillar.

3. Serial number for the boom.
4. Serial number for the harvester head.

Warranty

Timberjack provides a warranty for the machine in accordance with the standard conditions of the Timberjack Group.

The following prerequisites apply in relation to our responsibility for machines that are made by us:

- The machine is exclusively operated and maintained by experienced personnel who have been trained by Timberjack or by a dealer authorized by Timberjack.
- The machine must be operated and maintained in accordance with the instructions provided in this manual.
- Classifications for fuel, lubricants and fluids stated in the instructions must be adhered to.
- Genuine Timberjack spare parts must be used.

AK12300,000002C –19–09OCT01–1/1

Warranty Service

The machine is tested and test-run prior to delivery and it can be put into use immediately. To ensure reliable operation of the machine it is essential that thorough servicing of the machine is made after putting it into operation.

A service workshop authorized by the Timberjack Group is to carry out service on the machine after about 250 hours of operation to keep the guarantee valid.

Naturally the validity of warranty requires that during the warranty period all the maintenance procedures have to be performed according to the maintenance intervals detailed in this manual.

AK12300,000002D –19–09OCT01–1/1

Contents

	Page		Page
Safety — Safety Features			
Timberjack 1270D Harvester Safety Features	1-1-1	Shut Down Engine, Disconnect Battery Cable	1-4-4
Safety — General Precautions			
General	1-2-1	Service Cooling System Safely	1-4-4
Recognize Safety Information	1-2-1	Prevent Battery Explosions	1-4-4
Understand Signal Words	1-2-1	Prevent Acid Burns	1-4-5
Prepare for Emergencies	1-2-2	Start Only from Operator's Seat	1-4-5
Wear Protective Clothing	1-2-2	Beware of Exhaust Fumes	1-4-6
Handle Fluids Safely — Avoid Fires	1-2-3	Avoid High Pressure Fluids	1-4-6
Handle Chemical Products Safely	1-2-3	Avoid Heating near Pressurized Fluid Lines	1-4-7
Replace Safety Signs	1-2-3	Make Welding Repairs Safely	1-4-7
Maintain Safety Cabin	1-2-4	Service Tires Safely	1-4-8
Install Radio Transmitters Properly	1-2-4	Refueling and Servicing Fuel System	1-4-8
Safety — Operating Precautions			
Inspect Machine	1-3-1	Dispose of Waste Properly	1-4-9
Attach Do not Operate Tag	1-3-1	Cabin and Controls	
Prevent Machine Runaway	1-3-2	Cab Component Locator	2-1-1
Use Handholds and Steps	1-3-3	Main Switch	2-1-2
Prepare Secondary Exits before Starting	1-3-4	Control Lights	2-1-2
Handle Starting Fluids Safely	1-3-4	Dashboard	2-1-4
Pay Attention to Bystanders	1-3-5	Boom Controls	2-1-7
Keep Riders of the Machine	1-3-5	Control Keypads	2-1-8
Use Seat Belt	1-3-6	Air Conditioner, Operation Instructions	2-1-9
Avoid Risks under Difficult Conditions	1-3-6	Pedals	2-1-10
Stop Working if Machine Gives an Alarm	1-3-7	Adjusting the Operator's Seat	2-1-11
Keep Danger Zone Clear	1-3-7	Operating Instructions	
Avoid Crush Points	1-3-8	General	3-1-1
Avoid Power Cables	1-3-9	Safety Switches and Emergency Stop	3-1-1
Driving/Transporting on Public Roads	1-3-10	Boom	3-1-2
Ensure Safety before Driving on Frozen Waters	1-3-11	Brakes	3-1-2
Prevent Fires	1-3-12	Steering	3-1-3
What to Do if the Machine Fires?	1-3-13	High/Low Gear and Front Wheel Drive	3-1-4
Safety — Maintenance Precautions			
General	1-4-1	Differential Locks	3-1-5
Before Servicing	1-4-2	Frame Brake	3-1-5
Use Proper Clothing	1-4-2	Before Starting the Engine for the First Time in a Working Day	3-1-6
Use Proper Tools	1-4-3	Starting the Engine	3-1-7
Support Machine Properly	1-4-3	Cold Weather Starting	3-1-9
		After Starting	3-1-10
		Turning off the Engine	3-1-11

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2002
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Off-Road Driving	3-1-12	At the End of the Day Make the	
On-Road Driving	3-1-13	Following Maintenance and Check-Ups	4-4-5
		Fill Up the Fuel Tank	4-4-6
 Transporting and Towing			
Transporting the Machine	3-2-1	Maintenance — Every 50 Hours or Weekly	
Towing the Machine	3-2-2	Check the Driving Brake Oil Level and	
Releasing the Parking Brake	3-2-3	Window Washer Fluid Level	4-5-1
Disengaging the Power Transmission		Grease the Center Hinge Bearings and	
System	3-2-3	Steering Cylinder Bearings	4-5-1
Releasing the Work Brake	3-2-4	Other Procedures	4-5-1
Releasing the Steering	3-2-4		
Stowing a Disabled Boom	3-2-5	Maintenance — Every 250 Hours	
		Clean the Machine	4-6-1
Maintenance — General		Inspect Coolant Pump Visually	4-6-1
Maintenance	4-1-1	Check the Drive Belts Condition	4-6-1
Servicing Safety Precautions	4-1-2	Check Oil Levels in the High/Low Gear,	
Assembly Instructions	4-1-3	Differentials, Bogie Casings and Hub	
Tightening Torque for Bolted Joints	4-1-5	Gears	4-6-2
Welding Instructions	4-1-7	Grease Bogie Bearings	4-6-3
Instructions for Cleaning of Lexan/Marguard		Other Procedures	4-6-4
Windows	4-1-9		
Wheels	4-1-10	Maintenance — Every 500 Hours	
Changing Wheels	4-1-10	Change Engine Oil And Oil Filter	4-7-1
Anti-Slip Fitting	4-1-11	Clean Crank Case Vent Tube	4-7-2
Bogie Tracks, Fitting	4-1-12	Check Air Intake System	4-7-2
		Clean Fuel Strainer	4-7-3
Maintenance — Lubricants and Fluids		Replace Main Fuel Filter	4-7-4
Recommended Lubricants and Fluids	4-2-1	Check Belt Tensioner and Belt Wear	4-7-5
Capacities	4-2-2	Check Crankshaft Vibration Damper	4-7-6
Diesel Fuel	4-2-3	Check Cooling System and Coolant Solution . .	4-7-8
Engine Oil	4-2-4	Remove Sediment and Water from the	
Coolant	4-2-5	Fuel Tank	4-7-9
Grease	4-2-5	Check the Batteries for Charge and	
Hydraulic Oil	4-2-6	Electrolyte Level	4-7-10
Brake Fluid	4-2-6	Check Wear on Frame Brake Linings	4-7-10
Gear Oil	4-2-6	Grease the Driveshafts	4-7-11
		Other Procedures	4-7-11
Maintenance Intervals		Maintenance — Every 1000 Hours	
Checklist — Base Machine	4-3-1	Change Hydraulic Oil and Return Filters	
Required Parts	4-3-1	(2 pcs)	4-8-1
		Change the Hydraulic Tank Breather	4-8-2
Maintenance — Every 10 Hours or Daily		Change the Filter of the Driving Pump	4-8-2
Check the Hydraulic Oil Level	4-4-1	Check the Exhaust Manifold	4-8-3
Check the Engine Oil Level	4-4-1	Grease Stairs Linkage	4-8-3
Check the Fuel Filter Screen	4-4-2	Other Procedures	4-8-3
Check the Coolant Level	4-4-2		
Check the Air Filter Indicator	4-4-3	Maintenance — Every 2000 Hours	
Check the Radiator Grille Cleanliness	4-4-4	Check Valve Clearance	4-9-1
Check the Tires Visually for Air Pressure		Changing the Coolant	4-9-3
and Overall Shape	4-4-4		
Other Procedures	4-4-5		

Continued on next page

	Page		Page
Change Oil in the High/Low Gear, Differentials, Bogie Casings and Hub Gears	4-9-5		
Other Procedures	4-9-9		
Maintenance — Periodic Maintenance		Brake System — Checking and Adjusting	
Maintenance after every Six Months	4-10-1	Checking the Brakes	5-5-1
Annual Maintenance	4-10-1	Mechanical Adjustment of Brakes	5-5-2
		Checking the Service Brake	5-5-3
Maintenance — As Required		Checking the Work Brake	5-5-3
When Necessary, Service and Adjust the Following	4-11-1	Checking the Load and Release Range	5-5-4
Adjusting the Rotator Link Brakes	4-11-1	Checking the Relief Valve of the Brake Charging Pressure	5-5-5
Cleaning the Fuel Tank Filler Filter	4-11-2		
Bleeding the Fuel System	4-11-2	Hydraulic System — Hydraulic Scheme	
		Hydraulic Scheme	5-6-1
Maintenance — Boom			
Maintenance Intervals	4-12-1	Electrical System	
Every 10 Hours or Daily	4-12-2	Batteries	6-1-1
Every 50 Hours or Weekly	4-12-3	Using Booster Batteries	6-1-2
Every 250 Hours	4-12-5	Main Switch and Fuses	6-1-3
Every 1000 Hours	4-12-6	Cabin Fuses	6-1-4
Every 2000 Hours	4-12-6	Fuse Box F1	6-1-5
		Fuse Box F2	6-1-7
Hydraulic System — General			
Working Hydraulic System	5-1-1	Electrical System — Sensors	
Hydrostatic System	5-1-1	Engine	6-2-1
Hydraulic Tank	5-1-2	Hydraulic Tank	6-2-2
Vacuum Pump	5-1-4	Transmission	6-2-2
Taking an Oil Sample from Hydraulic System	5-1-5	Brake System	6-2-3
		Fuel System	6-2-3
Hydraulic System — Bleeding		Position Sensors	6-2-4
Bleeding Air from the Hydraulic System	5-2-1		
Bleeding Air from the Hydrostatic System	5-2-2	Electrical System — Electrical Scheme	
Bleeding Air From the Working Hydraulic System	5-2-3	Electrical Scheme	6-3-1
Bleeding the Brakes	5-2-5		
		Transmission	
Hydrostatic System — Checking and Adjusting		Transmission Operation	7-1-1
Supply Pressure on the Drive Pump	5-3-1	Hydrostatic System	7-1-2
Drive Pressure	5-3-2	Control of Transmission	7-1-3
Drive Motor	5-3-3	Brakes	7-1-4
Working Hydraulics — Checking and Adjusting		Boom	
General	5-4-1	General Description of the Boom	8-1-1
Pilot Pressure, Working Hydraulics	5-4-1	Operating Safety Precautions	8-1-1
Boom Valve, LS Pressure Limits	5-4-2	General Operating Instructions	8-1-2
Maximum Pressure of the Working Hydraulic Pump	5-4-3	Technical Data	8-1-3
Pressure Difference Dp	5-4-4	Tj 210 H 90	8-1-3
Main Pressure Relief Valve	5-4-5	Tj 210 H 97	8-1-4
		Tj 210 H 115	8-1-4
		Rotator AV12S	8-1-4
		Equipment — Air Conditioner	
		Air Conditioner	9-1-1
		Danger and Precautions	9-1-2

Continued on next page

Buy Now



Our support email:

ebooklibonline@outlook.com