

FS20 DISC SAW FELLING HEAD

S/N WCFS20X003001 – WCFS20X003039

OPERATOR'S MANUAL FS20 DISC SAW FELLING HEAD OMF382856_01

**CALIFORNIA
Proposition 65 Warning**

**Diesel engine exhaust and some of its constituents
are known to the State of California to cause cancer,
birth defects and other reproductive harm.**

Worldwide Construction and Forestry Division

English

Table of Contents

Section	Description
1	Introduction
2	Warranty
3	Safety Rules
4	Description
5	Operation
6	Lubrication & Maintenance
7	Hydraulic System
8	Electrical System
9	Troubleshooting
10	Specifications
11	Miscellaneous
12	Alphabetical Index

Table of Contents

1. Introduction	1-1
1.1 Foreword	1-2
1.2 Model and Serial Number Record	1-3
1.3 Non-Approved Field Product Changes	1-4
<hr/>	
2. Warranty	2-1
2.1 Warranty Certificate	2-2
<hr/>	
3. Safety Rules	3-1
3.1 General	3-2
3.2 Safety Symbol	3-2
3.3 Understanding Signal Words	3-2
3.4 General Safety Precautions	3-3
3.5 Operating Safety Precautions	3-6
3.6 Servicing Safety Precautions	3-7
3.7 Fire Prevention	3-10
<hr/>	
4. Description	4-1
4.1 Nomenclature	4-2
4.1.1 FS20 Felling Head Description	4-2
4.2 Decal Application	4-3
4.2.1 FS20 Swing to Tree Decal Location (Right Side)	4-3
4.2.2 FS20 Swing to Tree Decal Location (Left Side)	4-4
4.3 Saw Drive Components	4-5
4.4 Saw Drive Description	4-6
4.5 Disc Saw Blade Description	4-7
4.5.1 Serial Number Location	4-7
4.5.2 Blade with Hardened Teeth	4-7
4.5.3 Blade with Curved Carbide Tipped Teeth	4-7
4.6 Disc Saw Blade and Tooth Data	4-8


Table of Contents

5. Operation	5-1
5.1 Basic Operation	5-2
5.1.1 Principle of Operation	5-2
5.1.2 Blade Feeding Speed	5-3
5.1.3 General Method of Operation	5-3
5.1.4 Stopping the Disc Saw Blade	5-4
5.2 Operating Instructions	5-5
5.2.1 Cutting Multiple Trees	5-5
5.2.2 Handling The Tree	5-7
<hr/>	
6. Lubrication and Maintenance	6-1
6.1 Maintenance Schedule	6-2
6.2 Maintenance Procedures	6-3
6.2.1 General	6-3
6.2.2 Tools Required	6-4
6.2.3 Bolt Torque Chart	6-5
6.2.4 Maintenance - 8 Hours	6-6
6.2.5 Maintenance - First 25 Hours	6-14
6.2.6 Maintenance - 125 Hours	6-19
6.2.7 Maintenance - 250 Hours	6-21
6.3 Unscheduled Maintenance	6-22
6.3.1 Disc Saw Blade Inspection	6-22
6.3.2 Saw Tooth Replacement	6-24
6.3.3 Disc Saw Blade Removal	6-26
6.3.4 Disc Saw Blade Installation	6-29
6.3.5 Check All Hydraulic Hoses and Fittings	6-31
6.3.6 Disc Saw Blade Gauge	6-31
6.4 Fluids and Lubricants	6-35
6.4.1 Recommended Hydraulic System Fluids	6-35

Table of Contents

7. Hydraulic System	7-1
7.1 Initial Pump & Motor Startup	7-2
7.2 Initial Saw Speed Adjustment	7-2
7.3 Initial Saw Circuit Begin of Stroke Adjustment & Pressure Setting	7-2
<hr/>	
8. Electrical System	8-1
8.1 Saw Speed Sense Equipment	8-2
8.2 Saw Speed Tachometer	8-4
<hr/>	
9. Troubleshooting	9-1
9.1 Disc Saw Blade Stalling	9-2
9.1.1 Operator Technique	9-2
9.1.2 Disc Saw Blade Maintenance	9-2
9.1.3 Hydraulic	9-3
9.1.4 Can't Obtain Maximum Disc Saw Blade Speed	9-3
<hr/>	
10. Specifications	10-1
10.1 Dimensions	10-2
10.2 Specifications	10-3
10.2.1 General	10-3
<hr/>	
11. Miscellaneous	11-1
11.1 Measurement Conversions	11-2
11.1.1 Miscellaneous Conversions	11-3
11.1.2 Metric and Imperial Unit Expressions	11-3
11.2 Wood Measurement Equivalents	11-4
11.3 Weights of Commercially Important Woods	11-5
11.4 General Bolt Torque Values	11-6

1. Introduction

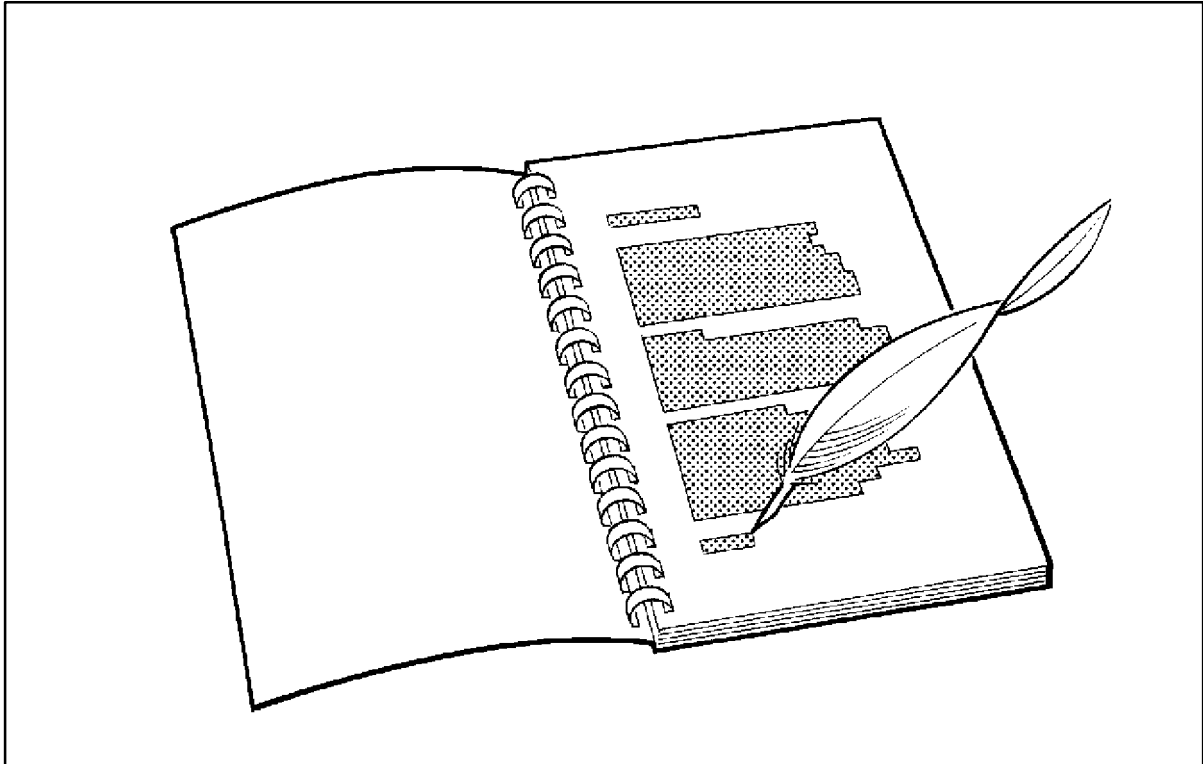

<u>1.1 Foreword</u>	<u>1-2</u>
<u>1.2 Customer Feedback</u>	<u>1-3</u>
<u>1.3 Model and Serial Number Record</u>	<u>1-4</u>
<u>1.4 Non-Approved Field Product Changes</u>	<u>1-5</u>

1.1 Foreword

To assist the operator in becoming familiar with the many features of the Felling Head, and thereby quickly become proficient in the operation and periodic maintenance procedures, this manual is provided with detailed operating and maintenance instructions as well as safety information and equipment data.

Throughout this manual, references are made to the front, rear, left, and right side of the machine. Consider the front from a seated position in the operator's seat with the felling head directly in front of you and the felling head arms as being left and right.



Where applicable throughout the text, "Safety Alert" symbols have been used to indicate important safety measures. Read carefully, understand, and follow these instructions to prevent hazardous situations that could lead to risk of personal injury.

The instructions and procedures in this manual cover the felling heads with the most commonly used options; therefore pictorial presentation in some areas may vary slightly from the actual machine. This variation, however, does not have any impact on the accuracy of the written information.

The information contained in this manual is current at the time of publication; however, continuing improvement may result in changes to the machine which are not covered. Should information regarding such changes or further information on the machine be required, please contact your dealer.

1.2 Customer Feedback

HELP!! HELP!! HELP!! HELP!!

We need your help to continually improve our technical publications. Please FAX or mail your comments, ideas and improvements.

SEND TO: **John Deere**
 P.O. Box 160
 Attn: Publications Supervisor,
 Product Support Department
 Woodstock, Ontario, Canada
 N4S 7X1

FAX NUMBER: 519-537-2664

Ideas, Comments (Please State Page Number) _____

OVERALL, how would you rate the quality of "ALL" manuals provided ? (Check One)

Poor	Fair	Good	Very Good	Excellent
1 2	3 4	5 6	7 8	9 10

Company Name _____
Address _____
Phone _____
FAX No. _____
Dealer Acct. No. _____

THANK YOU!

Buy Now



Our support email:

ebooklibonline@outlook.com