

953G FELLER-BUNCHER

(Serial No. WC953GX004002-)

OPERATOR'S MANUAL 953G FELLER-BUNCHER

OMF383512 H2 (ENGLISH)

CALIFORNIA
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

 **WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

**Worldwide Construction
And Forestry Division**
(This manual replaces OMT187540 F1)
LITHO IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel. Operating instructions assume that the traction drive sprockets are at the rear of the machine.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers section. Accurately

record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

DX,IFC7 -19-16NOV01-1/1

Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

SEND TO: John Deere
925 Devonshire Avenue
Woodstock ON, Canada, N4S 5S1
Attn: Supervisor - Technical Manuals

FAX NUMBER: 519-537-2664

Ideas, Comments (Please State Page Number): _____

OVERALL, how would you rate the quality of this publication? (Check one)

	Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10	

Company Name: _____

Technician Name: _____

Address: _____

Phone: _____

Fax No.: _____

Dealer Acct. No.: _____

THANK YOU!

Contents

	Page		Page
Safety — Safety Features			
953G Feller-Buncher Safety Features	1-1-1	Remove Paint Before Welding or Heating	1-4-2
		Make Welding Repairs Safely	1-4-2
		Prevent Acid Burns	1-4-3
Safety — General Precautions			
Recognize Safety Information	1-2-1	Safety — Safety Signs	
Follow Safety Instructions	1-2-1	953G Feller- Buncher Cab Safety Signs	1-5-1
Operate Only If Qualified	1-2-1	953G Feller-Buncher Cab Safety Signs	1-5-2
Wear Protective Equipment	1-2-2	953G Feller- Buncher Engine/Enclosure Safety Signs	1-5-3
Avoid Unauthorized Machine Modifications	1-2-2		
Inspect Machine	1-2-2	Operator's Station	
Stay Clear Of Moving Parts	1-2-3	Operator Controls and Instruments	2-1-1
Avoid High-Pressure Fluids	1-2-3	Gauges	2-1-2
Beware Of Exhaust Fumes	1-2-3	Warning Lights	2-1-4
Prevent Fires	1-2-4	Front Cab Lights	2-1-6
What To Do If the Machine Catches Fire	1-2-4	Front Enclosure And Cab Side Light	2-1-6
Prevent Battery Explosions	1-2-4	Gauge and Switch Light Dimmer Control	2-1-6
Handle Chemical Products Safely	1-2-5	Dome Light	2-1-6
Dispose of Waste Properly	1-2-5	Ignition Key Switch	2-1-7
Prepare for Emergencies	1-2-5	Horn Override and Lamp Test Switch	2-1-7
Clean Trash from Machine	1-2-6	Engine Throttle Speed Switch	2-1-8
Control Pattern	1-2-6	Boom Swing Brake Control Switch	2-1-9
		Travel Speed Control Switch	2-1-9
		Air Conditioner/Heater Controls	2-1-10
		Saw Drive Switch	2-1-10
		Pilot Hydraulic Circuit and Reset Switch	2-1-11
		Forward Horn	2-1-12
		Travel Alarm	2-1-13
		Circuit Breakers and Relays	2-1-13
		Defroster Fan	2-1-14
		Operator's Seat	2-1-15
		Foot Pedal and Joystick Controls	2-1-18
		AM/FM Stereo Cassette	2-1-18
		Cab Air Filter	2-1-19
		Secondary Exit (Rear Window)	2-1-19
		Cab Door Release Handle	2-1-21
		Fire Extinguisher	2-1-22
		Fire Suppression System Time Delay	2-1-22
		Cab Door Jamb Lever	2-1-23
		Battery Disconnect Switch	2-1-23
Continued on next page			
<i>All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.</i>			

COPYRIGHT © 2002
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

 
	Page		Page
Enclosure Door Hand Pump	2-1-24	Prepare Machine for Maintenance	3-2-2
Engine Enclosure Door Switch	2-1-24	Machine Service Position - Felling Head	3-2-2
Operating the Machine		Maintenance and Repair Record	
Pre-Start Checks	2-2-1	Keeping System	3-2-3
Before Starting the Engine	2-2-1	OILSCAN Plus, [®] CoolScan Plus [®] and	
Normal Starting Procedure — Above		3-Way Coolant Test Kit	3-2-4
0°C (32 °F)	2-2-2	Auto-Lubrication System (Optional)	3-2-6
Cold Weather Starting — Below 0°C (32 °F)	2-2-3	Periodic Maintenance Table	3-2-13
Hydraulic Oil Warm-up Procedure	2-2-5	953G with FS24 Felling Head	3-2-16
Stopping Procedure	2-2-6	Maintenance — As Required	
Operating the Track Drive	2-2-7	Drain Hydraulic Fluid	3-3-1
Using Booster Batteries	2-2-10	Clean Track Drive Planetaries	3-3-1
Operating The Implements — General	2-2-11	Maintenance — Every 8 Hours or Daily	
Joystick Control Lever — Left Hand	2-2-12	General	3-4-1
Joystick Control Lever — Right Hand	2-2-13	Service Lights	3-4-1
Control Panel	2-2-14	Service Enclosures	3-4-1
Lowering Boom with Engine Stopped	2-2-15	Check Engine Oil Level	3-4-4
Preparation of Machine Before Leaving For		Check Air Filter Restriction Indicator and	
Cutting Area	2-2-16	Pre-cleaner	3-4-5
Felling Technique	2-2-17	Check Engine Coolant Level	3-4-6
Felling Head	2-2-19	Check Fuel/Water Separator	3-4-6
Maintenance — Machine		Check and Clean Radiator, Oil Cooler and	
Modifications or Repairs to Roll-over		Condenser Fins	3-4-7
Protective Structures (ROPS)	3-1-1	Check Hydraulic Fluid Level	3-4-7
Fuels and Lubricants Specifications Table	3-1-2	Check Hydraulic Filters	3-4-7
Diesel Engine Oil	3-1-3	Check Auto-Lubrication Reservoir (Optional	
Track Drive and Swing Drive Oils	3-1-4	Equipment)	3-4-8
Recommended Hydraulic System		Check Swing Drive Gearbox Oil Level	3-4-8
Summer Oils	3-1-5	Lubricate Attachment	3-4-9
Recommended Hydraulic System Winter		Lubricate Boom Joints and Cylinder Ends	3-4-9
Oils	3-1-6	Lubricate Swing Pinion and Bearing	3-4-10
Diesel Fuel	3-1-7	Inspect for Hydraulic Oil Leaks	3-4-10
Diesel Engine Coolant	3-1-8	Perform Overall Visual Inspection	3-4-11
Grease	3-1-9	Maintenance — Every 125 Hours	
Handling and Storing Diesel Fuel	3-1-9	Perform 8 Hour Interval Maintenance	
Lubricity of Diesel Fuel	3-1-10	Procedures	3-5-1
Supplemental Coolant Additives	3-1-11	Check Battery Electrolyte Level	3-5-1
Operating in Warm Temperature Climates	3-1-12	Refer to Fire Suppression System	
Additional Information about Diesel		Manufacturer's Manual (If Installed)	3-5-1
Engine Coolants and Supplemental Coolant		Check Engine RPM	3-5-2
Additives	3-1-13	Check Hydraulic Pump Mounting Bolts	3-5-2
Testing Diesel Engine Coolant	3-1-15	Check Swing Drive Mounting Bolts	3-5-3
Oil Filters	3-1-15	Check Oil Level In Idler Assembly	3-5-3
Alternative and Synthetic Lubricants	3-1-16	Check Oil Level in the Track Drive	
Lubricant Storage	3-1-16	Planetaries	3-5-4
Mixing of Lubricants	3-1-17	Lubricate Driveshaft and Motor Coupling	3-5-4
Maintenance — Periodic Maintenance		Check Swing Bearing Bolt Torque	3-5-5
Service Your Machine at Specified Intervals	3-2-1	Check Cab Mounting Bolt Torque	3-5-5
Check the Hourmeter Regularly	3-2-1		
Use Correct Fuels and Lubricants	3-2-1		

Continued on next page

Page	Page		
Check Swing Gearbox Bolt Torque	3-5-6	Undercarriage Checks	4-1-11
Check Engine Mounting Bolt Torque	3-5-6	Cooling System Checks	4-1-12
Check Rotary Manifold Bolt Torque	3-5-7	Accessories	4-1-14
Check Lower Roller Mounting Bolt Torque	3-5-7		
Check Planetary And Sprocket Mounting Bolt Torque	3-5-8	Miscellaneous — Troubleshooting	
Lubricate Swing Gearbox Bearing	3-5-8	General	4-2-1
Lubricate Latches and Knobs on Secondary Exit	3-5-9	Diagnose Engine Start	4-2-2
Check Skylight Latch Tension	3-5-10	Diagnose Pilot Pressure Circuit	4-2-3
Perform Overall Visual Inspection	3-5-10	Diagnose Travel Brakes	4-2-3
Check Initial Track Shoe Bolt Torque	3-5-10	Diagnose Oil Cooler	4-2-4
Check Traction Drive Planetary and Motor Bolts	3-5-11	Diagnose Swing Function	4-2-5
		Diagnose Hoist Boom Function	4-2-6
		Diagnose Stick Boom Function	4-2-6
		Diagnose Tilt Function	4-2-7
		Diagnose Engine Enclosure Door	4-2-7
		Diagnose Auto-Lubrication System (Optional)	4-2-8
Maintenance — First 150 Hours			
Change Oil in the Track Drive Planetaries	3-6-1	Miscellaneous — Storage	
Change Oil in the Swing Drive Gearbox	3-6-1	Prepare Machine for Storage	4-3-1
Maintenance — Every 250 Hours		Miscellaneous — Serial Numbers	
Perform 125 Hour Interval Maintenance Procedures	3-7-1	Model and Serial Number Record	4-4-1
Change Engine Oil And Filter	3-7-1		
Change Fuel/Water Separator Filter	3-7-2	Miscellaneous — Specifications	
Change Air Filter Elements	3-7-3	953G Feller-Buncher with FS24 Felling	
Check A/C Compressor Belt Tension	3-7-3	Head Dimensions	4-5-2
Replace Coolant Filter	3-7-4	Technical Information	4-5-4
Maintenance — Every 500 Hours		Miscellaneous — Crime Prevention Tips	
Perform 250 Hour Interval Maintenance Procedures	3-8-1	Help Prevent Crime	4-6-1
Change Engine Fuel Filters	3-8-1	Record Identification Numbers	4-6-1
		Keep Proof of Ownership	4-6-1
		Park Indoors Out of Sight	4-6-1
		When Parking Outdoors	4-6-2
		Reduce Vandalism	4-6-2
		Report Thefts Immediately	4-6-3
Maintenance — Every 1000 Hours			
Perform 500 Hour Interval Maintenance Procedures	3-9-1		
Replace Hydraulic Oil Return Filters	3-9-2		
Change Oil in the Track Drive Planetaries	3-9-3		
Change Oil in the Swing Drive Gearbox	3-9-3		
Check Saw Speed	3-9-4		
Maintenance — Every 2000 Hours			
Perform 1000 Hour Interval Maintenance Procedures	3-10-1		
Check Specific Gravity of Battery Electrolyte	3-10-1		
Change Engine Coolant	3-10-1		
Miscellaneous — Operational Checkout			
Operational Checkout	4-1-1		
Gauges and Indicators	4-1-1		
Driving Controls	4-1-4		
Hydraulic Functions	4-1-5		

Safety — Safety Features

953G Feller-Buncher Safety Features

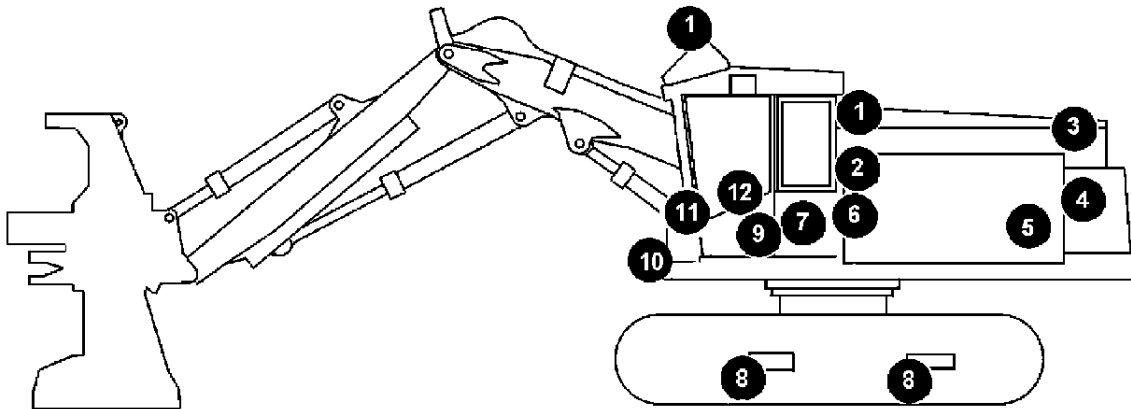

Please remember, the Operator is the key to preventing accidents.

1. **Secondary Exit** The rear window provides a large exit path and the skylight can be removed if the cab door is blocked in an emergency situation.
2. **ROPS/OPS/FOPS** Integrated Rollover, Operator, and Falling Protective Structures are fully enclosed to protect the operator. They reduce vandalism and provide weather protection.
3. **Travel/Enclosure Alarm** An alarm will sound when travelling in forward and reverse or when opening and closing the enclosure door.
4. **Engine Fan Guard** A secondary fan guard inside the engine compartment helps prevent contact with the engine fan blades.
5. **Bypass Start Protection** Shielding over starter solenoid helps prevent dangerous bypass starting.
6. **Fire Extinguisher** Standard equipment.
7. **Seat Belt Retractor** Seat belt retractor helps keep the belts clean and convenient to use.
8. **Steps** Wide slip resistant steps make entry easier and provide a place to clean shoes.
9. **Operator Manual Holder** Storage holder keeps manual on machine clean and dry.
10. **Horn** Horn will sound when button is pressed.
11. **Handholds** Large conveniently placed handholds make it easy to enter or exit the operator's station.
12. **Pilot Hydraulics** Lower the armrest and press the restart switch to activate the hydraulics. Raise the armrest or press the switch to deactivate the hydraulics.

MR64971,000003 -19-05DEC01-1/1

T152898 -JUN-18/MAR02

Safety — General Precautions

Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555 -UN-28AUG00


T133588 -19-28AUG00

TX03679,00016CC -19-21AUG00-1/1

Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.

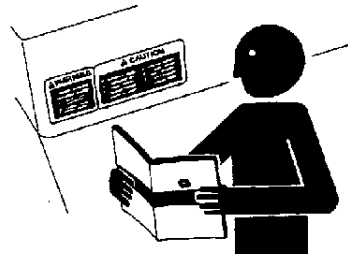

T133556 -UN-24AUG00

TX03679,00016F9 -19-14MAR01-1/1

Operate Only If Qualified

Do not operate this machine unless you have read the operator's manual carefully and you have been qualified by supervised training and instruction.

Familiarize yourself with the job site and your surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to your work situation and your work site.


TX03679,00016FA -19-30OCT00-1/1

Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

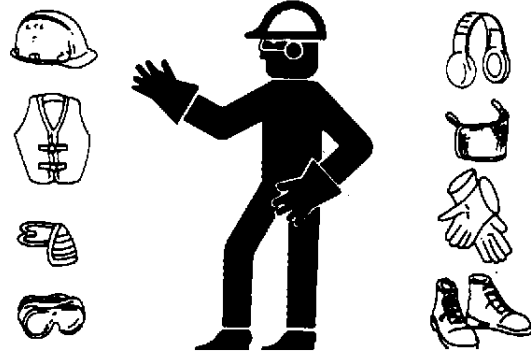

TS206 -UN-23AUG88

TX03679,00016D0 -19-30OCT00-1/1

Avoid Unauthorized Machine Modifications

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or reliability, and may create a hazard for the operator or others near the machine.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

TX03679,00016B7 -19-30OCT00-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ -UN-18OCT88


TX03679,0001734 -19-25SEP00-1/1

Stay Clear Of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

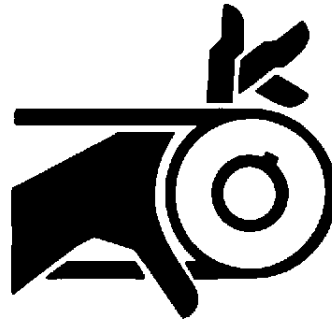

T7273AS -UN-08JUN90

TX03679,00016D2 -19-30OCT00-1/1

Avoid High-Pressure Fluids


This machine uses a high-pressure hydraulic system. Escaping fluid under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping fluid. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic fluid penetrates your skin, see a doctor immediately. Injected fluid must be removed surgically within hours or gangrene may result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.



T138509 -UN-31OCT00

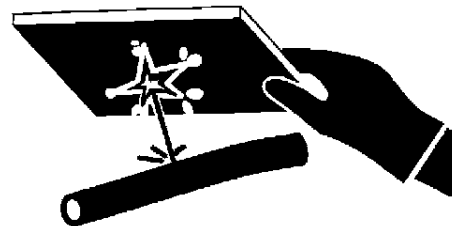


T138840 -UN-20SEP00

TX03679,00016D3 -19-30OCT00-1/1

Beware Of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

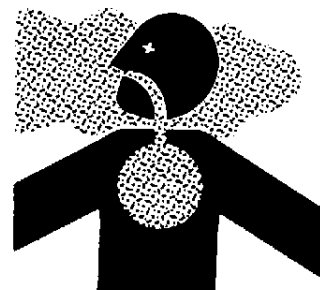

T133546 -UN-24AUG00

TX03679,00016D4 -19-14SEP00-1/1


Prevent Fires

Handle Fuel Safely: Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

Clean Machine Regularly: Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

Maintain Hoses and Wiring: Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

Keep A Fire Extinguisher Available: Always keep a multi-purpose fire extinguisher on or near the machine. Know how to use extinguisher properly.

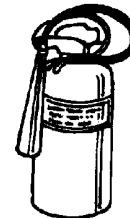

T133552 -UN-14SEP00

T133553 -UN-07SEP00

T133554 -UN-07SEP00

TX03679,00016F5 -19-25SEP00-1/1

What To Do If the Machine Catches Fire

- Turn the engine off.
- Turn the master disconnect switch off
- If possible, fight the fire using the portable fire extinguisher or other fire suppression equipment.
- Ensure that the fire does not spread to the surrounding area.
- Call for help!



TS227 -UN-23AUG88

MR64971,000001F -19-05DEC01-1/1

Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).




TS204 -UN-23AUG88

TX03679,000174A -19-14SEP00-1/1

Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS). The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow MSDS recommendations to handle chemical products safely.

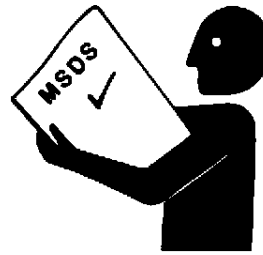

TI 133580 -UN-25AUG00

TX03679.00016D7 -19-14SEP00-1/1


Dispose of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your dealer for more information.

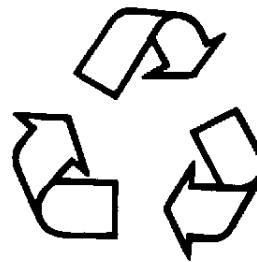

TI 133567 -UN-25AUG00


TX03679.0001733 -19-14SEP00-1/1

Prepare for Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

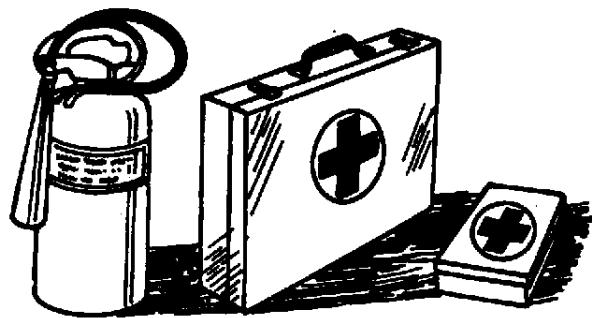

TS291 -UN-23AUG88

TX03679.000174B -19-14SEP00-1/1

Buy Now



Our support email:

ebooklibonline@outlook.com