

# 25 COMBINE HEADER TRANSPORT FRAME



JOHN DEERE

## OPERATORS MANUAL 25 COMBINE HEADER TRANSPORT FRAME

OMH114188 B3 English

JOHN DEERE WELLAND WORKS  
OMH114188 B3

LITHO IN THE U.S.A.  
ENGLISH





# Introduction

---




**This safety alert symbol identifies important safety messages in this manual. When you see this symbol be alert to the possibility of personal injury and carefully read the message that follows.**

"Right" and "left-hand" sides are determined by facing the direction of forward travel.

The warranty appears on your copy of the purchase order which you should have received from your dealer.

Record your header transport serial number on page 22. Your dealer needs this information to give you prompt efficient service.

This operator's manual contains SI metric equivalents which follow immediately after the U.S. customary unit of measure.

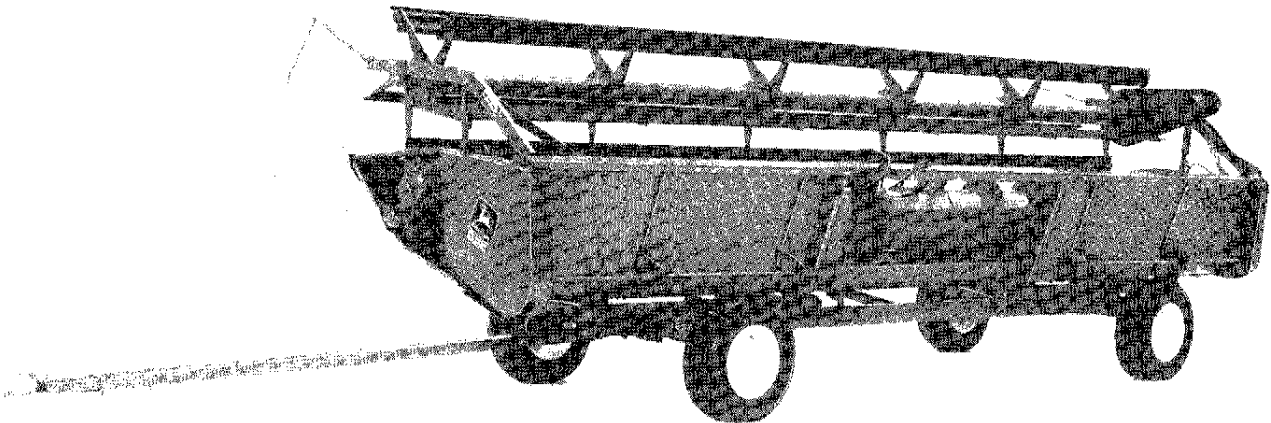



# Contents

---

	Page
Contents .....	1
Safety .....	2-4
Operation .....	5-15
Lubricants .....	16
Lubrication and Maintenance .....	17
Assembly .....	18-21
Specifications .....	22



# Safety



T27999N

T27999N




Safety of the operator was one of the prime considerations in the minds of John Deere engineers when this combine header transport was designed. Simple adjustments and other safety features were built wherever possible. Modifications may impair the function and/or safety and affect machine life.

## AVOID CONTACT WITH MOVING PARTS

Keep hands, feet and clothing away from moving parts.


## LEAVING COMBINE UNATTENDED

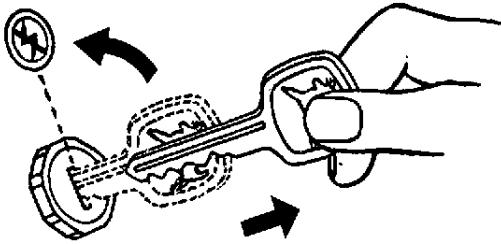

H37524

Before leaving combine unattended, turn off engine and remove keys. Support header with hydraulic cylinder safety stop if it is necessary to go under the header or feeder house. See the combine Operator's Manual for complete safety information.

## OPERATE SAFELY

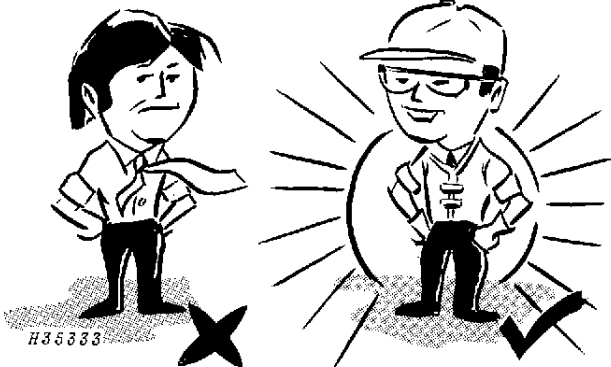

H35333

H35333

Clothing worn by operator must be fairly tight and belted. Loose jackets, shirts, or sleeves must never be worn.

Any time work is being done under header, the hydraulic cylinder safety stop must be placed in the safety position.

Tow only with an agricultural tractor to assure adequate braking performance and control.

**⚠ CAUTION: Never ride on tractor drawbar or wagon hitch.**

When hitching header transport to towing vehicle, back the vehicle past clevis. Then move it slowly forward so that, in making connection, the vehicle will be moving away from you.


The rate of towing vehicle travel on hillsides and curves must always be slow enough so there is no danger of tipping or loss of control.

Never drive close to edge of a creek or ditch.


Always keep towing vehicle in gear when going down steep grades.

**IMPORTANT: Towing speed with any vehicle is not to exceed 20 mph (32 km/h).**

When pulling wagon on a road or highway at night or during the day, use accessory lights and devices (such as an SMV sign) for adequate warning to operators of other vehicles. In this regard, check local governmental regulations. Various safety lights and devices are available from your John Deere dealer.

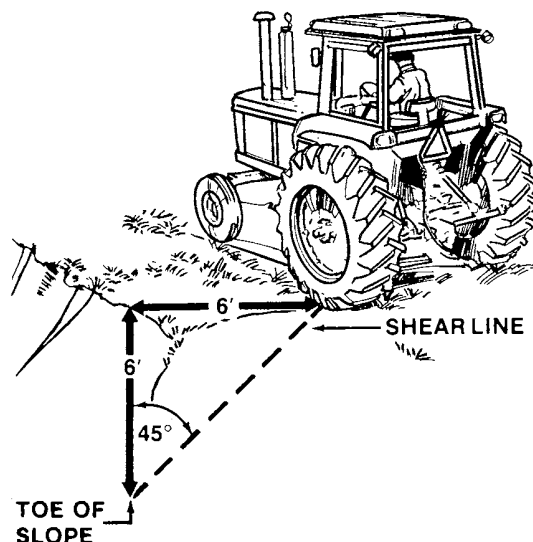

W8460

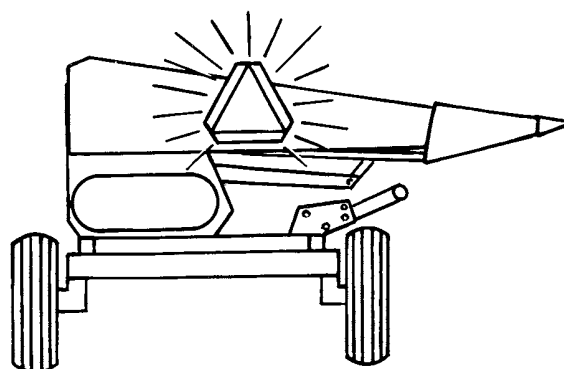


H37232

### Protect Against Noise

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

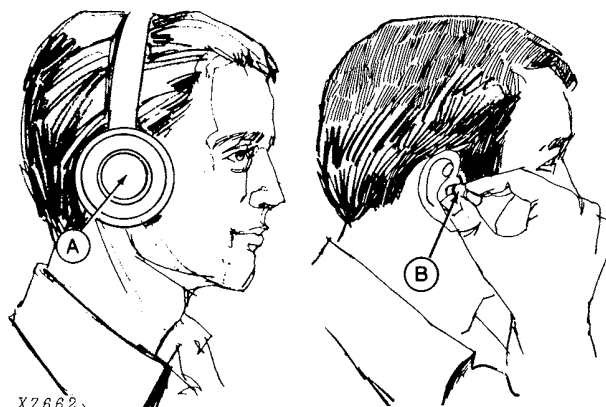

A—Earmuffs  
B—Earplugs

X7662

X7662

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)