

65 COMBINE



OPERATORS MANUAL65 COMBINE

OMH30159 A9 English

OMH30159 A9

LITHO IN THE U.S.A. ENGLISH



TO THE PURCHASER


This Operator's Manual has been written and illustrated to provide you with the needed information regarding lubrication, operation, adjustments, and care of the combine. Study this manual carefully—keep it in a handy place and refer to it often.


Location Reference. "Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use.


Engine Reference Only. Timing gear end of engine is referred to as the "front," flywheel end as the "rear."

If you have an engine-driven machine, the serial numbers of your combine and engine are stamped on a plate on the fuel tank rear support bracket. If your combine is PTO driven, the combine serial number plate is on the grain tank unloading auger jackshaft left-hand support bracket.

The cutting platform serial number plate is located on the right-hand side of the cutting platform. For handy reference later, write these serial numbers now in the spaces provided.

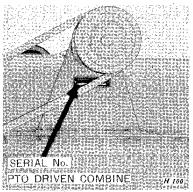

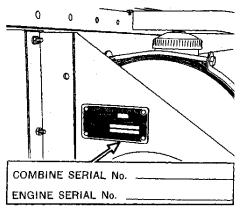

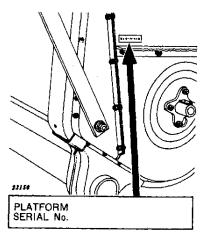

38283

TABLE OF CONTENTS

	Page
SERIAL NUMBERSInside Fro	nt Cover
GENERAL VIEW OF COMBINE	3
SPECIFICATIONS	4-5
COMBINE CONTROLS.	6-7
LUBRICATION	8-28
OPERATION	30
Breaking in the New Combine	30
Engine Break-In	30
Before-Operation Checks and Adjustments	31
Starting the Engine	31 32
Starting the Combine	32
Selecting Proper Ground Speed	32
Cutting Platform Height	32
Speed of Various Units	
Basic Settings Made at the Factory	34
Slip Clutches	35
Electro-Magnetic Throw-Out Clutch	36-37
Cross-Sectional View of Combine	38-39
Fundamentals of Combine Harvesting	40
Operating Suggestions	41
Proper Preparation of Field	42
Operation in Weedy Conditions	
Height of CutSuggested Settings for Combining Various Crops	43 44–49
Safety Suggestions	50-51
Transporting	50-51 52
Hooking Up to Tractor	53
Adjustable Parking Stand	54
Cold Weather Operation	55
Care When the Season Is Over	56
Care at the Beginning of Next Season	57
ADJUSTMENTS AND SERVICE	58-118
Inspection Doors and Parts	58
Reel	59-65
Cutter Bar	66
Platform Auger	70-71
Feeder Conveyor	72
Belt Pickup	73
Cylinder and Concave	75-86
Feed Rolls Attachment	87-89
Beater Behind the Cylinder	89 90–93
Cleaning FanElevators	90-93
Shoe Pitmans	95
Grain Conveyor.	96
Straw Walkers	97
Chaffer and Sieve	98-101
Special Equipment for Combining Various Crops	
Shoe Dividers	103
Scour Kleen Hart	103


TABLE OF CONTENTS-Continued

AD HIGH APART AND SERVICE Continued	Page
ADJUSTMENTS AND SERVICE—Continued Straw Spreader	104
Grain Tank Unloading Auger Drive	
Separator Drive Tightener Pulley and Throttle Control	
Hydraulic System	108
Care of Pneumatic Tires	
Care of Chains	
Care of V-Beits	
Drive Chains and V-Belt Charts	
Service Chart	114-118
ENGINE SERVICE	119-133
Fuel System	119-120
Carburetor	
Governor	122
Wiring Diagram	
Ignition System	
Starting System	
Generator	
Starting Motor	
Cooling System	
Radiator and Radiator Screen	130 131
Valve Tappet Adjustment	
Engine Removal	
Service Chart	
INDEX	138-142

IMPORTANT

Make this manual your guide and adviser and do what it recommends, regardless of what may have been your practice with other makes of combines, or the suggestions that may be made to you by well-meaning friends or neighbors.

When using this combine with special attach ments, special servicing of the attachments may be required. This information will be given to you in the instruction book accompanying the attachment.

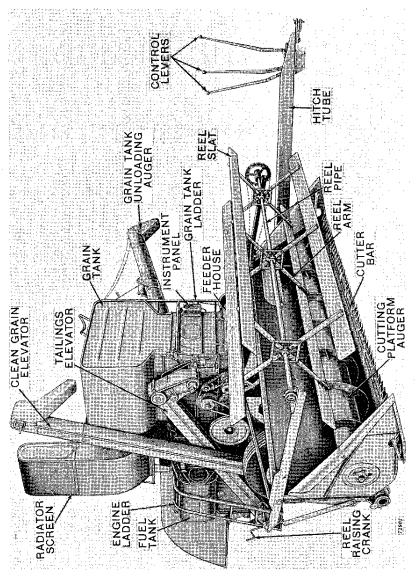

Complete View of John Deere Engine-Driven 65 Combine

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com