

# 25 Combine (Serial No. 25-145000-)

 


## OPERATORS MANUAL 25 Combine (Serial No. 25-145000-)

OMH35954 I4 English

**OMH35954 I4**

LITHO IN U.S.A.  
ENGLISH



## FOREWORD

The purpose of this book is to supply useful harvesting information to owners and operators of John Deere 25 Combines. This information should help in choosing the proper adjustment and equipment required to meet each harvesting condition.

A Combine must be constructed to harvest in a wide range of conditions. Average conditions can be handled by the standard equipment with which the combine is shipped. However, unusual conditions may require some special equipment.

The information given in this Manual will afford a clear understanding of the fundamentals of combine harvesting. **The proper use of these fundamentals to suit the condition in which the machine is operating is up to the operator.**

Conditions vary, not only from year to year and section to section, but also from field to field. It is, therefore, obviously impossible to give definite rules for combine operation that will directly apply in every case. It is entirely possible that there are several solutions to any particular threshing problem. For this reason, we give numerous suggestions, some of which may conflict; you can use the one that best suits your needs.

It is often necessary to settle on a compromise of adjustments to save the maximum amount of the crop. To illustrate, in a trashy condition where a large volume of straw stems, weed joints, etc., is being delivered to the cleaning unit along with the grain, it is advisable to open the chaffer and sieve a little wider and accept a slightly dirtier sample rather than to close the sieves and receive a cleaner sample but allow too much grain to pass out of machine with the blanket of trash.

### SERIAL NUMBER.

Record the serial number of your combine and engine (if used) in the spaces provided below.

The combine serial number is stamped on the name plate, located on the right-hand side of the separator just above the tailings auger. The engine serial number is on the engine name plate, located on the front of the engine just above the crankcase oil level gauge.

COMBINE SERIAL NO. \_\_\_\_\_

ENGINE SERIAL NO. \_\_\_\_\_

DATE PURCHASED \_\_\_\_\_

## TABLE OF CONTENTS

	<i>Page</i>
Adjustment and Service .....	33-92
Beater Behind Cylinder .....	65-67
Adjustments .....	65
Covers over Beater Teeth .....	66
Replacing the Beater .....	67
Replacing the Beater Shaft .....	67
Care Between Seasons .....	101
Care of Chains .....	92
Care of Pneumatic Tires .....	90
Care of V-Belts .....	86-87
Clean Grain and Tailings Elevator .....	81-82
Special Equipment .....	82
Cleaning Units .....	71-80
Adjustable Chaffer .....	74-75
Adjustment .....	74
Replacement .....	75
Adjustable Sieve .....	75
Replacement .....	75
Cleaning Fan .....	72-73
Fan Sheave .....	72
Valves at Ends of Fan Housing .....	73
Windboard .....	73
Cleaning Shoe .....	77-80
Installing Shoe .....	77
Removal of Shoe .....	77
Special Equipment .....	78-80
Tailboard .....	76
Tailings Fingers .....	76
Cutter Bar and Dividers .....	39-44
Care of Cutter Bar .....	39-40
Cutter Bar Repair .....	41-42
Special Equipment .....	43-44
Cylinder and Concave Grate .....	54-64
Adjustments .....	56-61
Care of Cylinder and Concave Grate .....	61-62
Operating Suggestions .....	54-56
Special Equipment .....	63-64
Feeder Canvas .....	50-52
Basic Speed of Combine .....	50
Care of Feeder Canvas .....	51
Feeder Canvas Tension Adjustment .....	51
Feeder Throat Adjustment .....	51
Separator Drive Belt Tightener .....	50
Special Equipment .....	52

	<i>Page</i>
Grain Tank and Unloading Auger.....	83-84
Miscellaneous Special Equipment.....	85
Platform and Canvas.....	47-49
Care of Canvas.....	48
Operating Suggestions.....	47
Shortening the Canvas.....	49
Platform and Feeder—Special Equipment.....	52-53
Platform Lifting Mechanism.....	45-46
Hand Lever Adjustments.....	45
Powr-Trol.....	46
Power Line, Grain Tank Drive, and Main Drive Gear Case.....	88
Reel.....	34-38
Adjustments.....	34-35
Operating Suggestions.....	36-37
Special Equipment.....	37-38
Speeds.....	36
Safety Suggestions.....	11
Service Chart.....	94-100
Cleaning Troubles.....	99-100
Cutting Troubles.....	94-96
Feeding Troubles.....	96-97
Threshing Troubles.....	97-99
Slip Clutches.....	91
Straw Rack.....	68-70
Care of Conveyor.....	70
Operating Suggestions.....	69
Replacing the Straw Rack.....	69-70
Speed Adjustment.....	68
COMPLETE VIEWS.....	4-5
CONTROLS.....	12-15
Clean Grain Elevator Spout.....	13
Engine.....	14
Clutch Throw-Out.....	14
Throttle.....	14
Grain Tank Unloading Auger Gear Shift Lever (Power-Driven)....	12
Grain Tank Unloading Auger Control Rod (Engine-Driven).....	15
Platform Lifting.....	12
Powr-Trol Cylinder.....	13
Quick Change Speed Adjustable Crank.....	12
Reel Drive Hand Wheel.....	13
Reel Lifting Lever and Control Rope.....	12
Sack Chute Trip Rope.....	13
Separator Drive Clutch Throw-Out Lever (Engine-Driven).....	14
Wheels.....	90
LUBRICATION.....	7-10

	<i>Page</i>
OPERATION . . . . .	16-32
Breaking In the New Combine . . . . .	15
Combining Various Crops . . . . .	27-32
Alfalfa . . . . .	27
Barley . . . . .	27
Beans . . . . .	27-28
Buck Wheat . . . . .	28
Clovers . . . . .	29
Crotalaria . . . . .	29
Flax . . . . .	30
Grasses . . . . .	30-31
Lespedeza . . . . .	31
Lupine . . . . .	31
Mustard . . . . .	31
Oats . . . . .	31
Peas . . . . .	32
Proso . . . . .	32
Radish Seed . . . . .	32
Rye . . . . .	32
Sorghums . . . . .	32
Timothy . . . . .	32
Vetch . . . . .	32
Wheat . . . . .	32
Cross-Sectional View . . . . .	20-21
Factory Settings . . . . .	18
Fundamentals of Combine Harvesting . . . . .	25
Hooking Up To Tractor . . . . .	22-23
Limitations Of A Power Driven Combine . . . . .	16
Proper Preparation Of Field . . . . .	17
Separator Speed . . . . .	19
Speeds Of Various Units . . . . .	19
Starting In The Field . . . . .	16
The Operator . . . . .	17
Transporting . . . . .	24
Windrow Pickup Method . . . . .	26
SPECIFICATIONS AND DATA . . . . .	6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)