

**NO. 9  
INTEGRAL  
MOWERS  
(SERIAL NO.  
22301 AND UP)**



 
**JOHN DEERE**

**OPERATORS MANUAL  
NO. 9 INTEGRAL MOWERS (SERIAL  
NO. 22301 AND UP)**

OMH721159 (01NOV59) English

**OMH721159 (01NOV59)**

LITHO IN THE U.S.A.  
ENGLISH



## TO THE PURCHASER

The mower you have just purchased was designed and manufactured to the traditional high quality standards of all John Deere Farm Equipment. We are confident that you will receive years of dependable, economical service from your John Deere No. 9 Power Mower.

The mower is one of the pioneer implements of the farm as simple as a pair of shears—as efficient as a safety razor. However, like any other piece of machinery, your mower will require a certain amount of care and adjustment. Proper and thorough lubrication is vital to good performance and the long life of any machine.

This manual has been carefully prepared and illustrated to provide you with the necessary information to hook up, adjust, service, lubricate, and operate your new John Deere No. 9 Power Mower to best advantage.

Read and study this manual carefully. Keep it in a handy place and refer to it often.

**Location Reference.** “Right-hand” and “left-hand” sides are determined by facing in the direction the machine will travel when in use.

If you should find that you require information not covered in this manual, consult your John Deere dealer. He will be glad to answer any question that may arise regarding the operation and service of the mower. He has trained mechanics who are kept informed on the best methods of John Deere Mower servicing and can give you prompt know-how service in the field or in his shop.

Should your mower require replacement parts, go to your John Deere dealer where you will receive Genuine John Deere parts—accept no substitutes. John Deere parts fit properly and insure satisfactory service because they are made from the original patterns and from the same material as used in new machines.

### SERIAL NUMBERS.

When ordering parts, refer to the model and serial number. By doing so, you will assist your John Deere dealer in giving you prompt, efficient service.

Record the serial numbers in the spaces provided below.

The serial number is stamped on a plate located on the top of the chain case.




Serial No.....

Date Purchased.....

## TABLE OF CONTENTS

	<i>Page</i>
COMPLETE VIEW.....	2
SPECIFICATIONS.....	3
CROSS-SECTIONAL VIEW OF CHAIN DRIVE HOUSING..	3
LUBRICATION.....	4-5
OPERATION.....	6-9
Starting Mower in the Field.....	6
Operating Speed.....	6
Number of Acres Cut per Hour.....	7
Turning Corners.....	7
Transporting.....	8
Safety Spring Release.....	8
Storing for Winter.....	8
Attaching Mower to Tractor.....	10
Disconnecting Mower from Tractor.....	11
Safety Suggestions.....	12
ADJUSTMENTS AND SERVICE.....	14-24
Chain Drive Housing.....	14
Cutter Bar Repair.....	15-18
Cutter Bar Tilt Adjustment.....	18
Adjustable Subsoles.....	18
Pitman.....	19
Registering Knife.....	20-21
Cutter Bar Alignment.....	22-23
Lifting Chain and Swivel Adjustment.....	23
Float Spring.....	24
Speed of Knife.....	24
Grass Board and Stick.....	25
Shielded Powershaft.....	25
Common Mower Troubles and Their Causes.....	26
Special Equipment.....	27-30
ASSEMBLY.....	31-38
Hookup Shipping Packages.....	31
Special Equipment Shipping Packages.....	31
Attaching Hookup Parts Onto Mower.....	32-33
Hookup Sequence.....	34-37
Attaching Cutter Bar.....	38
Lifting Chain Swivel.....	38
Installing Knife.....	39
Attaching Pitman.....	40

---

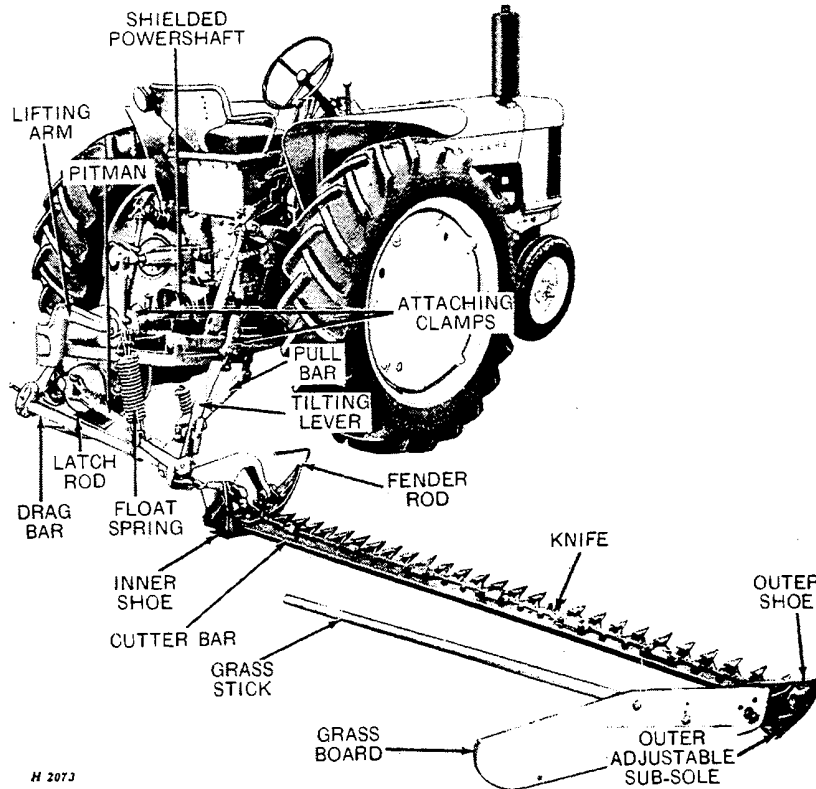

H 2073


*John Deere No. 9W Integral Mower*

## SPECIFICATIONS

Length of Cutter Bar .....	5-, 6-, 7-, and 9-Foot
Type of Power .....	Power Take-Off on Tractor
Type of Drive .....	Steel Roller Drive Chain
Main Drive Shaft Bearings, Rear .....	Tapered Roller
Front .....	Tapered Roller
Flywheel Shaft Bearings, Rear .....	Tapered Roller
Front .....	Tapered Roller
Pitman Bearings .....	Tapered Roller
Main Drive Chain .....	Enclosed in Oil
Approximate Shipping Weight with 7-Foot Cutter Bar .....	525 Lbs. (No. 9 Mower) 560 Lbs. (No. 9W Mower)

*(Specifications and design subject to change without notice.)*

## CROSS-SECTIONAL VIEW OF CHAIN DRIVE HOUSING

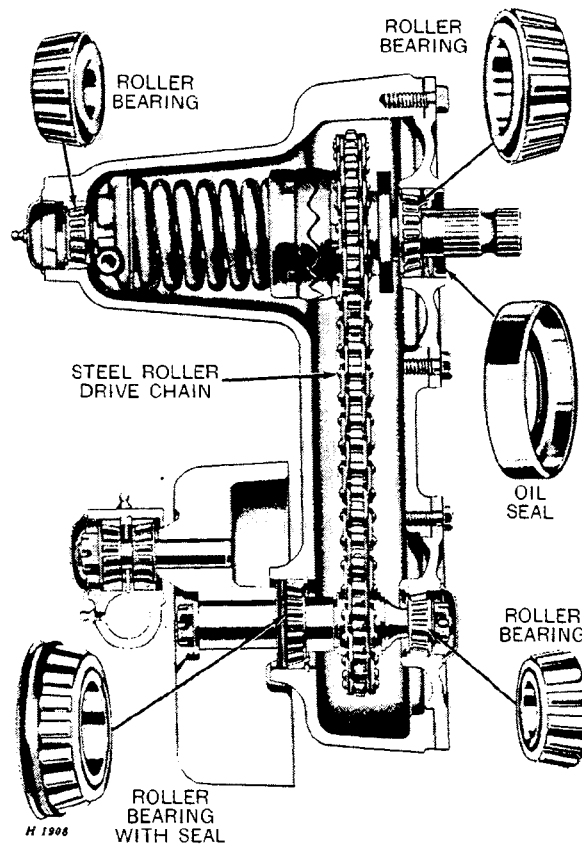

THE COMPLETE OBSERVANCE of one simple rule would prevent many thousand serious injuries each year. THAT RULE IS: "NEVER ATTEMPT TO CLEAN, OIL, OR ADJUST A MACHINE WHILE IT IS IN MOTION."

## LUBRICATION

The economical and efficient operation of any machine is dependent upon regular and proper lubrication of all moving parts with a quality lubricant. Neglect leads to reduced efficiency, heavy draft, wear, break-down, and replacement of parts.

**Chain Drive Housing:** Oil from the chain drive housing lubricates drive chain, sprockets, flywheel, and drive shaft bearings. Keep a good grade of SAE 80 or SAE 90 Multi-Purpose Gear Lubricant (transmission oil) up to oil fill plug in housing. Oil should be drained and new oil should be put in at the beginning of each mowing season. **Do not use burned-out crankcase oil from automobile or tractor.** Check oil level at least every 60 hours of operation. To drain oil, remove lower cap screw from lower cover at bottom of chain drive housing.

Wipe dirt from grease fittings and nozzle of grease gun before greasing. Use SAE Multi-Purpose grease in grease gun. Grease each fitting periodically as specified in chart on opposite page. Replace all missing grease fittings immediately.


**Lubricate all parts thoroughly: avoid excessive lubrication.** Excessive lubrication will gather dust and dirt.

### Lubrication of Cutter Bar and Knife.

Lubricate cutting parts thoroughly with a good grade of heavy machine oil **except** when working in dry, dusty, and sandy soil conditions; then do not lubricate at all except for a small amount at the knife holders or clips.




 
Do not handicap your equipment by using inferior or incorrect oil and grease. Use only quality lubricants at intervals specified in Operator's Manual.

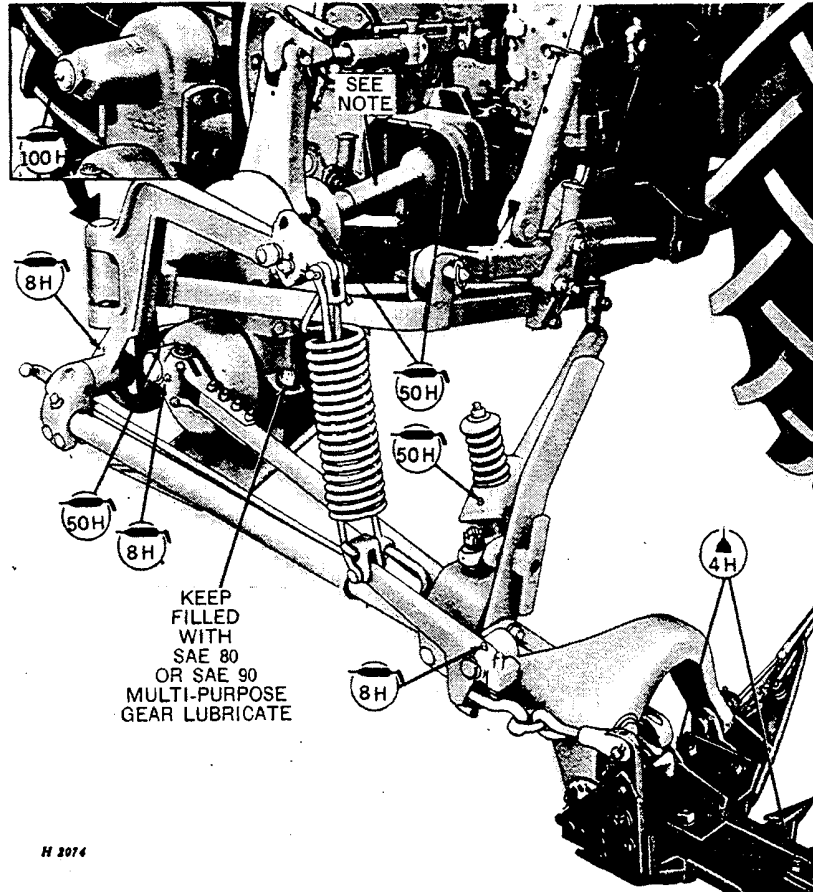Take all possible precaution to keep lubricants clean. This will save you money in long life for your equipment.



H 2074

## SYMBOLS

-  Oil Every 4 Hours of Operation.
-  Grease Every 8 Hours of Operation.
-  Grease Every 50 Hours of Operation.
-  Grease Every 100 Hours of Operation.

*NOTE: Every 50 hours of operation, remove front section of powershaft and apply grease to inside of square tube in rear section.*

## OPERATION


On the following pages you will find information on how to operate your John Deere Mower to best advantage. If you carefully read and follow these instructions, we are confident that your mower will give you years of dependable, economical service.

### ATTACHING AND DETACHING MOWER


This mower can be attached to practically any make of tractor. Illustrations on pages 52 to 55 inclusive, show some of the extension drawbars which are available for several of the more common tractors. Study the illustration showing your make of tractor carefully and use it as your guide in attaching mower.

### STARTING MOWER IN THE FIELD

Do not start tractor until mower has been carefully checked for correct assembly. See that all nuts are tight and cotter pins spread. Rotate pitman by hand to make sure knife operates freely. Be sure all moving parts work freely and are properly lubricated. Check to see that powershaft telescopes freely. *NOTE: Make sure that cutter bar stop is in operating position as shown in left-hand illustration below.*

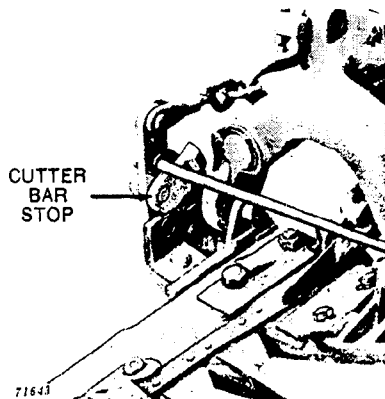

*Cutter Bar Stop in Operating Position*

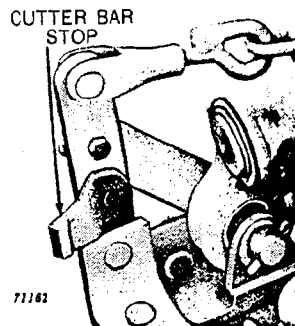

*Cutter Bar Stop in Transporting Position*

Start tractor engine and, while idling, slowly engage power take-off. Let mower run slowly for a while and observe knife, pitman connections, and other moving parts to see that they operate freely and normally. Check levers and controls to see that they operate properly.

After mower has been in full speed operation for one hour, stop tractor and mower and inspect mower to see that all nuts and bolts are tight.



## OPERATING SPEED

Under most conditions the tractor can be driven at 4 to 5 miles per hour without causing undue wear on mower. Avoid excessive speeds. **Reasonable speeds result in more accomplished by the end of the day.** Various mowing conditions require different mowing speeds. Best results will be obtained by running the tractor at the travel speed that will meet crop and field conditions or the speed where the smoothest mowing action results.

Tractor engine should always be kept running at a normal speed which is 540 or 1000 rpm on PTO shaft. Running the engine slow reduces the knife speed and may cause the knife to clog where cutting is heavy. Where difficult conditions make it necessary to slow down travel speed of tractor, shift to a lower gear, rather than retard the engine. By shifting to a lower gear, the engine can be kept at its rated speed, which will keep the knife running at the proper speed for best results.

**Do not engage power take-off with engine running at high speed.** To do so may cause undue wear or possible breakage.

## APPROXIMATE NUMBER OF ACRES CUT PER HOUR

The following is a table showing the number of acres that can be cut in one hour of continuous cutting at various speeds.

Miles per Hour	2	2-1/4	2-1/2	2-3/4	3	3-1/4	3-1/2	3-3/4	4	4-1/4	4-1/2	4-3/4	5
5-Foot Cut....	1-1/4	1-3/8	1-1/2	1-5/8	1-7/8	2	2-1/8	2-1/4	2-1/2	2-5/8	2-3/4	2-7/8	3
6-Foot Cut....	1-1/2	1-5/8	1-7/8	2	2-1/8	2-3/8	2-1/2	2-3/4	3	3-1/8	3-1/4	3-1/2	3-3/4
7-Foot Cut....	1-3/4	1-7/8	2-1/8	2-3/8	2-1/2	2-3/4	3	3-1/8	3-1/2	3-5/8	3-3/4	4	4-1/4
9-Foot Cut....	2-1/4	2-3/8	2-3/4	3	3-1/4	3-1/2	3-7/8	4-1/8	4-3/8	4-5/8	4-7/8	5-1/8	5-1/2

## TURNING CORNERS

This mower will cut neat, square corners. It is seldom necessary to raise cutter bar at corners. Turn quickly when within a swath's length from end, using brake to pivot right-hand wheel of tractor, when tractor is equipped with such a brake. This may be done more effectively with wide tread tractors.

When turning corners to the left, run tractor in low gear. The bar swings around faster when turning in this direction and this, of course, increases the possibility of striking an unnoticed fence post or some other obstacle.

## TRANSPORTING


When moving from one field to another or any considerable distance, the cutter bar must be placed in its transport position.

Move cutter bar stop away from yoke and raise cutter bar to its highest position. Hook latch rod into hole in adjusting bracket. Raise cutter bar to an upright position and fit other end of latch rod through hole in cutter bar and secure with latch nut.




**Safety First:** Be certain the power take-off of tractor is disengaged. When raising cutter bar by hand, be certain to keep fingers away from cutting parts.

When not in use, the latch rod on a No. 9 Mower fits into flanges on tilt bracket and pull bar pivot casting; on a No. 9W Mower, the latch rod fits into a bracket attached to the drag bar. Hold in place with latch nut.

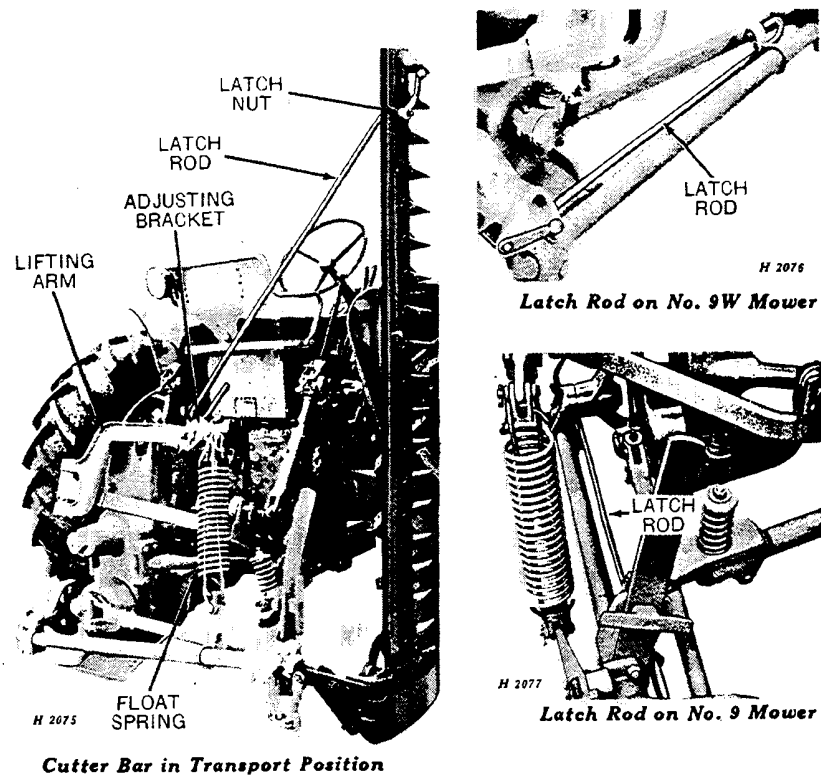

## SAFETY SPRING RELEASE

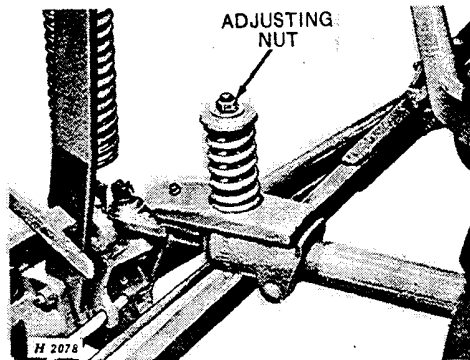

A safety spring release prevents damage to the mower by allowing cutter bar to swing back when a field obstruction is encountered.

After the safety latch releases and the cutter bar swings back, it is not necessary to leave the tractor seat. Just cramp front wheels to the left and back the tractor until mower is in normal position and the safety latch catches.

Spring tension may be adjusted by means of adjusting nut. Do not tighten spring more than necessary for satisfactory operation.

## STORING FOR THE WINTER


When storing mower for the winter, be sure cutter bar is not tilted so pitman is under strain—it is likely to take a permanent twist and later cause trouble. If possible, remove pitman.

Clean off the dirt, tighten loose bolts, spread cotter pins, and grease the knives and wearing parts on cutter bar. Order the new parts that will be needed before the mower is used again.

**A Careful Operator  
IS THE BEST INSURANCE  
AGAINST AN ACCIDENT**

*—National Safety Council*

## ATTACHING MOWER TO TRACTOR

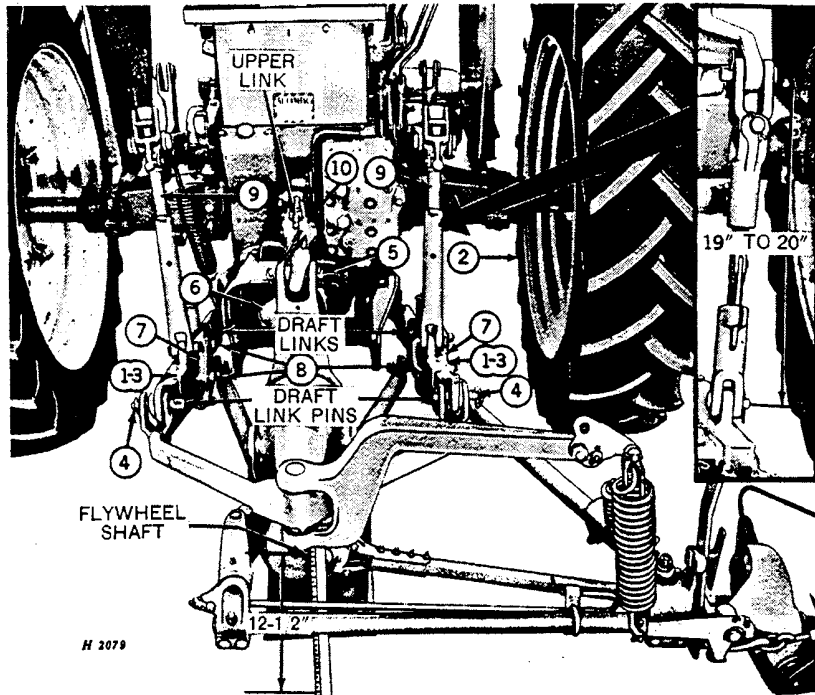

1. Raise tractor draft links 4 or 5 inches above mower.
2. Back tractor over mower.
3. Lower tractor draft links into rear frame hangers on mower.
4. Insert draft link pins through mower rear frame hanger. Adjust draft links so the rear frame hangers are the same distance off the ground.
5. Attach upper link to mast on mower with pin and locking pin. Place upper link in least sensitive position on tractor or lock out depth control mechanism (refer to tractor Operator's Manual).
6. Attach shielded powershaft to power take-off on tractor.
7. Raise attaching clamps into place by raising mower with tractor hydraulic system.
8. Secure attaching clamps with U-bolts. Tighten to 150 lb.-ft. torque.
9. Shorten the tractor lift links to obtain the maximum lifting height.
10. Completely release rockshaft control lever so mower frame rests on chain drive housing. Adjust upper link so center of flywheel shaft is 12-1/2 inches off the ground.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)