

3300 COMBINE



 
OPERATORS MANUAL

3300
COMBINE

OMH84016 L1 English

JOHN DEERE HARVESTER WORKS
OMH84016 L1

LITHO IN THE U.S.A.
ENGLISH





To the Purchaser


This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.

This operator's manual covers the feeder house and separator areas of the combine. For platform and corn head information, see the separate operator's manuals furnished with this equipment.

In addition to the equipment furnished with your combine, attachments are available to help you do a better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

 
"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when

in use. The radiator end of the engine is referred to as the "front," the flywheel end as the "rear."

 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Record your combine serial numbers in the space provided on page 133. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.


The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.

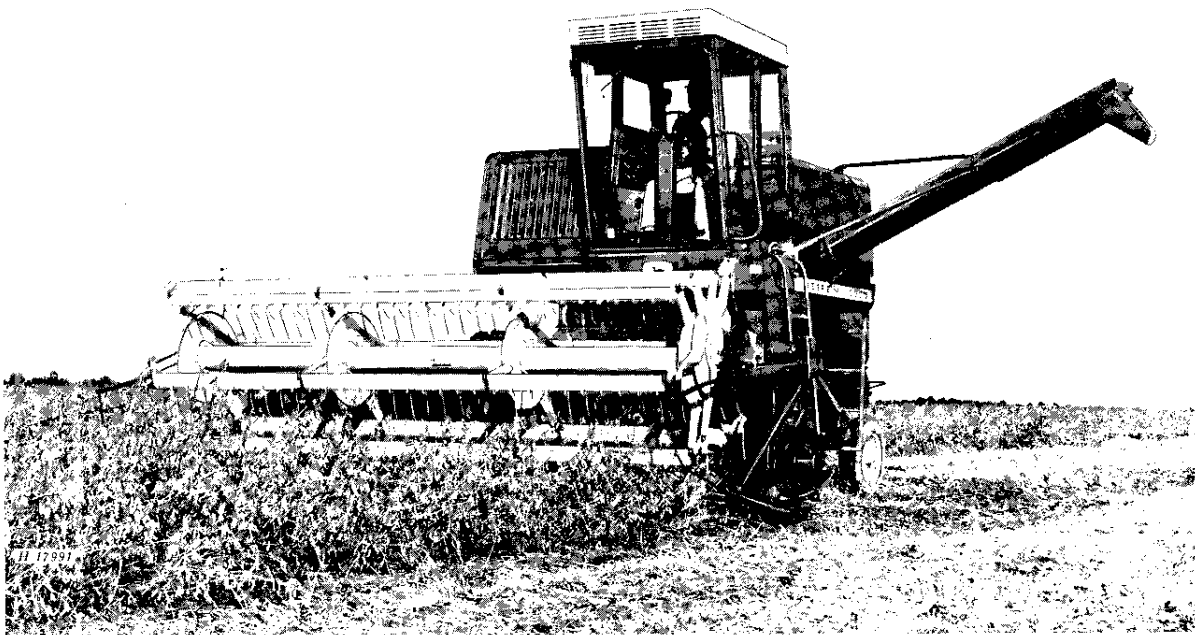



Contents

	Page
Controls and instruments	2-3
Operation	4-30
Safety suggestions	31
Fuels and lubricants	32-33
Lubrication and periodic service	34-44
Service	45-106
Trouble shooting	107-119
Storage	120-122
Attachments	123-129
Specifications	130-134
Index	135-138

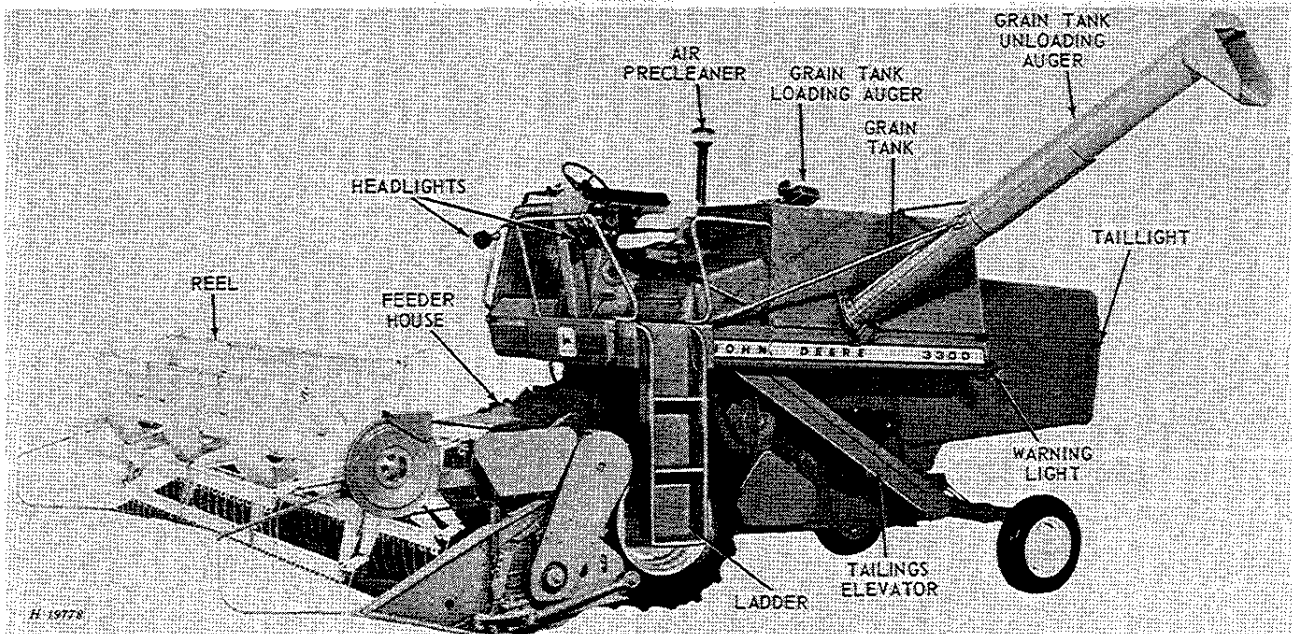 

John Deere 3300 Combine



Controls and Instruments

 
This section illustrates all controls and instruments necessary for successful field operation. For an explanation of each control and instrument, refer to the page reference given.

Before attempting to operate your new combine, become familiar with the location and purpose of its controls and instruments. Study these pages carefully, regardless of your previous combine experience.

The control levers and knobs have different colors and shapes. These have been designed to help you quickly locate the controls while operating the combine. Colors on controls indicate:

RED Combine movement controls (Throttle, Gearshift Lever, Selective Ground Speed Control)


OPERATOR'S PLATFORM

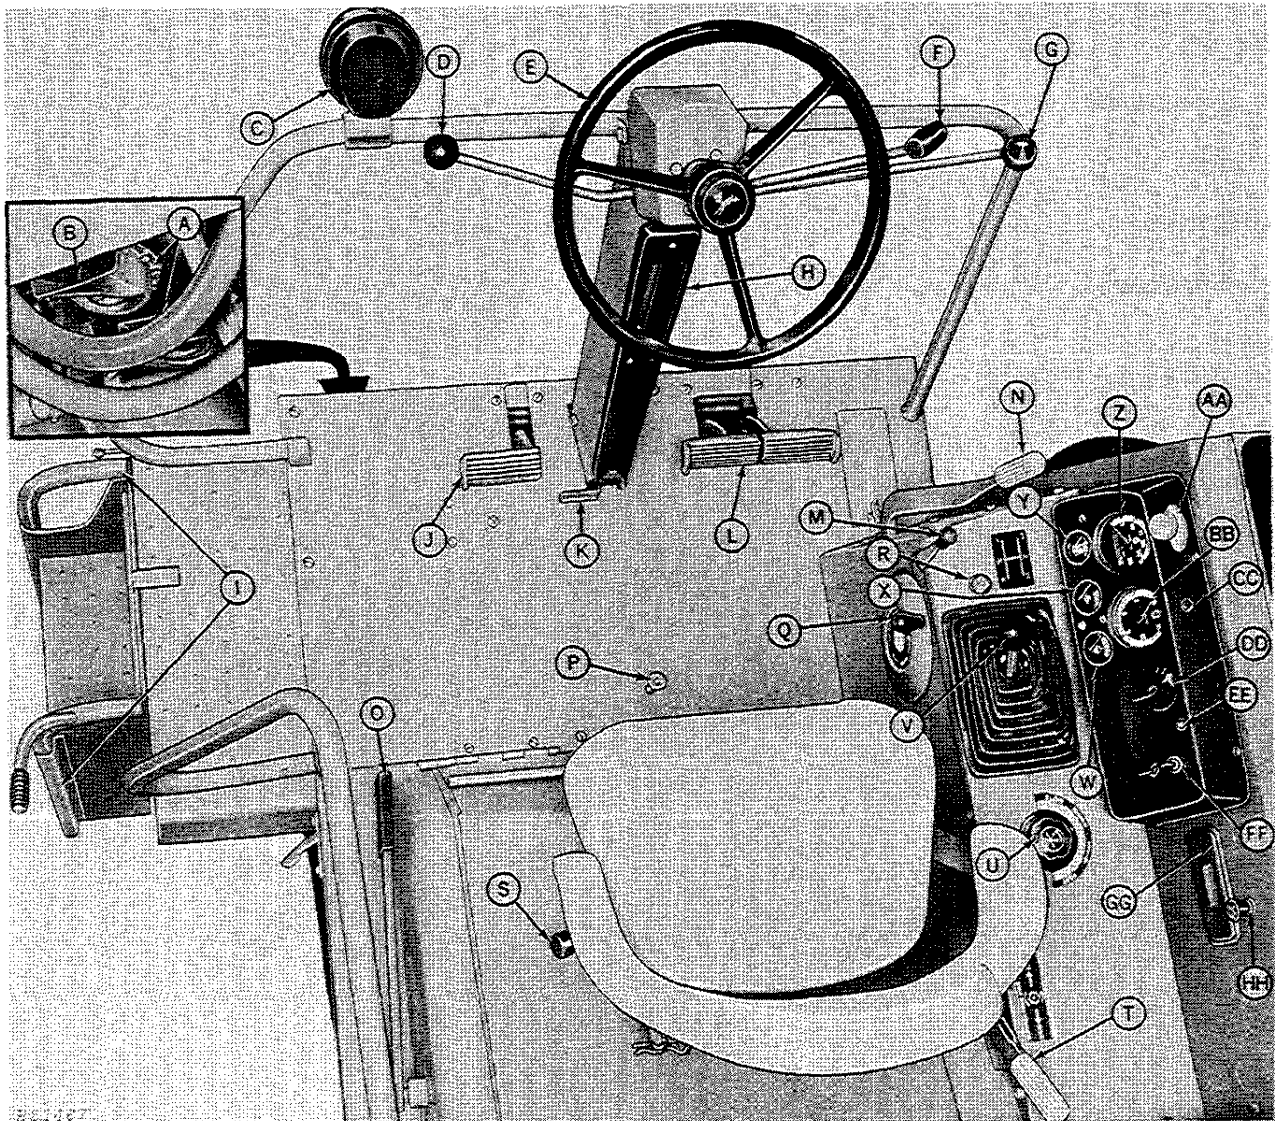


YELLOW.... Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Ratchet Control, Platform or Corn Head Electromagnetic Clutch Switch)

BLACK.... Miscellaneous Function Controls (Platform or Corn Head Height Control, Hydraulic Lift Reel Control, etc.)


 
ENGINE - AIR INTAKE

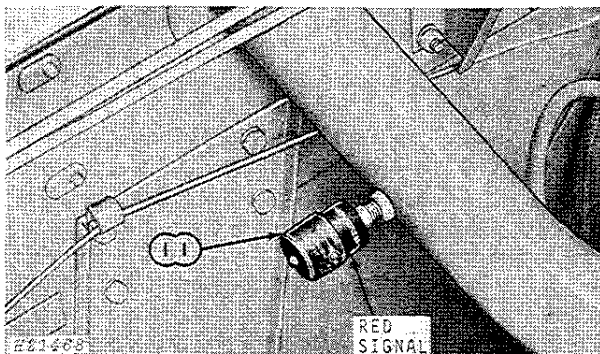

FEEDER HOUSE

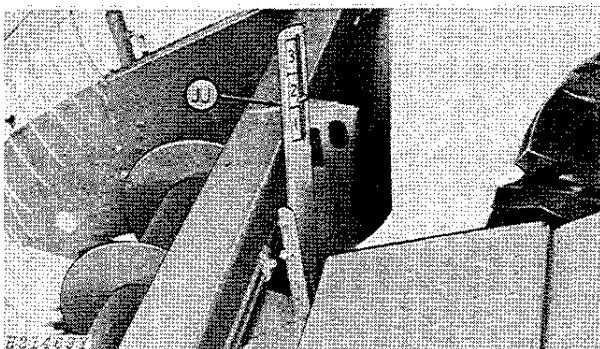 

SEPARATOR

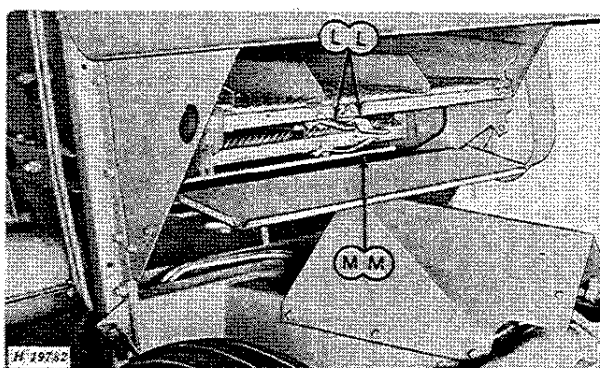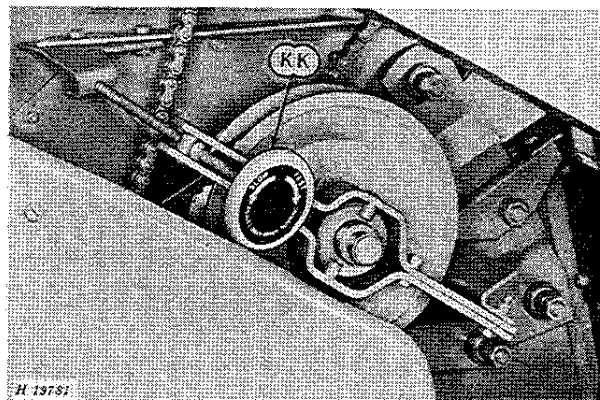  

	Page
A - Truck Signal Horns	25
B - Coolant Temperature Warning Horn or Straw Walker Warning Horn (Attachment)	7, 128
C - Headlight	25
D - Hydraulic Lift Reel Control (Optional)	124
E - Steering Wheel	22
F - Selective Ground Speed Control	22
G - Platform or Corn Head Height Control Lever	12
H - Ground Speed Indicator (Attachment)	22
I - Pivoting Ladder	10
J - Clutch Pedal	23
K - Steering Column Control Pedal	10
L - Brake Pedals	23
M - Throttle	6
N - Separator Control Lever	15
O - Grain Tank Unloading Auger Lever	21
P - Parking Brake Lock Button	22
Q - Concave Opening Control Wheel	16

	Page
R - Choke—Gasoline only	6
S - Operator's Seat Control Lever	9
T - Cylinder Speed Control Ratchet	15
U - Hydrostatic Drive Reel Control or Hydrostatic Drive Belt Pickup (Optional)	123, 124
V - Gearshift Lever	22
W - Coolant Temperature Gauge	6
X - Engine Oil Pressure Gauge	7
Y - Fuel Gauge	7
Z - Engine Tach-Hour Meter	7
AA - Platform or Corn Head Electromagnetic Clutch Switch (Optional)	12
BB - Cylinder Speed Tachometer	15
CC - Alternator Indicator Light	6
DD - Light Switch	25
EE - Horn Button	25
FF - Key Switch	6
GG - Ash Tray	25
HH - Cigarette Lighter	25
II - Air Restriction Indicator (Attachment)	7
JJ - Platform Float Spring Indicator (Attachment)	125
KK - Fan Speed Control Wheel	18
LL - Chaffer Opening Control Levers	19
MM - Sieve Opening Control Lever	19

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com