

# JOHN DEERE 6600 AND 7700 COMBINES




## OPERATORS MANUAL JOHN DEERE 6600 AND 7700 COMBINES

OMH86806 J3 English

JOHN DEERE HARVESTER WORKS  
OMH86806 J3

LITHO IN THE U.S.A.  
ENGLISH

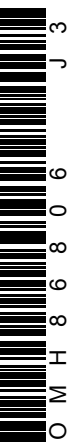




## To the Purchaser

---

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.

 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

This operator's manual covers the feeder house and separator areas of the combine. For platform and corn head information, see the separate operator's manuals furnished with that equipment.

In addition to the equipment furnished with your combine, attachments are available to help you

do a better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

“Right-hand” and “left-hand” sides are determined by facing in the direction the combine will travel when in use. The radiator end of the engine is referred to as the “front,” the flywheel end as the “rear.”


Record your combine serial numbers in the space provided on page 194. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.

The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.



# Contents

	Page
Controls and instruments.....	2-4
Operation.....	5-45
Safety suggestions.....	46
Fuels and lubricants.....	47-48
Lubrication and periodic service.....	49-63
Service.....	64-156
Trouble shooting.....	157-176
Storage.....	177-180
Attachments.....	181-187
Specifications.....	188-195
Index.....	196-199

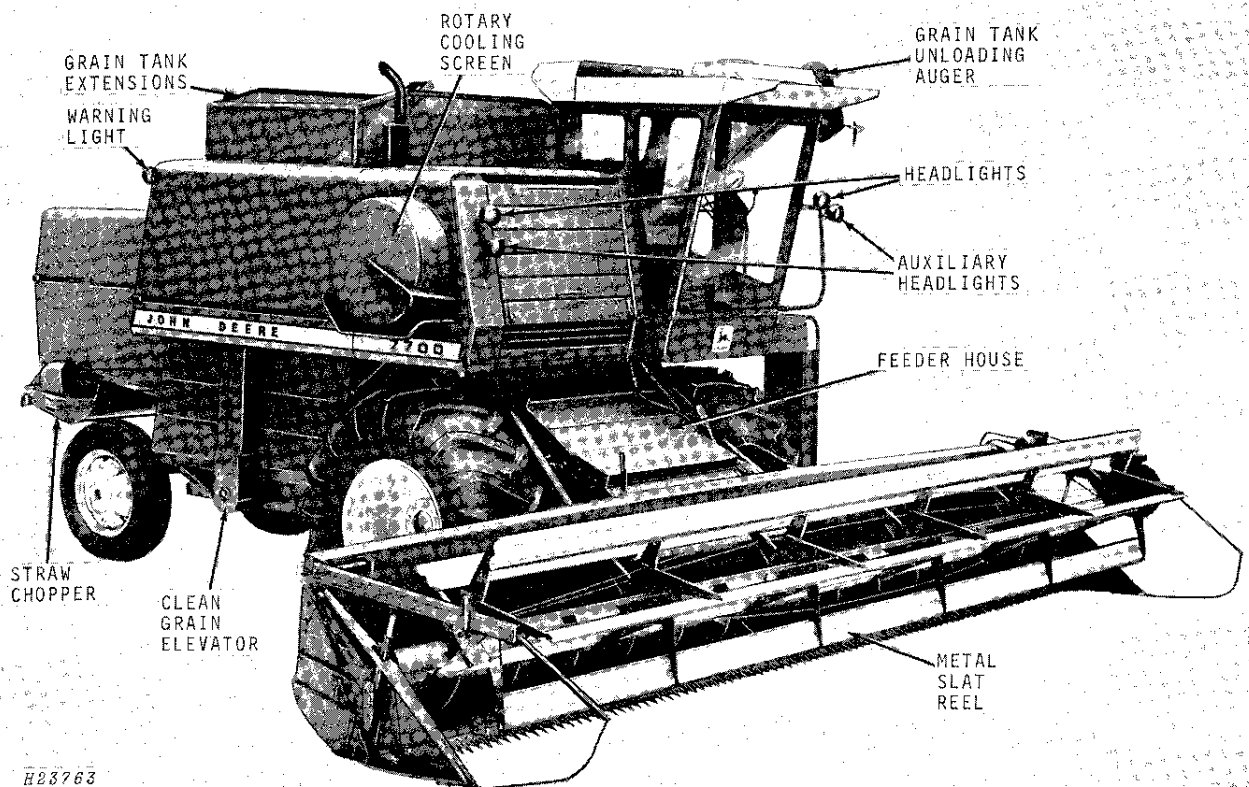

H23763

John Deere 7700 Combine




# Controls and Instruments

Before attempting to operate your new combine, become familiar with the location and purpose of its controls and instruments. Study these pages carefully, regardless of your previous combine experience.


The control levers and knobs have different colors and shapes to help you quickly locate the controls while operating the combine. Colors on controls indicate:

- RED—Combine movement controls (Throttle, Gearshift Lever, Selective Ground Speed Control)
- YELLOW—Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Control Ratchet, Platform or Corn Head Electromagnetic Clutch Switch)
- BLACK—Miscellaneous Function Controls (Platform or Corn Head Height Control, Hydraulic Lift Reel Control, etc.)


## OPERATOR'S PLATFORM

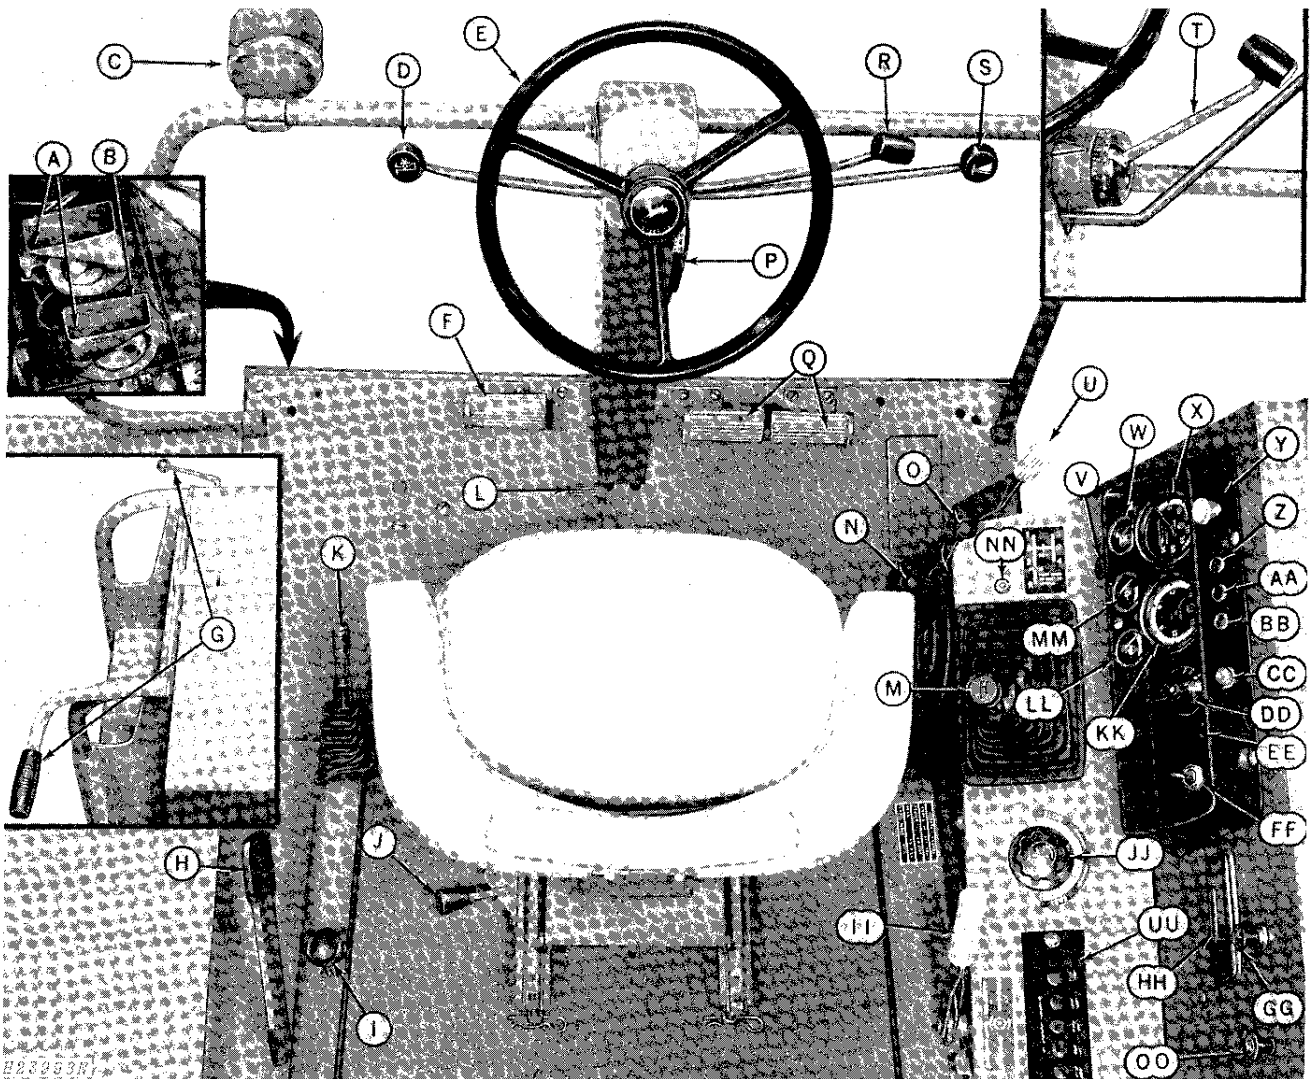



**ENGINE - AIR INTAKE**

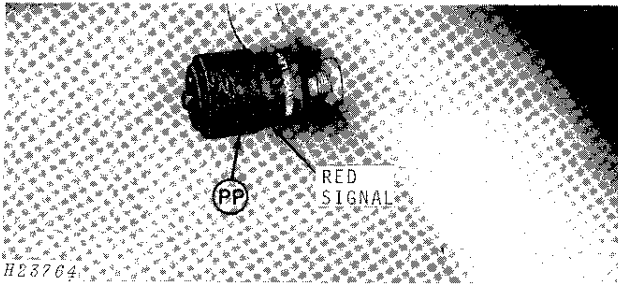

**SEPARATOR**

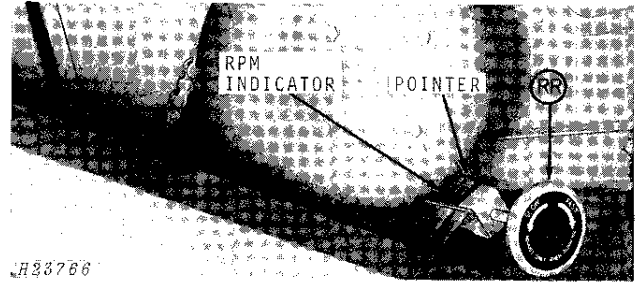

**FEEDER HOUSE**

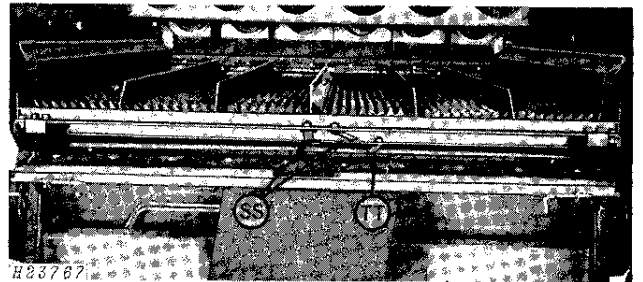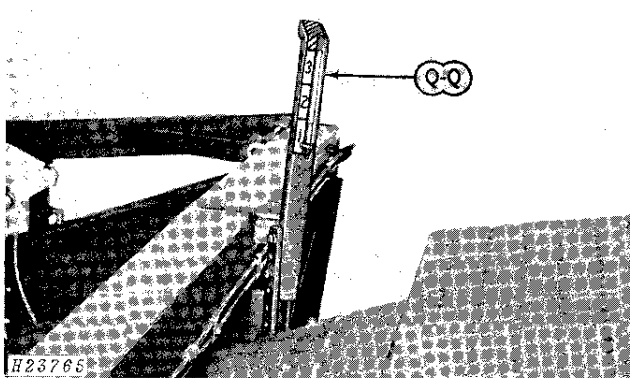

	Page
A - Truck Signal Horns.....	38
B - Coolant Temperature Warning Horn or Straw Walker Warning Horn (Attachments) .....	9, 38
C - Headlight.....	38
D - Hydraulic Lift Reel Control (Optional) or Variable Speed Feeder House Control (Optional) ....	20, 184
E - Steering Wheel .....	35
F - Clutch Pedal (Belt Drive Combine).....	36
G - Pivoting Ladder .....	15
H - Grain Tank Unloading Auger Lever .....	33
I - Unloading Auger Hydraulic Swing Control .....	33
J - Operator's Seat Control .....	14
K - Parking Brake Lever.....	35
L - Steering Column Control.....	15
M - Gearshift Lever .....	34
N - Concave Opening Control Wheel.....	26
O - Throttle.....	8
P - Ground Speed Indicator (Regular on 7700; Attachment on 6600) (Belt Drive Combine).....	34
Q - Brake Pedals.....	36
R - Selective Ground Speed Control.....	34
S - Platform or Corn Head Height Control.....	19
T - Hydrostatic Drive Speed Range Control (Optional).....	35
U - Separator Control Lever.....	25
V - Choke (Gasoline Engine only).....	8
W - Fuel Gauge .....	9
X - Engine Tach-Hour Meter.....	9
Y - Platform or Corn Head Electromagnetic Clutch Switch (Optional).....	20
Z - Parking Brake Indicator Light .....	35
AA - Alternator Indicator Light .....	9
BB - Transmission Oil Pressure Indicator Light .....	35
CC - Cold Weather Starting Aid Button .....	38
DD - Light Switch.....	38
EE - Horn Button.....	38
FF - Key Switch .....	8
GG - Cigarette Lighter .....	38
HH - Ash Tray.....	38
II - Cylinder speed Control Ratchet .....	25
JJ- Hydrostatic Drive Reel or Hydrostatic Drive Belt Pickup Control (Optional).....	184
KK - Cylinder Speed Tachometer .....	25
LL - Coolant Temperature Gauge .....	9
MM - Engine Oil Pressure Gauge.....	9
NN - Powered Rear Wheel Drive Switch (Optional 7700 only).....	
OO - Engine Fuel Shut-Off (Diesel Engine only).....	8
PP- Air Restriction Indicator (Regular on 7700; Attachment on 6600) .....	9
QQ- Platform Float Spring Indicator (Attachment) .....	183
RR - Fan Speed Control Wheel.....	31
SS - Chaffer Opening Control .....	31
TT - Sieve Opening Control .....	31
UU - Low Shaft Speed Monitor.....	16

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)