

Combine Quick-Tatch Platforms



JOHN DEERE

OPERATORS MANUAL

Combine Quick-Tatch
Platforms

OMH86807 Issue J3 English

John Deere Harvester Works
OMH86807 Issue J3


LITHO IN U.S.A.
ENGLISH





To the Purchaser

This new platform was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.

 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.


In addition to the equipment furnished with your platform, attachments are available to help you do a better job in special crop conditions. These are de-

scribed in the attachments section of this manual, and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by facing in the direction the platform will travel when in use.

Record your platform serial number in the space provided on page 40. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your platform requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.

The warranty on this platform appears on your copy of the purchase order which you should have received from your dealer when you purchased the platform.

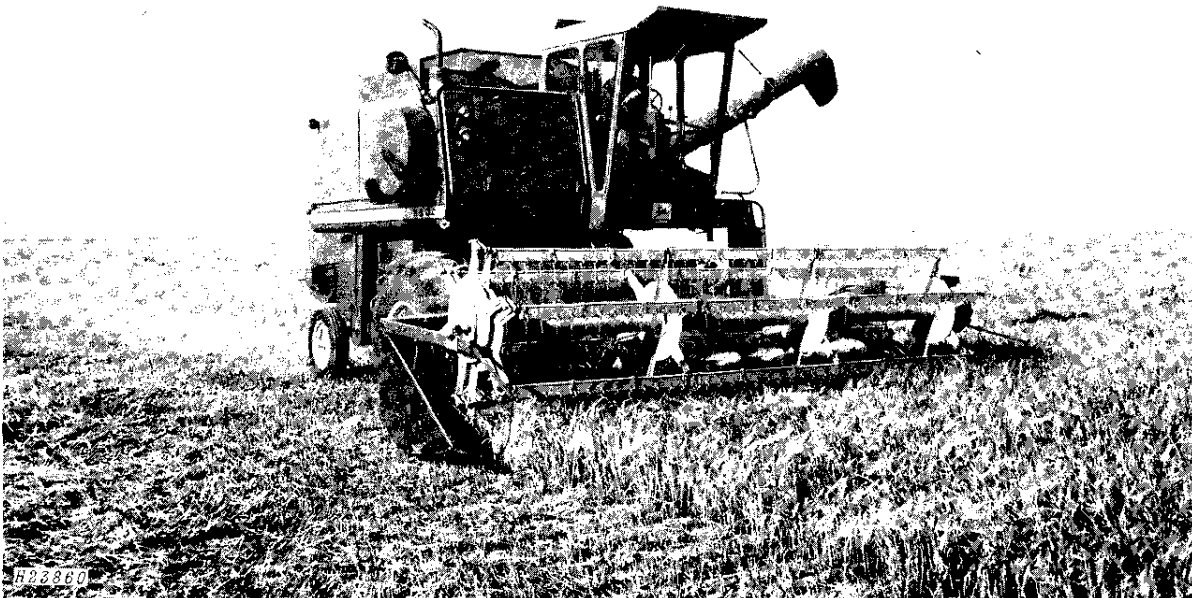

JOHN DEERE QUIK-TATCH PLATFORMS

PREDELIVERY CHECK LIST

Inspect the platform thoroughly after it is completely assembled to be sure it is in good running order before delivering it to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- Look the platform over carefully and remove all tools.
- Be sure all sheaves are in alignment. Check tension of belts.
- Check all chains for proper installation, alignment, and adjustment.
- Check all bolts and nuts to be sure they are tight.
- Reel must be level and centered between platform sides. Reel support arms must be square with platform top beam.
- Check the register of the knife. Sections must pass the same distance through adjacent guards.
- Check alignment of the guards. Set guards up or down as necessary.
- Check for clearance between retracting fingers and platform bottom. If necessary, adjust so fingers will not gouge into platform bottom.
- Check for equal clearance between end finger bearings and finger cranks, adjust if necessary.

OWNER REGISTER

Name _____
Post Office _____
County _____ State _____
Platform Serial No. _____
Date Purchased _____

- Platform cutterbar must be level and parallel with the front axle tube.
- Check, and if necessary, lubricate all lubrication points. (See lubrication charts.)
- Check to be sure right-hand coupler shield is installed on feeder houses with lower shaft extended on right-hand side.
- Deliver the operator's manual to the purchaser. Explain the safe operation and adjustments and service of this machine as outlined in the operator's manual.
- Remove this predelivery check list and retain for future reference.

I have performed the above predelivery service to the best of my ability.

Date _____

Name _____

(Signature of Serviceman)

SHIPPING BUNDLES

Bundle No.	Description	Bundle No.	Description
BH 75854	Platform, Cutting, 10-Ft.	BH 75180	* Reel Arms (Wood Slats) - 10-Ft.
BH 75856	Platform, Cutting, 13-Ft.	BH 75026	* Reel Arms (13-through 16-Ft.) (Wood Slats) (2 used)
BH 75855	Platform, Belt Pickup, 13-Ft.	BH 75179	* Reel Arms (16-Ft.) (Metal Slats) (2 used)
BH 75858	Platform, Cutting, 14-Ft.	BH 75026	* Reel Arms (18- and 20-Ft.) (Wood and Slats)
BH 75857	Platform, Belt Pickup, 14-Ft.	BH 75180	
BH 75859	Platform, Cutting, 15-Ft.	BH 75027	* Reel Arms (18- and 20-Ft.) (Metal and Slats)
BH 75860	Platform, Cutting, 16-Ft.	BH 75179	
BH 75861	Platform, Cutting, 18-Ft.	BH 75027	* Reel Arms (22-Ft.) (Metal Slats) (2 used)
BH 75862	Platform, Cutting, 20-Ft.	BH 75027	* Reel Arms (24-Ft.) (Metal Slats) (2 used)
BH 75863	Platform, Cutting, 22-Ft.	BH 75091	* Truss Rod Parts, 20-Ft.
BH 75864	Platform, Cutting, 24-Ft.	BH 75103	* Truss Rods, 20-Ft.
H 25385	* Reel Slats - (Wood) - 10-Ft. (5 used)	BH 75092	* Truss Rod Parts, 22-Ft.
H 24049	* Reel Slats - (Wood) - 13-Ft. (5 used)	BH 75104	* Truss Rods, 22-Ft.
H 22818	* Reel Slats - (Wood) - 14-Ft. (5 used)	BH 75092	* Truss Rod Parts, 24-Ft.
H 62942	* Reel Slats - (Wood) - 15-Ft. (5 used)	BH 75105	* Truss Rods, 24-Ft.
H 22819	* Reel Slats - (Wood) - 16-Ft. (5 used)	BH 75183	Reel Support Arms
H 79258	* Reel Slats - (Metal) - 16-Ft. (5 used)	BH 75028	Reel Support
H 22820	* Reel Slats - (Wood) - 18-Ft. (5 used)	BH 60118	Fixed Reel Drive Parts
H 79259	* Reel Slats - (Metal) - 18-Ft. (5 used)	BH 75517	Fixed Reel Drive Parts
H 28027	* Reel Slats - (Wood) - 20-Ft. (5 used)	BH 75933	Fixed Reel Drive
H 79260	* Reel Slats - (Metal) - 20-Ft. (5 used)	BH 60621	Divider Points
H 79261	* Reel Slats - (Metal) - 22-Ft. (5 used)	AH 62583	Loop Dividers (2 used)
H 79262	* Reel Slats - (Metal) - 24-Ft. (5 used)	BH 75476	Right-hand Coupler Shield - Required only when platform is attached to an Intermediate Feeder House or a Corn Feeder House.
AH 77185	* Reel Pipe, 10-Ft.		
AH 75951	* Reel Pipe, 13-Ft.		
AH 77188	* Reel Pipe, 14-Ft.		
AH 77184	* Reel Pipe, 15-Ft.		
AH 77189	* Reel Pipe, 16-Ft.		
AH 77190	* Reel Pipe, 18-Ft.		
AH 77186	* Reel Pipe, 20-Ft.		
AH 77187	* Reel Pipe, 22-Ft.		
AH 77183	* Reel Pipe, 24-Ft.		


* Not required when combine is to be equipped with pickup reel.

NOTE: Installation instructions are included with pickup reel.



Contents

	Page
Operation	2-9
Lubrication and Periodic Service	10-11
Service	12-20
Trouble Shooting	21-23
Storage	24
Installation	25-30
Attachments	31-33
Assembly	34-39
Specifications	40
Index	41

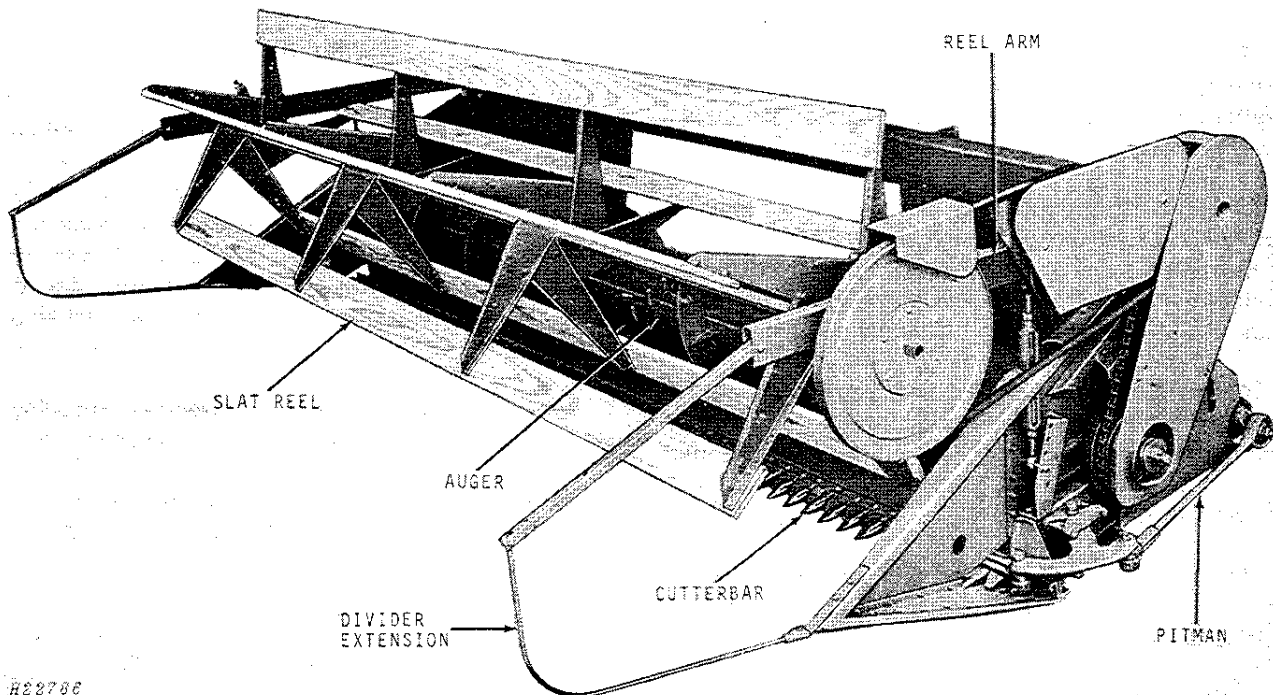

R22786

John Deere Cutting Platform for Combines

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com