

# 2150 and 2255 Tractors



JOHN DEERE

## OPERATORS MANUAL 2150 and 2255 Tractors

OML39646 Issue K5 English

John Deere Werke Mannheim  
OML39646 Issue K5

LITHO IN U.S.A.  
ENGLISH





## INSPECTIONS

We appreciate the confidence you have shown in John Deere and your John Deere dealer for the purchase of this equipment.

We want you to have the best performance from your new machine. To accomplish this, your dealer will perform a Predelivery Inspection and will familiarize you with the proper and safe operation of this machine.

After the machine has operated the first 100 hours, you should contact your dealer and arrange an appropriate date at which the After-Sale Inspection will be performed. It will be performed most effectively in the workshop of your dealer.

## IMPORTANT WARRANTY INFORMATION

**The warranty on this tractor appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that JOHN DEERE will back its products where defects appear within the warranty period. In some circumstances, JOHN DEERE also provides field improvements, often without charge to the customer, even if the product is out of warranty.**

**Warranty and field improvements are a part of JOHN DEERE'S product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery beyond specifications or otherwise overpowering machines will result in such action.**

**The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.A. and Canada.**

© Deere & Co., European Office,  
D-6800 Mannheim

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

## SAFETY



**CAUTION: This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.**

**IMPORTANT: This machine is designed and manufactured according to JOHN DEERE specifications. To avoid accidents and to assure optimum performance the machine must not be modified or altered in ways not approved by JOHN DEERE, nor must it be used in conditions or for purposes it is not designed for.**

To assure safe operation of this machine, read the Safety Rules on the first pages of this manual.

## MEASUREMENTS

Your operator's manual contains the international standardized SI metric measurement system.


## DIRECTION

Right-hand and left-hand sides of this machine are determined by facing in the direction of forward travel.


## PRODUCT IDENTIFICATION NUMBERS

Record the identification number(s) in the spaces provided following Specifications. Accurately record all of the characters because (should the product be stolen) tracing is sometimes through a computer match of letters and numbers. Also, your dealer needs this information when ordering parts. If you carry your operators manual on the machine for reference, be sure to also record the identification number(s) on a separate sheet of paper in a secure place not on the machine so you will still have a record in case the machine is stolen.

# Identification Views

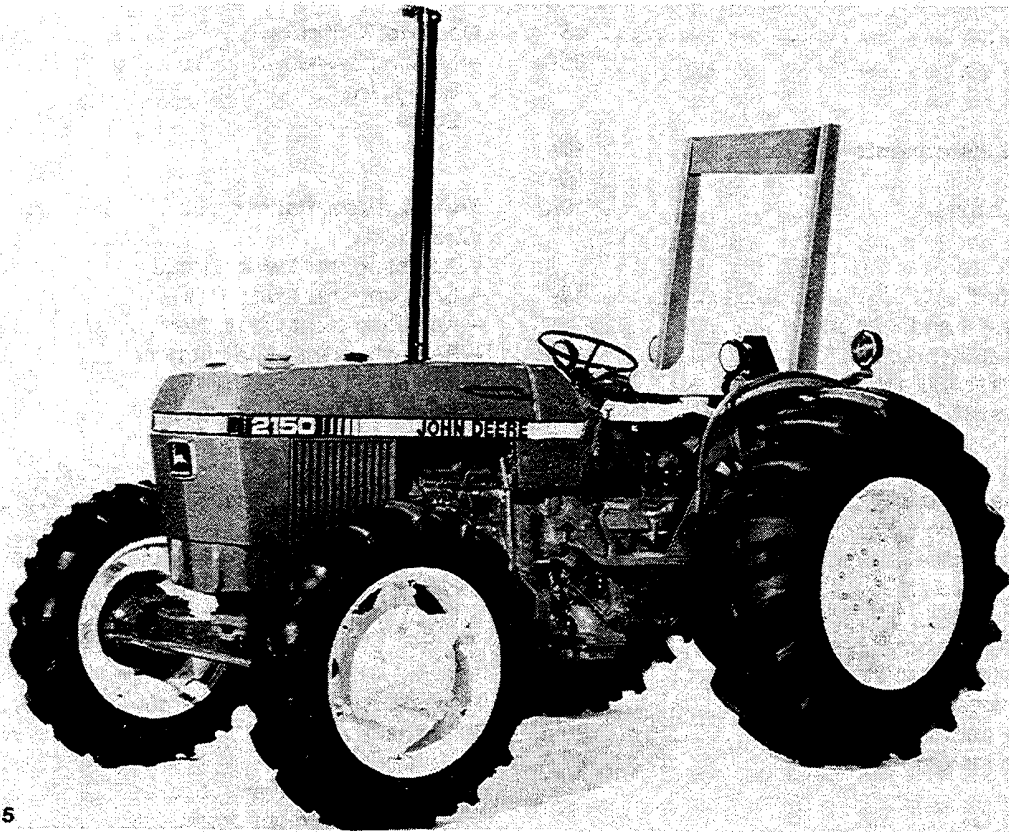

L110 705

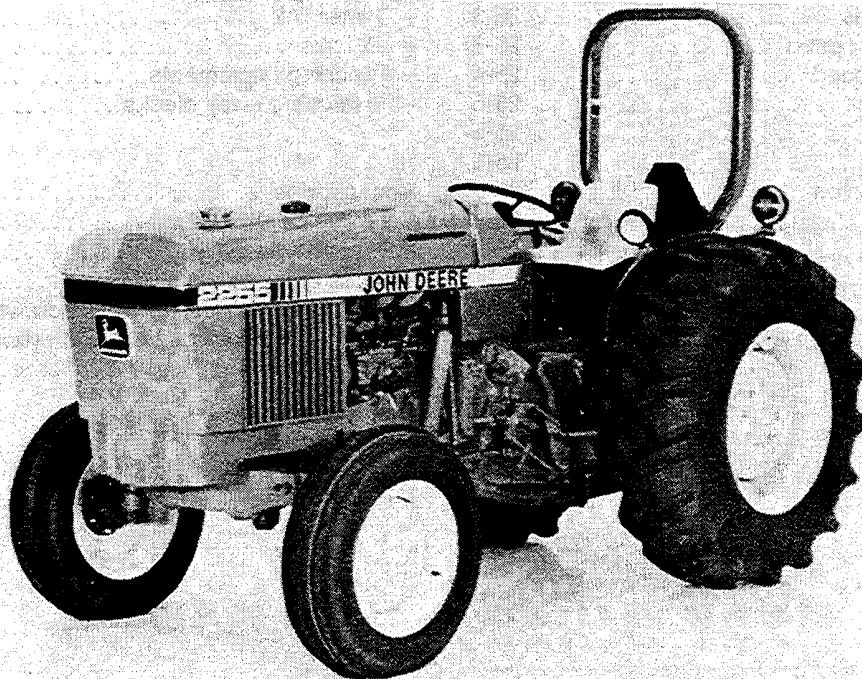

L110 227

L110705.L110227-2150ALE-150985

# Contents

<b>Safety</b> .....	<b>05-</b>	<b>Operator's Station</b> .....	<b>30-</b>
- Safety .....	05-1	- Lighting system .....	30-1
<b>Controls and Instruments</b> .....	<b>10-</b>	- Roll guard .....	30-2
- Controls .....	10-1	- Seats .....	30-3
- Instrument cluster .....	10-2	<b>Treads, Tires, Ballast</b> .....	<b>35-</b>
<b>Break-In Period</b> .....	<b>15-</b>	Wheel treads .....	35-1
- After the first 4 and 8 hours .....	15-1	- Adjusting front wheel tread .....	35-2
- After the first 50 hours .....	15-2	- Checking front wheel toe-in .....	35-2
- Within the first 100 hours .....	15-3	- Adjusting front wheel toe-in .....	35-3
- After the first 100 hours .....	15-3	- Rear wheel tread adjustment .....	35-4
<b>Operating the Engine</b> .....	<b>20-</b>	Tires .....	35-7
- Prestarting check .....	20-1	- Tire pressures .....	35-7
- Starting the engine .....	20-2	- Servicing tires .....	35-7
- Ether starting aid .....	20-3	Ballast .....	35-8
- Thermostart aid .....	20-4	- Measuring rear wheel slip .....	35-9
- Starting with a booster battery .....	20-4	- Rear wheel weights .....	35-9
- Towing the tractor to start .....	20-5	- Installing rear wheel weights .....	35-9
- Towing the tractor .....	20-6	- Filling tires with liquid ballast .....	35-10
- Parking the tractor .....	20-6	- Front weights .....	35-11
- Stopping the engine .....	20-7	<b>Rockshaft, Three-Point Hitch</b> .....	<b>40-</b>
<b>Operating the Tractor</b> .....	<b>25-</b>	Rockshaft .....	40-1
Reduce fuel consumption .....	25-1	- Control lever .....	40-1
Ground travel speeds .....	25-3	- Load selector lever .....	40-2
- At desired engine speed .....	25-3	- Rate-of-implement drop .....	40-3
- At rated engine speed .....	25-4	Three-point hitch .....	40-4
Operating the tractor .....	25-5	- Draft links .....	40-4
- Shifting gears .....	25-5	- Center link .....	40-4
- Hi-Lo shift unit .....	25-6	- Lift links .....	40-5
- Reverser transmission .....	25-6	- Attaching implements .....	40-6
- Differential lock .....	25-7	- Positioning sway blocks .....	40-7
- Foot brakes .....	25-7	<b>Accessories</b> .....	<b>45-</b>
		Selective control valves .....	45-1
		- Poppet-type valves .....	45-1
		- Spool-type valves .....	45-7
		- Maximum permissible oil withdrawal .....	45-8
		Double acting remote hydraulic cylinder .....	45-9
		Swinging drawbar .....	45-10

*Contents*

<b>Power Take-Off</b> .....	<b>50-</b>	<b>Service-Clutch</b> .....	<b>85-</b>
– PTO master shield .....	50-1	– Adjusting clutch .....	85-1
– Operation of PTO (continuous-running) .....	50-2	– Lubricating throw-out bearing .....	85-2
– Operation of independent PTO .....	50-2		
– Attaching PTO driven equipment .....	50-3	<b>Service-Engine</b> .....	<b>90-</b>
		– Engine oil .....	90-1
<b>Front-Wheel Drive</b> .....	<b>55-</b>	– Engine filter .....	90-2
– Operation .....	55-1	– Alternator V-belt .....	90-2
– Front wheel steering angle .....	55-2	– Engine speeds .....	90-2
– Adjusting front wheel tread .....	55-3		
– Tires .....	55-5	<b>Service-Cooling System</b> .....	<b>95-</b>
		– Checking coolant level .....	95-1
<b>Fuel, Lubricants, Hydraulic Oil and Coolant</b> ...	<b>60-</b>	– Replacing coolant .....	95-2
Fuel .....	60-1		
– Fuel specifications .....	60-1	<b>Service-Axles and Wheels</b> .....	<b>100-</b>
– Fuel storage .....	60-1	– Lubricating front axle .....	100-1
Lubricants .....	60-2	– Lubricating drive housings and shafts .....	100-1
– Engine oil .....	60-2	– Lubricating rear axles .....	100-2
– Transmission/hydraulic oil .....	60-3	– Checking front axle oil level .....	100-2
– MFWD gear lubricant .....	60-4	– Changing front axle oil .....	100-3
– High temperature grease .....	60-4		
Engine coolant .....	60-5	<b>Service-Fuel System</b> .....	<b>105-</b>
		– Checking fuel filter .....	105-1
<b>Removing Access Covers</b> .....	<b>65-</b>	– Replacing fuel filter .....	105-2
– Hood .....	65-1	– Draining water trap .....	105-2
– Grille screens .....	65-1	– Bleeding fuel system .....	105-3
– Battery box covers .....	65-1		
		<b>Service-Transmission/Hydraulic</b> .....	<b>110-</b>
<b>Lubrication and Periodic Service</b> .....	<b>70-</b>	– Checking oil level .....	110-1
– Service intervals .....	70-1	– Replacing filter element .....	110-1
– Time table .....	70-2	– Changing oil .....	110-2
		<b>Service-Miscellaneous</b> .....	<b>115-</b>
<b>Service-Air Intake System</b> .....	<b>75-</b>	– Operator's seat .....	115-1
– Primary air filter .....	75-1	– 3-Point hitch .....	115-1
– Secondary air filter .....	75-2		
– Dust unloading valve .....	75-3		
– Air intake hoses .....	75-3		
		<b>Service-Brakes</b> .....	<b>80-</b>
<b>Service-Brakes</b> .....	<b>80-</b>	– Bleeding brakes .....	80-1
– Bleeding brakes .....	80-1	– Adjusting hand brake .....	80-1
– Adjusting hand brake .....	80-1		

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)