

2755 AND 2855N TRACTORS



JOHN DEERE

OPERATORS MANUAL 2755 AND 2855N TRACTORS

OML57754 L0 English

JOHN DEERE WERKE MANNHEIM
OML57754 L0

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL CAREFULLY to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND SIDES are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1990 DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual
PREVIOUS EDITIONS
COPYRIGHT © 1986, 1988, 1989

Contents

Identification Views	00-4	Operator's Station	30-
		– Lighting system	30-1
Safety	05-	– Seats	30-3
– Safety	05-1	– Roll guard	30-5
		– Seat belt	30-5
Safety Decals	06-	– Windshield wipers	30-6
– Safety decals	06-1	– Fan, air louvers, heater	30-6
		– Air conditioning system	30-7
		– Dome and console light	30-7
		– Adjusting steering wheel	30-7
Controls and Instruments	10-	Treads, Tires, Ballast	35-
– Controls	10-1	Wheel treads	35-1
– Control lights	10-2	– Adjusting front wheel tread	35-2
– Instruments	10-3	– Checking front wheel toe-in	35-3
		– Adjusting front wheel toe-in	35-3
Break-In Period	15-	– Rear wheel tread adjustment	35-4
– After first 4 and 8 hours of operation	15-1	Tires	35-8
– After first 50 hours of operation	15-1	– Tire pressures	35-8
– Within the first 100 hours of operation	15-2	– Servicing tires	35-8
– After the first 100 hours of operation	15-2	– Use correct tire combinations	35-9
		Ballasting rear wheels	35-9
Operating the Engine	20-	– Measuring rear wheel slip	35-10
– Prestarting check	20-1	– Types of rear wheel weights	35-10
– Starting the engine	20-2	– Installing rear wheel weights	35-11
– Cold weather starting aids	20-2	– Filling tires with liquid ballast	35-12
– Electric starting aid	20-3	– Installing front weights	35-13
– Starting with a booster battery	20-3	– Using implement codes	35-13
– Ether starting aid	20-4		
– Engine coolant heater	20-6	Rockshaft, Three-Point Hitch	40-
– Towing the tractor to start	20-6	Rockshaft	40-1
– Engine warm-up period	20-6	– Control lever	40-1
– Towing the tractor	20-7	– Load selector lever	40-3
– Parking the tractor	20-7	– Rate-of-implement drop	40-4
– Stopping the engine	20-8	Three-point hitch	40-5
		– Draft links	40-5
Operating the Tractor	25-	– Center link	40-6
Reduce fuel consumption	25-1	– Lift links	40-7
Ground travel speeds	25-3	– Attaching implements	40-8
– At desired engine speed	25-3	– Positioning sway blocks	40-9
– At rated engine speed	25-4		
Shifting transmission	25-5	Accessories	45-
Shift lever positions	25-5	Selective control valves	45-1
Shifting from neutral	25-5	– Poppet type valves	45-1
Shifting the Hi-Lo shift unit	25-6	– Spool type valves	45-6
Engaging creeper transmission	25-6	– Quick couplers	45-6
Differential lock	25-7	– Breakaway couplers	45-7
Foot brakes	25-7	– Maximum permissible oil withdrawal	45-9
		Double-acting remote hydraulic cylinder	45-10
		Swinging drawbar	45-11
		Front hitch	45-12

Contents

Power Take-Off	50-	Service – Clutch	85-
– PTO guard	50-1	– Adjusting clutch	85-1
– Operation of PTO	50-2	– Adding fluid to clutch reservoir	85-1
– Attaching PTO driven equipment	50-3	– Lubricating clutch throw-out bearing	85-1
Front PTO	50-4		
		Service – Engine	90-
Front-Wheel Drive	55-	– Engine oil	90-1
– Operation	55-1	– Engine filter	90-2
– Front wheel steering angle	55-2	– Alternator V-belt	90-2
– Adjusting front wheel tread	55-4	– Engine speeds	90-2
– Tires	55-6		
		Service – Cooling System	95-
Fuel, Lubricants, Coolant	60-	– Checking coolant level	95-1
Fuel	60-1	– Replacing coolant	95-2
– Fuel specifications	60-1		
– Fuel storage	60-1	Service – Axles and Wheels	100-
Lubricants	60-2	– Lubricating front axle	100-1
– Engine oil	60-2	– Lubricating drive housings and shafts	100-2
– Fluid for hydraulically operated clutch	60-2	– Lubricating rear axles	100-2
– Transmission/hydraulic oil	60-3	– Checking front axle oil level	100-3
– Transmission oil for MFWD front axle	60-4	– Changing front axle oil	100-4
– Multipurpose grease	60-4		
– Extreme pressure grease	60-4	Service – Fuel System	105-
– Engine coolant	60-5	– Checking fuel filter	105-1
		– Replacing fuel filter	105-2
Removing Access Covers	65-	– Cleaning fuel transfer pump	105-2
– Hood	65-1	– Bleeding fuel system	105-3
– Grille screens	65-1		
– Battery box covers	65-2	Service – Transmission/Hydraulics	110-
		– Checking oil level	110-1
Lubrication and Periodic Service	70-	– Replacing filter element	110-2
– Service intervals	70-1	– Changing oil	110-3
– Time-table	70-2	– Replacing steering filter	100-3
Service – Air Intake System	75-	Service – Miscellaneous	115-
– Primary air filter	75-2	– Operator’s seat	115-1
– Secondary air filter	75-3	– 3-point hitch	115-1
– Dust unloading valve	75-4	– SGB air filter	115-2
– Air intake hoses	75-4	– Front hitch	115-2
		– Front PTO	115-2
Service – Brakes	80-		
– Bleeding brakes	80-1		
– Adjusting hand brake	80-1		

Contents

Service – Electrical System	120-	Specifications	140-
– Batteries	120-1	– Engine	140-1
– Checking specific gravity	120-2	– Weights	140-2
– Level of electrolyte	120-3	– Electrical system	140-3
– Neutral start system	120-4	– Capacities	140-3
– Starting motor	120-4		
– Removing batteries	120-5	Identification Numbers	145-
– Alternator	120-7	– Identification numbers	145-1
– Lamps	120-8		
– Fuses	120-10	Lubrication and Maintenance Records	150-
		– Lubrication and maintenance records	150-1
Service – Heater and Air Conditioning System	125-		
– Air conditioning system	125-1	Attachments	155-
– Heater	125-2	– Attachments	155-1
Tractor Storage	130-	Index	160-
– Storage	130-1	– Index	160-1
– Removing tractor from storage	130-2		
Crime Prevention Tips	130-3		
– Crime prevention tips	130-3		
Troubleshooting	135-		
– Hydraulic system	135-1		
– Engine	135-2		
– Electrical system	135-3		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com