

3155 TRACTOR



 
JOHN DEERE

OPERATORS MANUAL 3155 TRACTOR

OML60017 D1 English

JOHN DEERE WERKE MANNHEIM
OML60017 D1

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL CAREFULLY to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND SIDES are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1991 DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual
PREVIOUS EDITIONS
COPYRIGHT © 1986, 1988, 1990

Contents

Identification View	00-4	Operator's Station	30-
		– Lighting system	30-1
Safety	05-	– Seats	30-2
– Safety (General)	05-1	– Roll guard	30-4
– Safety (Operation)	05-4	– Seat belt	30-4
– Safety (Service)	05-10	– Windshield wipers	30-5
		– Fan, air louvers, heater	30-5
		– Air conditioning system	30-6
		– Steering wheel adjustment	30-6
Safety-Decals	06-		
– Safety-Decals	06-1	Treads, Tires, Ballast	35-
		Wheel treads	35-1
Controls and Instruments	10-	– Adjusting front wheel tread	35-1
– Controls	10-1	– Front wheel steering angle	35-2
– Control lights	10-2	– Checking front wheel toe-in	35-2
– Instruments	10-3	– Adjusting front wheel toe-in	35-2
		– Rear wheel tread adjustment	35-3
		Tires	35-6
Break-In Period	15-	– Servicing tires	35-6
– After the first 4 and 8 hours	15-1	– Tire pressures	35-6
– After the first 50 hours	15-1	– Use correct tire combinations	35-7
– Within the first 100 hours	15-2	Ballast	35-8
– After the first 100 hours	15-2	– Measuring rear wheel slip	35-9
		– Installing rear wheel weights	35-9
Operating the Engine	20-	– Filling tires with liquid ballast	35-11
– Prestarting check	20-1	– Front weights	35-12
– Starting the engine	20-2		
– Electric starting aid	20-3	Rockshaft, Three-Point Hitch	40-
– Starting with a booster battery	20-3	Rockshaft	40-1
– Ether starting aid	20-4	– Control lever	40-1
– Towing the tractor to start	20-5	– Load selector lever	40-2
– Towing the tractor	20-6	– Rate-of-implementation drop	40-3
– Parking the tractor	20-6	Three-point hitch	40-4
– Stopping the engine	20-6	– Draft links	40-4
		– Center link	40-4
		– Lift links	40-5
		– Attaching implements	40-6
		– Positioning sway blocks	40-6
Operating the Tractor	25-		
Reduce fuel consumption	25-1	Accessories	45-
Ground travel speeds	25-3	Selective control valves	45-1
– At desired engine speed	25-3	– Poppet type valves	45-1
– At rated engine speed	25-4	– Breakaway couplers	45-4
Operating the tractor	25-5	– Spool type valves	45-6
– Shifting gears	25-5	– Quick couplers	45-6
– Hi-Lo shift unit	25-6	– Maximum permissible oil withdrawal	45-7
– Differential lock	25-6	Double acting remote hydraulic cylinder	45-8
– Foot brakes	25-7	Swinging drawbar	45-9
– Front wheel drive	25-8	Front hitch	45-10

Contents

Power Take-Off	50-	Service-Cooling System	85-
– PTO master shield	50-1	– Checking coolant level	85-1
– Operation of PTO	50-2	– Replacing coolant	85-2
– Attaching PTO driven equipment	50-3		
Front PTO	50-4	Service-Axles and Wheels	90-
		– Lubricating drive housings and shafts	90-1
Fuel, Lubricants, Coolant	55-	– Lubricating rear axles	90-1
Fuel	55-1	– Checking front axle oil level	90-2
– Fuel specifications	55-1	– Changing front axle oil	90-3
– Fuel storage	55-1		
Lubricants	55-2	Service-Fuel System	95-
– Engine oil	55-2	– Checking fuel filter	95-1
– Fluid for hydraulically operated clutch	55-2	– Replacing fuel filter	95-1
– Transmission/hydraulic oil	55-3	– Cleaning fuel transfer pump	95-2
– Transmission oil for MFWD front axle	55-4	– Bleeding fuel system	95-3
– Extreme pressure grease	55-4		
– Engine coolant	55-5	Service-Transmission/Hydraulics	100-
		– Checking oil level	100-1
Removing Access Covers	60-	– Replacing filter element	100-1
– Hood	60-1	– Changing oil	100-2
– Grille screens	60-1		
– Battery box covers	60-2	Service-Miscellaneous	105-
		– Adding fluid to clutch reservoir	105-1
Lubrication and Periodic Service	65-	– Operator's seat	105-1
– Service intervals	65-1	– 3-Point hitch	105-1
– Time-table	65-2	– Compressor V-belt	105-1
		– Front hitch	105-2
Service-Air Intake System	70-	– Front PTO	105-2
– Primary air filter	70-2	– SGB air filter	105-2
– Secondary air filter	70-3		
– Dust unloading valve	70-4	Service-Electrical System	110-
– Air intake hoses	70-4	– Batteries	110-1
		– Checking specific gravity	110-2
Service-Brakes	75-	– Level of electrolyte	110-3
– Bleeding brakes	75-1	– Neutral start system	110-4
– Adjusting hand brake	75-1	– Starting motor	110-4
		– Removing batteries	110-5
Service-Engine	80-	– Alternator	110-6
– Engine oil	80-1	– Lamps	110-7
– Engine filter	80-2	– Fuses	110-10
– Alternator V-belt	80-2		
– Engine speeds	80-2	Service-Heater and Air Conditioning System ..	115-
		– Air conditioning system	115-1
		– Heater	115-2

Contents

Tractor Storage	120-	Identification Numbers	135-
– Storage	120-1	– Identification numbers	135-1
– Removing tractor from storage	120-2		
Crime Prevention Tips	120-3	Lubrication and Maintenance Records	140-
– Crime prevention tips	120-3	– Lubrication and maintenance records	140-1
Troubleshooting	125-	Attachments	145-
– Hydraulic system	125-1	– Attachments	145-1
– Engine	125-2		
– Electrical system	125-3		
		Index	150-
Specifications	130-	– Index	150-1
– Engine	130-1		
– Weights	130-2		
– Electrical system	130-3		
– Capacities	130-3		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com