













John Deere Welland Works

OMM128787 Issue G6

(This manual replaces OM125961 A6)

LITHO IN U.S.A.
ENGLISH

## Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your vehicle correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your vehicle and should remain with the vehicle when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of the machine or implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the vehicle should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the vehicle.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering vehicles will result in such action.

TIRE WARRANTY - John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your vehicle may not apply outside the U.S. (See your John Deere dealer for specific information).

## CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



-UN-290

02263

WX,DGATOR,IFC1 -19-15NOV95

## Checklists

OWNER REGISTER	
See your shipping invoice for Serial Numbers, also record numbers in Specification Section.	
Name	Date Sold
Address	Utility Vehicle:
City	Product Identification Number
State/Prov	Engine Serial Number
Mail Code	Transaxle Serial Number
	WX,GATOR,A -19-18FEB93
AFTER-SALE CHECKLIST	
It is suggested that the following items be checked sometime during the first six months operation of the vehicle.	Check with the customer as to the performance of the vehicle.
Check the entire vehicle for loose or missing hardware.	If possible, run the vehicle to see if it is functioning properly.
Check for broken or damaged parts. Make necessary repairs.	Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.
☐ Check for fluid leaks. Make necessary repairs.	Date Visited:
Check and adjust all operator controls; brakes, steering and throttle.	Signature:
Acquaint the customer with any special attachments that will help do a better job.	
	WX,GATOR,D -19-18FEB93



PREDELIVERY	
Check off each item as it is found satisfactory or after proper adjustment is made.	Check for creep at idle speed with park brake unlocked. (See Technical Manual)
All safety guards and shields fastened in place.	
<ul> <li>All decals in place and readable.</li> <li>☐ Inflate tires to 34—41 kPa (5—6 psi).</li> <li>☐ Lubricate. (See Service section).</li> <li>☐ Check air cleaner. (See Service section.)</li> <li>☐ Check engine and transmission oil level.</li> <li>☐ Check battery electrolyte level.</li> <li>☐ Check battery charge.</li> <li>☐ Add fuel. Start engine. Test drive.</li> </ul>	Check safety start system. (See Checkout Procedure.)  Check steering.  Check controls: throttle, brake, park brake.  Check for fluid leaks: coolant, fuel or oil.  Check vehicle for damage and touch up any scratches.  Clean utility vehicle.  Check brake adjustment, differential lock and drive chain slack.  Signature:
	Date Set Up:
	WX,DGATOR,B1 -19-11DEC95



DELIVERY CHECKLIST	
Review the Operator's Manual with the customer explaining the following:	Servicing the utility vehicle regularly and correctly
☐ John Deere warranty	☐ Storing the utility vehicle correctly
☐ Review safety information and safe operation	☐ John Deere parts and service
☐ How to use controls	Record vehicle numbers in the Product Identification Number section
Review service section	Remove and file this page
Operating the vehicle correctly	Give the customer the Operator's Manual and Videotape. Encourage the customer to read the
☐ Hauling the utility vehicle on a trailer or truck	manual and view the video before operating the vehicle
Correct fuel and lubricants	Date Delivered:
☐ Daily and periodic inspections, including the Operational Checkout Procedure	Signature:
	WX,GATOR,C -19-18FEB93

## CLEANING AND POLISHING PLASTIC HOOD AND FENDERS

IMPORTANT: To keep scratches on plastic parts to minimum, do not rub or brush off any parts with bare hands, use a soft cloth (i.e. cheesecloth) or a light flow of compressed air. For dirt, wash with steady stream of water only (no detergent), then blow off excess water with air.

- 1. Remove excess dust or dirt.
- 2. When surface is dry, spray on PLEDGE® and leave-for 30 to 60 seconds.
- 3. Using a dry soft cloth (i.e. cheesecloth) wipe off to bring up lustre.



PLEDGE® is a Registered Trademark of S.C Johnson, Co.

WX,GATOR,AS,P -19-22SEP93

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com