 


UTILITY VEHICLE E-GATOR™

Serial No. (001001–)

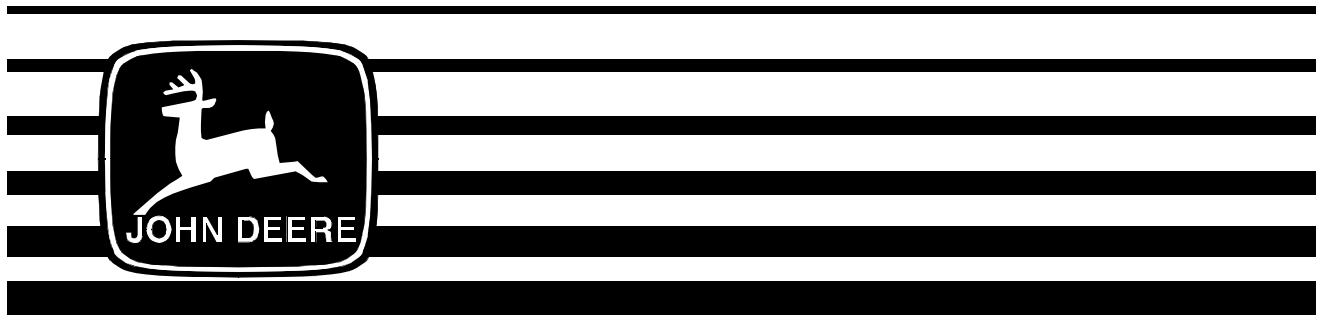

OPERATOR'S MANUAL

John Deere
Worldwide Commercial And
Consumer Equipment Division
OMM135735 E9

North American Version
Litho in U.S.A.

English

INTRODUCTION

 
THANK YOU for purchasing a John Deere product.

Read this manual thoroughly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are metric units and their U.S. customary equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (---->), it indicates the part it is pointing to is hidden.

Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

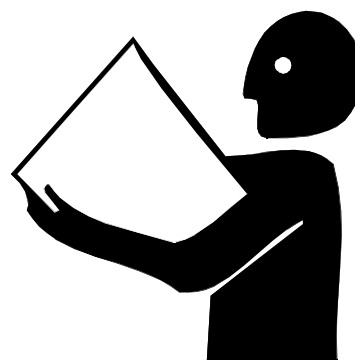

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

PRODUCT IDENTIFICATION NUMBER (A):

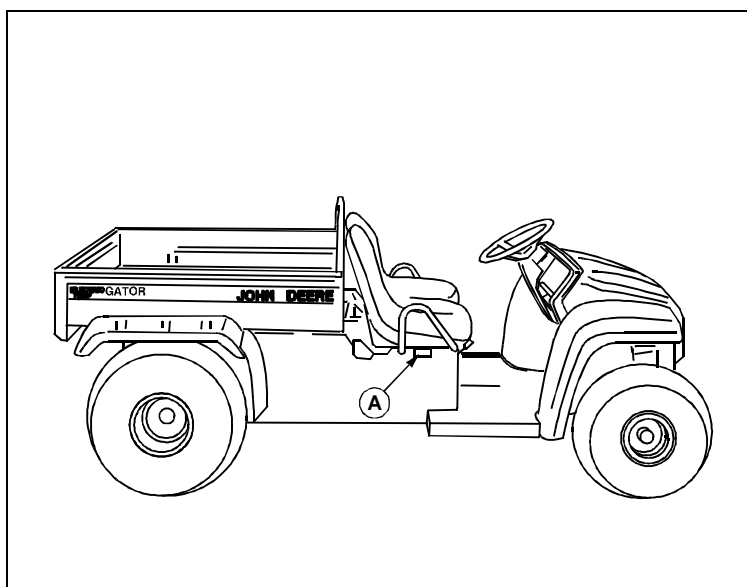 


TABLE OF CONTENTS

Safety Signs	1
Controls	7
Operating	9
Replacement Parts	43
Service Machine Safely	44
Service Interval Chart	50
Service -Battery	52
Service -Electrical	78
Service - Miscellaneous	81
Troubleshooting	86
Storing Machine	88
Assembly	92
Specifications	104
Warranty	114
Index	115
John Deere Service Literature	119

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1999
Deere & Co.
John Deere Worldwide Commercial and
Consumer Equipment Division
Horicon, WI
All rights reserved

 
OMM135735 E9

SAFETY SIGNS

Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.

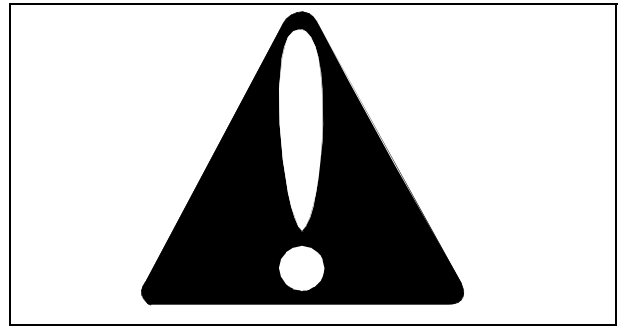


Machine Safety Labels

WARNING

RIDERS CAN FALL OFF AND BE KILLED

 
- Maximum of one person to a seat.
- No riders in box or anywhere else.

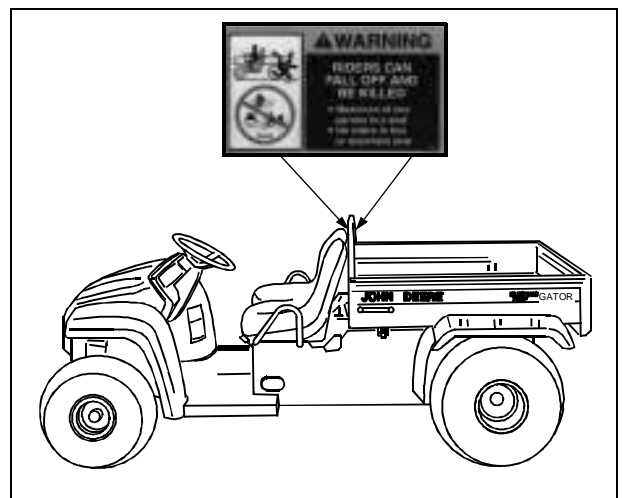

DANGER

To avoid injury from electrical burns or battery explosion

 - Read the operator's manual.
- Turn key off, place FORWARD/REVERSE lever to Neutral (N) and remove key.
- Place SERVICE switch in SERVICE position.
- Never disconnect a circuit under load at a battery terminal.
- Remove all jewelry (rings, watches etc.).
- Use insulated tools only.
- Disconnect batteries, as shown, to avoid unintentional starting of vehicle. Pay close attention to polarities when connecting batteries. Always connect the red end of the cable to the positive (+) post and the black end of the cable to the negative (-) post.

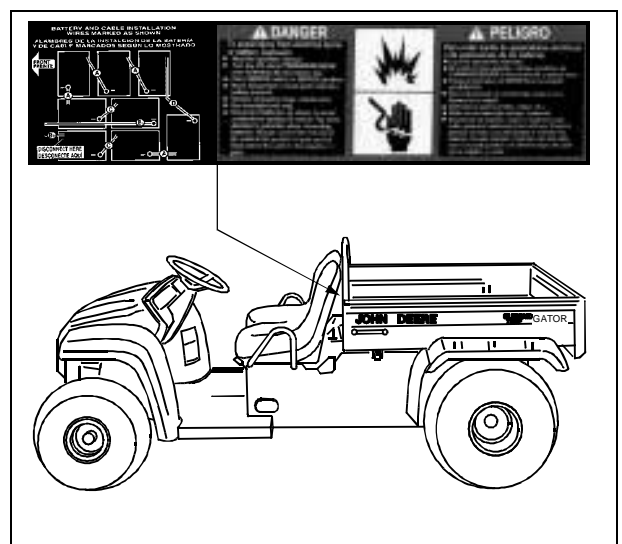


SAFETY SIGNS

WARNING

YOUNG DRIVERS INCREASE CHANCE OF DEATH

 
- Young drivers may not be able to control vehicle.
- No drivers younger than 16 years old.

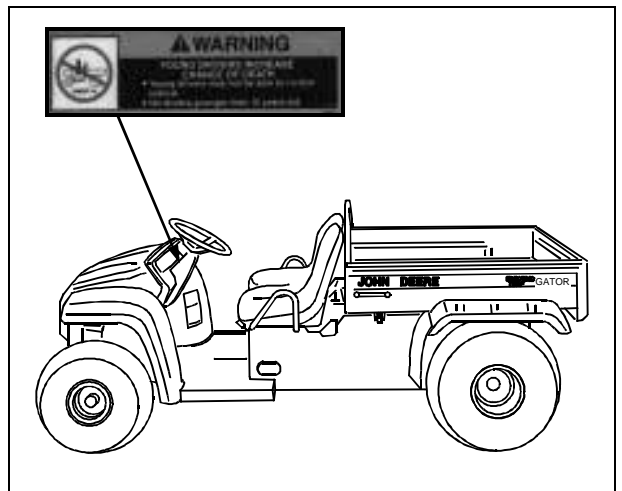

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH

 
- Read operator's manual.
- Drive very slowly when turning.
- Always use brakes going down a slope. Vehicle can take-off (freewheel) downhill.
- No loads heavier than 500 lbs (227 kg) in 4x2. Spread load evenly. Tie loads down.
- Reduce speed and load on rough or hilly ground.

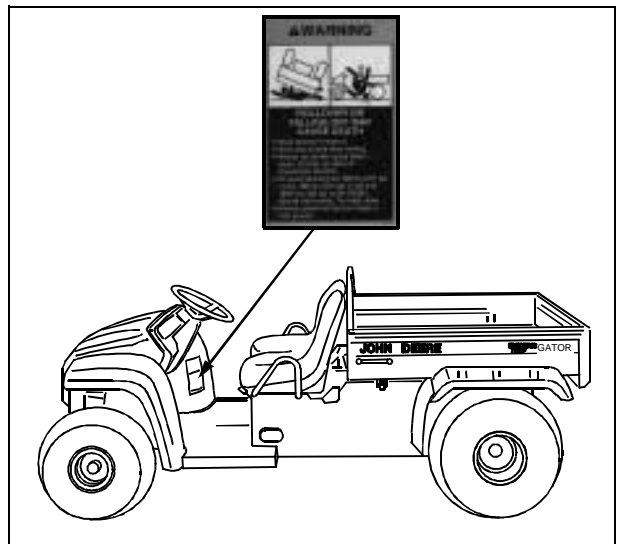

CAUTION

Before leaving vehicle:

 - Shift to neutral.
- Set park brake.
- Remove key.

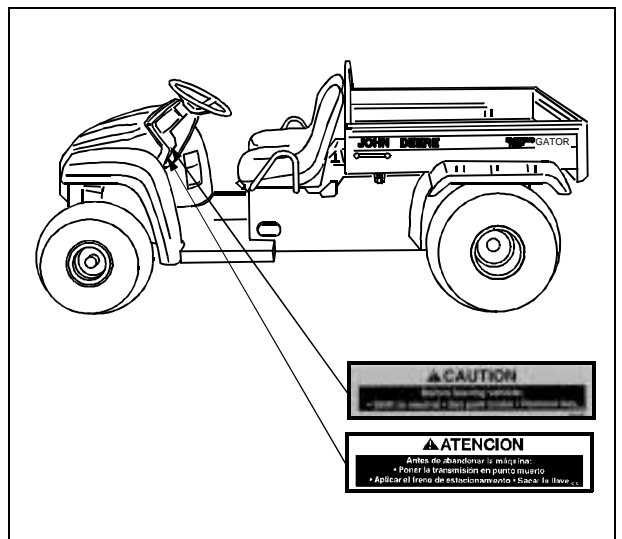

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com