 
John Deere Model "A" Series Tractor (Serial No. 584000 and Up)





OPERATORS MANUAL

John Deere Model "A" Series Tractor (Serial No. 584000 and Up)

OMRA2248 (01FEB48) English

OMRA2248 (01FEB48)

LITHO IN U.S.A.






WE welcome you to our ever-growing family of John Deere tractor owners. We are confident that the dependable and economical performance of your new tractor will prove that you made a wise choice.

Back of your tractor is an organization that has been building farm equipment for more than one hundred years. The plant in which your tractor was built is the largest single tractor plant in the world. In this modern factory, equipped with the finest precision machinery, fine materials, high-grade workmanship, thorough inspection, and complete testing are combined to give you the best in dependable tractor performance and economical tractor operation.

The way you operate your tractor and the care you give it have much to do with the service and satisfaction you will get from it. This manual has been carefully prepared and profusely illustrated to show you what to do and when to do it. It has been written by the best engineers in the John Deere tractor factory. Make it your guide. Study it carefully. Refer to it often. Only by following the suggestions it contains can you hope to get the most from your investment.

If you find that you need information not covered in this manual, or if your tractor requires special servicing, which it will periodically, take advantage of the facilities offered by your John Deere dealer. He has trained mechanics, who are kept informed on the best methods of John Deere tractor servicing and can give you prompt, "know-how" service in the field or in his shop.

When in need of parts, go to your John Deere dealer. Be sure to give him the serial number of your tractor. The illustrations, below, will show you where to find the serial numbers of your tractor, magneto, and Powr-Trol or power lift. Obtain these serial numbers from your tractor—NOW—and insert them in the spaces provided in the illustrations below. Also, be sure they are written on the special identification card which is included with the manual. Put it in your billfold for ready reference.

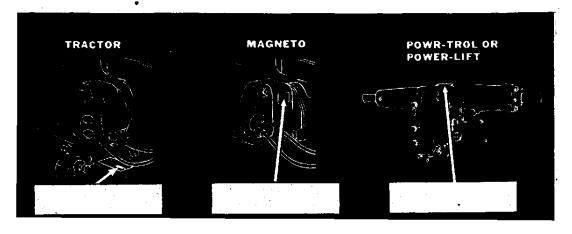

• TABLE OF CONTENTS •

SPECIFICATIONS AND DATA	4-5
CONTROLS	7-13
Contains information regarding Seat, Steering, Shutter and Fuel Control with Heat and Oil Gauges, Choke Lever, Engine Cranking, Brakes, Clutch, Gear Shift Lever, Power Shaft, Power Lift, and Powr-Trol.	
STARTING THE NEW TRACTOR	14-20
Contains information regarding Fuels, Fuel Storage, Run-In Period for the New Tractor, Before Starting the Engine, Starting the Engine, Operating the Trac- tor, Stopping the Tractor, and Stopping the Engine.	
LUBRICATION	21-30
Contains information regarding Purpose of Lubrication, Storage of Lubricants, Engine Lubrication, Transmission Lubrication, and Periodic Lubrication Service.	
SERVICE THAT WILL KEEP YOUR TRACTOR IN TIP- TOP SHAPE	31–55
Contains information regarding Fuel System, Ignition System, Cooling System, Clutch, Tappet Adjustment, Rear Wheel Brakes, Pulley Brake, Power Lift, Powr-Trol, Front Wheels, Rear Wheels, Tire Inflation, Rubber Tire Inflation Chart, Care of Rubber Tires, Weighting Rear Wheels, Drawbar, Starting and Lighting Equipment, Storing the Tractor, and Service Suggestions.	
SERVICE REMINDERS	56
STORING THE TRACTOR	57
SAFETY SUGGESTIONS	58-59
TRACTOR DIFFICULTIES	60-66
GENUINE PARTS	68
JOHN DEERE DEALER SERVICE	69
INDEX	70-71
1	



We suggest this rechecking especially during freezing weather or when a period of time has elapsed between delivery and when you are ready to operate it. For complete starting information, see page 14.



We, your John Deere dealer, are mighty proud to add your name to our list of John Deere tractor owners. Because we are interested in having you obtain from this new tractor all the comfort and long life that are built into it, we are pleased to discuss the following important maintenance operations:

Controls.
Breaking-in Period Part Load, Open Throttle, Changing Oil.
Method of Starting and Stopping Engine.
Lubrication—Engine, Transmission, Power Lift, Powr-Trol, Grease Fittings, Air Cleaner and Oil Gauge.
Cooling System—Adding Water, Shutter Control, Cleaning.
Fuel System—Fuel, Fuel Control, Sediment Bowl and Trap, Carburetor Adjustment.
Tires—Inflation, Inspection, Wheel Weights.
Drawbar—Adjustment; pull from no other place.
Magneto Care-Terminals Tight, Cleaning, Oiling, Adjusting Points.
Rear Wheel Brakes—Adjustment.
Clutch—Adjustment, Pulley Brake.
Front Wheels—Cleaning, Adjustment and Spacing.
Power Lift or Powr-Trol—Drop Control, Operation.
Starter and Lights-Starting, Lights, Battery Care.
Tightening Bolts and Nuts-Caution on Governor Cover Cap Screws.
Safety in Operation—Selecting Proper Speed, Power Shaft.
Keeping the Tractor Clean.
Have Farmer Operate the Tractor.
Appointment for After-Sales Service—not later than two weeks after delivery.

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com