

JOHN DEERE 862B SCRAPER



JOHN DEERE

OPERATORS MANUAL JOHN DEERE 862B SCRAPER

OMT103982 D6 English

OMT103982 D6

LITHO IN THE U.S.A. (REVISED)
ENGLISH



Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Write product identification numbers in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.


Measurements in this manual are U.S. customary units and their metric equivalents.

Right-hand and left-hand sides are determined by facing in the direction of forward travel.

Warranty on this machine appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.

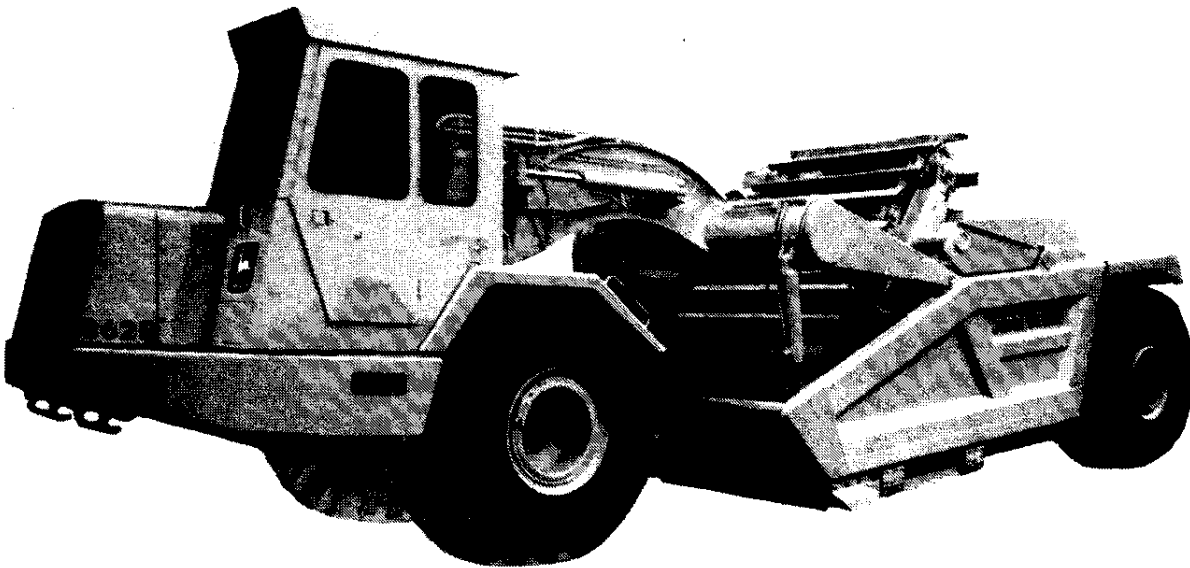

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

Contents

	Page		Page
Safety	05-1	Maintenance	
Operator's Station		Fuel System	90-1
instrument Panel	10-1	Cooling System	90-3
Controls and Pedals	10-1	Electrical System	90-6
Levers and Indicators	10-2	Adjust Elevator-to-Cutting Edge	90-10
Switches	10-2	Adjust Rail Guide Assembly	90-11
Lights	10-3	Replace Halogen Bulbs	90-11
Heater and Air Conditioning Controls	10-4	Adjust Ejector Gate Clearance	90-13
Window	10-4	Adjust Cutting Edge	90-14
Steering Wheel	10-5	Elevator Chain	90-15
Seat	10-5	Elevator Sprocket Cap Screws Torque ...	90-17
Break-In	15-1	Check Cycle Times	90-18
Pre-Start Inspection	20-1	Oscillation Hitch Cap Screws Torque ...	90-19
Operating the Engine		Neutral Start System	90-20
Starting	25-1	Wheel Cap Screws Torque	90-20
Stopping	25-10	Air Conditioning System	90-21
Driving the Scraper		Install New Tooth Tip	90-21
Precautions	30-1	Check Differential Lock	90-22
Travel Speeds	30-2	Check and Adjust Park Brake	90-22
Accelerator Pedal	30-2	Cutting Edge Positions	90-23
Service Brake Pedal	30-2	Change Reverse Warning Alarm Volume .	90-23
Park Brake	30-3	Hardware Torque Specifications	90-24
Parking	30-3	Operational Checkout	
Operating the Scraper		Monitor Indicator and Gauge Checks	95-1
Control Levers	35-1	Transmission Control Checks	95-2
Differential Lock Pedal	35-4	Park Brake, Fuel System,	
Automatic Transmission	35-4	Tachometer Checks	95-4
Hold Pedal	35-6	Brake System Checks	95-5
Manual Shift Transmission	35-8	Steering System Checks	95-6
Operating Tips	35-9	Driving Checks	95-7
Transporting		Hydraulic System Checks	95-8
Precautions	40-1	Axle Suspension System Checks	95-10
Loading Machine on Trailer	40-1	Accessory Checks	95-10
Towing	40-3	Cab Component Checks	95-11
Fuels and Lubricants		Troubleshooting	
Fuel	45-1	Engine	100-1
Engine Oil	45-2	Electrical System	100-9
Hydraulic, Transmission, Upper		Heater-Air Conditioner	100-16
Elevator Cross Shaft Bearings,		Hydraulics	100-17
Drive Axle and Elevator Gearbox Oils ..	45-3	Elevator	100-20
Grease	45-4	Transmission	100-21
Differential	100-24	Steering	100-25
Brakes	100-26	Axle Suspension System	100-27
Periodic Maintenance		Storage	
Periodic Maintenance Chart	50-1	Prepare Machine for Storage	105-1
Hour Meter	50-1	Remove Machine From Storage	105-2
Service Doors	50-2	Crime Prevention Tips	110-1
Service Intervals	50-3	Specifications	115-1
Periodic Maintenance/As Required	55-1	Machine Numbers	120-1
Periodic Maintenance/10 Hours or Daily ...	60-1	Alphabetical Index	125-1
Periodic Maintenance/50 Hours	65-1	Literature Order Form	inside Back Cover
Periodic Maintenance/200 Hours	75-1		
Periodic Maintenance/500 Hours	80-1		
Periodic Maintenance/1000 Hours	85-1		
Periodic Maintenance/2000 Hours	86-1		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



AB6;T81389 053;ALERT 071085

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

 **DANGER**

 **WARNING**

 **CAUTION**

AB6;TS187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

Keep safety signs in good condition. Replace missing or damaged safety signs.



AB6;TS188 053;SIGNS 071085



On ROPS (or cab) frame above dash

018;T6001BE 02T;05 C19 050286

 **WARNING**

AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY.

1. Do not start engine by shorting across starter terminals. Machine will start in gear and move if normal starting circuitry is bypassed.
2. Start engine only from operator's seat with transmission in neutral or park. NEVER start engine while standing on ground.

S

Between air cleaner center mounting strap and end cap—visible when servicing batteries

018;T6084AZ 02T;05 C20 050286

 **WARNING**

Avoid injury from escaping fluid. Contents of this accumulator are under pressure.

1. Refer to proper Machine Model Technical Manual for disassembly or charging instructions and equipment required.
2. Charge with DRY NITROGEN only.

S

**Maximum Working Pressure
22060 kPA (3200 PSI)**

On front of accumulator

018;T6084AY 02T;05 C21 050286

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com