

450G, 550G, and 650G Torque Converter and Direct Drive Crawler Dozers



JOHN DEERE

OPERATORS MANUAL

450G, 550G, and 650G Torque Converter
and Direct Drive Crawler Dozers

OMT163974 A8 English

John Deere Dubuque Works

OMT163974 A8

(This manual replaces OMT159724)

LITHO IN U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers section. Accurately

record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

MODT1587281FC7 -19-26SEP95-1/3

Introduction



T7896AM -UN-12DEC92



T7883AQ -UN-09DEC92

MODT158728IFC7 -19-26SEP95-2/3

Introduction



T7888AR -UN-09DEC92

MODT158728IFC7 -19-26SEP95-3/3

Contents

	Page		Page
Safety	05-1	Adjust Non-Suspension Seat	10-14
Safety Signs		Adjust Suspension Seat—If Equipped	10-15
Safety Sign	06-1	Adjust Armrest	10-15
Operator's Station		Check Seat Belt	10-16
Instrument Panel (S.N. —823918)	10-1	Operator's Manual Holder	10-16
Instrument Panel (S.N. 823919—)	10-2	Horn Switch	10-17
Stop Engine Indicator and Alarm Indicator	10-3	Operating Lights—If Equipped	10-18
Service Required Indicator	10-3	Break-In	
Engine Oil Pressure Indicator	10-3	Engine Break-In Oil	15-1
Engine Coolant Temperature Indicator	10-4	After the First 10 Hours	15-1
Engine Alternator Voltage Indicator	10-4	Between the First 50 to 100 Hours—	
Transmission Oil Temperature Indicator	10-4	After Sales Inspection (ASI)	15-2
Transmission Oil Filter Indicator	10-5	Pre-Start Inspection	
Hydraulic Oil Filter Indicator	10-5	Inspect Machine Daily Before Starting	20-1
Instrument Panel—Gauges—If Equipped		Operating the Engine	
(S.N. —823918)	10-6	Check Instruments Before Starting—	
Instrument Panel—Gauges—If Equipped		Instrument Panels With Indicators Only	25-1
(S.N. 823919—)	10-7	Check Instruments Before Starting—	
Fuel Gauge	10-7	Instrument Panels With Gauges	25-1
Engine Water Temperature Gauge—If		Starting the Engine	25-2
Equipped	10-8	Starting Fluid—If Equipped (Cold Weather	
Engine Oil Pressure Gauge—If Equipped	10-8	Starting Aid)	25-4
Transmission Oil Temperature Gauge—If		Using Coolant Heater—If Equipped	25-5
Equipped	10-8	Using Booster Batteries With Jumper	
Low Voltage Indicator Light—If Equipped	10-8	Battery Terminal—If Equipped	25-6
Transmission Oil Filter Indicator Light—If		Using Booster Batteries—12 Volt System	25-7
Equipped	10-9	Check Instruments After Starting—	
Hydraulic Oil Filter Restriction Indicator		Instrument Panels With Indicators Only	25-8
Light—If Equipped	10-9	Check Instruments After Starting—	
Transmission Oil Pressure Indicator Light—		Instrument Panels With Gauges Only	25-8
If Equipped	10-9	Engine Warm-Up	25-8
Dozer Control Lever—One Lever Option	10-10	Cold Weather Warm-Up	25-9
Dozer Control Levers—Two Lever Option	10-10	Stopping the Engine	25-10
Pedals With Lever Steering—If Equipped	10-11	Adjusting Engine For High Elevation	
Pedals With Pedal Steering—If Equipped	10-11	(S.N. —	
Pedals With Pedal Steering With Torque		840460)	25-11
Converter—If Equipped	10-12	Driving the Machine	
Steering Levers—If Equipped	10-12	Driving the Machine	30-1
Levers	10-13		
Battery Disconnect Switch—If Equipped	10-13		
Vandal Shield	10-14		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1997
 DEERE & COMPANY
 Moline, Illinois
 All rights reserved
 A John Deere ILLUSTRATION® Manual
 Previous Editions
 Copyright © 1993, 1991, 1988, 1987, 1994, 1996

Contents

	Page		Page
Using Park and Brake Lock Lever	30-2	Bucket Digging	36-13
Shifting the Transmission	30-3	Crowd Digging	36-13
Using Engine Speed Control Lever	30-3	Planning Spoil Piles	36-14
Decelerator Pedal With Torque Converter	30-4	Preparing To Operate Dozer After Operating Backhoe	36-14
Steering the Machine With Lever Steering— If Equipped	30-4	Operating Winch	36-15
Steering the Machine With Pedal Steering—If Equipped	30-5	Fasten Cable To Winch Drum—4000 Series	36-16
Travel Speeds	30-6	Winch Free Spool Drag Adjustment	36-19
Stopping the Machine	30-8	Greasing Winch Fairlead—If Equipped	36-19
Emergency Stopping—Pedal Steering	30-9	Greasing Ripper—If Equipped	36-19
Emergency Stopping—Lever Steering	30-9	Greasing Log Arch—If Equipped	36-20
Parking the Machine	30-11	Transporting	
Lock All Compartments	30-11	Loading Machine on a Trailer	40-1
Operating the Crawler		Towing Procedures	40-2
Operating Blade—Two Lever Option	35-1	Fuels and Lubricants	
Tilting Blade—Two Lever Option	35-2	Diesel Fuel	45-1
Angling Blade—Two Lever Option	35-3	Low Sulfur Diesel Fuel Conditioner	45-2
Changing Blade Pitch	35-4	Diesel Fuel Storage	45-3
Operating Blade—One Lever Option	35-6	Fuel Tank	45-4
Tilting Blade—One Lever Option	35-6	Diesel Engine Oil	45-5
Angling Blade—One Lever Option	35-7	Final Drive Oil	45-6
Using Decelerator Pedal Declutch Option (Direct Drive Machines)	35-7	Track Roller, Front Idler, and Carrier Roller Oil	45-6
Operating Suggestions	35-7	Transmission, Steering Clutches, and Hydraulic Oil	45-7
Operating Tips	35-8	Grease	45-8
Operating Crawler Dozer On Slopes	35-8	Lubricant Storage	45-8
Operating and Maintenance Undercarriage Tips	35-9	Alternative and Synthetic Lubricants	45-9
Operating In Rough Terrain	35-10	Periodic Maintenance	
Side-by-Side Dozing	35-10	Service Your Machine At Specified Intervals	50-1
Slot Dozing	35-11	Check the Hour Meter Regularly	50-2
Tilt Dozer Ditching	35-11	Use Correct Fuels and Lubricants	50-3
Straight Dozer Ditching	35-11	Prepare Machine For Maintenance	50-4
Backfilling	35-12	Remove Bottom Guard	50-5
Leveling A Stockpile	35-13	Maintenance and Repair Record Keeping System	50-5
Moving Boulders	35-14	OILSCAN Plus [®] , CoolScan [™] 3-WAY [™] Test Kit	50-6
Bench Cut	35-15	Maintenance and Repair Record Keeping System	50-7
Brush Removal	35-15	Maintenance—As Required	
Tree Removal	35-16	Check and Adjust Belt Tension (S.N. — 840460)	55-1
Stump Removal	35-17	Inspect Serpentine Belt (S.N. 840461—)	55-2
Attachments		Check the Air Restriction Indicator	55-2
Attaching Backhoe to Crawler Tractor	36-1	Check the Pre-Cleaner	55-2
Detaching Backhoe From Crawler Tractor	36-3	Check Track Sag	55-3
Prepare to Operate Backhoe	36-6		
Control Levers	36-7		
Operating Stabilizers	36-7		
Backhoe Control Levers—John Deere Pattern	36-8		
Grease Backhoe—If Equipped	36-9		
Changing Backhoe Bucket Position	36-10		
Lifting	36-11		

Continued on next page

Contents

	Page		Page
Adjusting Track Sag	55-4	Maintenance	
Drain Fuel Tank Sump	55-7	Checking Hoses and Radiator	90-1
Maintenance—Every 10 Hours or Daily		Test the Coolant Freeze—Protection Level	90-2
Check Engine Oil Level	60-1	Do Not Service Injection Nozzles	90-2
Check Transmission Oil Level	60-2	Do Not Change Injection Pump	90-3
Check Hydraulic Oil Level	60-3	Draining Fuel Filter Sediment	90-3
Check Coolant Level	60-4	Checking Fuel Filler Screen	90-4
Lubricate Dozer Linkage	60-5	Cleaning Fuel Tank Outlet Screen—Earlier Machines	90-4
Maintenance—Every 250 Hours		Cleaning Fuel Tank Outlet Screen—Later Machines	90-5
Change Engine Oil and Filter	75-1	Fuel Shut-Off	90-6
Check Final Drives Oil Level	75-2	Inspect Air Cleaner Elements Restriction Indicator	90-7
Clean Transverse Case	75-2	Cleaning Dusty Primary Element	90-8
Grease Track Adjuster Cylinder (S.N. — 745426)	75-2	Inspecting Element	90-8
Check Coolant Level	75-3	Precautions For Alternator and Regulator	90-9
Maintenance—Every 500 Hours		Service Batteries Carefully	90-10
Change Fuel Filter (S.N. —840460)	80-1	Checking Electrolyte Specific Gravity	90-12
Change Fuel Filter/Water Separator (S.N. 840461—)	80-3	Using Battery Charger	90-13
Check Air Intake Hose	80-4	Replacing Batteries	90-14
Change Transmission Oil Filter	80-5	Removing Batteries	90-15
Change Hydraulic Reservoir Breather Filter and Hydraulic Oil Filter	80-6	Resetting Circuit Breakers	90-16
Batteries		Changing Reverse Warning Alarm Volume	90-17
Check Electrolyte Level and Terminals	80-8	Check Neutral Start System	90-18
Check Coolant Conditioner In Radiator	80-10	Adding Attachments/Accessories To Roll-Over Protective Structure (ROPS)	90-18
Maintenance—Every 1000 Hours		Track Sag General Information	90-19
Check Transmission Accumulator—Direct Drive Machines	85-1	Remove and Install Lubricated Track Chain—Split Link—Earlier Machines	90-20
Change Hydraulic Oil	85-1	Remove and Install Lubricated Track Chain—Single Tooth Split Link—Later Machines	90-23
Change Transmission Oil and Clean Suction Screen	85-4	Check Front Idler Vertical Movement	90-25
Change Final Drives Oil	85-8	Idler Height Adjustment	90-26
Check Engine Speed	85-8	Checking Track Carrier Roller Oil Level	90-29
Check and Adjust Engine Speed Control Linkage Without Declutch	85-9	Checking Idler Oil Level	90-31
Check and Adjust Engine Speed Control Linkage With Declutch—Direct Drive Machines—If Equipped	85-11	Checking Track Roller Oil Level	90-33
Clean Engine Crankcase Ventilation Tube	85-12	Steering Brake Adjustment—(S.N. — 770807)	90-34
Measure and Adjust Engine Valve Clearances (S.N. —840460)	85-13	Steering Brake Adjustment—(S.N. 770808—)	90-36
Drain the Cooling System	85-14	Check Fire Extinguisher—If Equipped	90-38
Diesel Engine Coolant	85-15	Reversible Fan—If Equipped	90-38
Fill the Cooling System	85-16	Do Not Service Control Valves and Cylinders	90-38
Changing Air Cleaner Elements	85-17	Hardware Torque Specifications	90-39
Maintenance—Every 2000 Hours		Keep ROPS Installed Properly	90-39
Measure and Adjust PowerTech Engine Valve Clearances (S.N. 840461—)	86-1	Checking Track Shoe Cap Screw Torque	90-40
		Unified Inch Bolt and Cap Screw Torque Values	90-41

Continued on next page

Contents

	Page		Page
Metric Bolt and Cap Screw Torque Values	90-43	Power Control Clutch Valve Check	95-10
Check Oil Lines and Fittings	90-44	Driving Checks	95-11
Service Recommendations For 37° Flare and 30° Cone Seat Connectors	90-45	Transmission Slip Check	95-11
Service Recommendations for O-Ring Boss Fittings	90-46	Transmission Noise Check	95-11
Service Recommendations for Flat Face O-Ring Seal Fittings	90-48	Transmission Sealing Check	95-11
Service Recommendations for Inch Series Four Bolt Flange Fittings	90-49	Hydraulic System Checks	95-12
Service Recommendations for Metric Series Four Bolt Flange Fitting	90-50	Visual Check	95-12
Operational Checkout		Hydraulic Warm-Up Procedure	95-12
Operational Checkout	95-1	Oil Cooler Circuit Check (If Equipped)	95-12
Indicators, Shift Lever Linkage and Reverse Warning Alarm Checks (With Engine Off)	95-2	Hydraulic Reservoir Breather Check	95-13
Monitor Indicator Lights and Alarm Checks	95-2	Undercarriage Checks	95-13
Engine Low Pressure and Alternator Low Voltage Monitor Indicator Light Checks . .	95-2	Track Sag Roller and Idler Leakage Checks . .	95-13
Air Restriction Indicator Check	95-3	Sprocket Wear Check	95-13
Shift Lever Linkage and Reverse Warning Alarm Check	95-3	Grouser Wear, Bent Track Shoe, and Loose Hardware Checks	95-14
Park and Brake Lock Check	95-3	Track Link Roller and Front Idler Wear Checks	95-14
Neutral Start Switch and Start Circuit Checks . .	95-4	Accessory Checks	95-14
Neutral Start Switch Check	95-4	Horn Circuit Check	95-14
Start Circuit Check	95-4	Hour Meter Circuit Check	95-15
Park and Brake Lock/Neutral Switch Adjustment Check	95-5	Work Light Check—If Equipped	95-15
Engine Speed Control and Decelerator Checks	95-5	Seat Adjustment Checks	95-15
Engine Speed Control Lever Linkage Check . . .	95-5	Seat Height and Backrest Adjustment Checks (Non-Suspension)	95-16
Decelerator Linkage Check	95-6	Seat Height and Backrest Adjustment Checks (Suspension Seat)	95-16
Speed Control Lever Linkage Check	95-6	Seat Belt Check	95-16
Brake System Checks	95-7	Start Aid System Check (If Equipped)	95-17
Brake Pedal Upper Stop and Return Spring Check	95-7	Fuel Shut-Off Valve Check—Earlier Machines	95-17
Brake Drag, Park, and Brake Lock Linkage Check	95-7	Fuel Shut-Off Valve Check, Later Units	95-17
Brake Capacity Check	95-7	Fuel Water Trap Valve Check, Earlier Units . .	95-18
Steering System Checks (Steering Clutches and Brakes)	95-8	Vandal Protection Checks	95-18
Steering Clutch Engagement Check (Pedal Steer)	95-8	Service Decal Check	95-19
Hydraulic Warm-Up Procedure	95-8		
Steering Clutch Adjustment Check	95-9	Troubleshooting	
Steering Clutch Adjustment Check— Continued	95-9	Engine	100-2
Steering Brake Operation Check	95-10	Electrical System	100-10
Power Control Pedal Checks—Direct Drive Machines	95-10	Hydraulic System	100-14
Power Control Clutch Drag Check	95-10	Power Train	100-17
		Gauges and Indicators	100-21
		Storage	
		Prepare Machine For Storage	105-1
		Monthly Storage Procedure	105-3
		Crime Prevention Tips	
		Help Prevent Crime	110-1
		Record Identification Numbers	110-1
		Keep Proof Of Ownership	110-1
		Park Indoors Out Of Sight	110-2


Continued on next page

Contents

	Page	
When Parking Outdoors	110-2	
Reduce Vandalism	110-2	
Report Thefts Immediately	110-3	
 Specifications		
450G Crawler Dozer Specifications	115-1	
450G Drain and Refill Capacities	115-4	
450G—LT Crawler Dozer Specifications	115-5	
450G—LT Drain and Refill Capacities	115-8	
450G—LGP Crawler Dozer Specifications	115-9	
450G—LGP Drain and Refill Capacities	115-12	
550G—LT Crawler Dozer Specifications	115-13	
550G—LT Drain and Refill Capacities	115-16	
550G—LGP Crawler Dozer Specifications	115-17	
550G—LGP Drain and Refill Capacities	115-20	
650G Crawler Dozer Specifications	115-21	
650G Drain and Refill Capacities	115-24	
650G—LGP Crawler Dozer Specifications	115-25	
650G—LGP Drain and Refill Capacities	115-28	
9310 Backhoe Specifications	115-29	
9310 Backhoe Lift Capacity (G Series Loaders)	115-30	
9310 Backhoe Lift Capacity (G-Series Dozers)	115-31	
4000 Winch	115-32	
 Machine Numbers		
General	120-1	
Record Engine Serial Number	120-1	
 Checklists		CLIS-1
 John Deere Service Literature Available		
Technical Information	SLIT-1	
 John Deere Service Keeps You On the Job		
John Deere Is At Your Service When You Need It	IBC-1	

Safety

JOHN DEERE CRAWLER SAFETY FEATURES

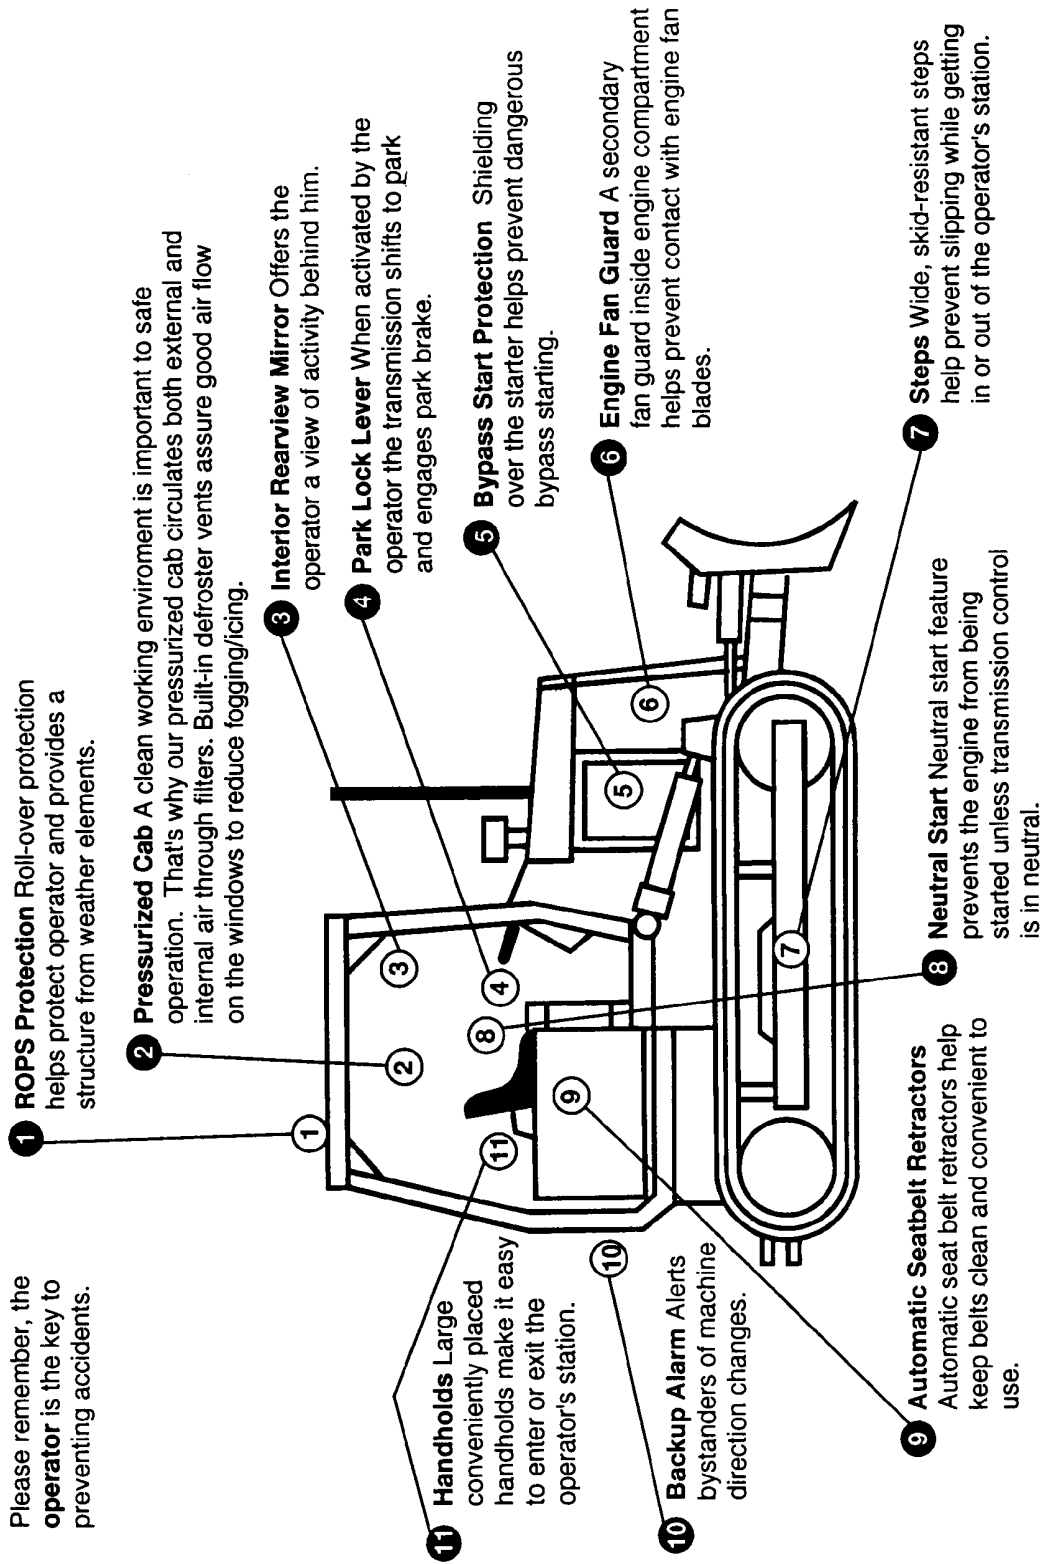

T112466

T112466 -19-11DEC97

TX,05,RR7003 -19-16OCT95-1/1

Buy Now



Our support email:

ebooklibonline@outlook.com