

# 1200 SERIES SURFLEX DISK TILLER



JOHN DEERE

## OPERATORS MANUAL 1200 SERIES SURFLEX DISK TILLER

OMW11661 K6 English

**OMW11661 K6**

LITHO IN THE U.S.A.  
ENGLISH




## TO THE PURCHASER

The purpose of this manual is to acquaint you with the operation and maintenance of your new 1200 Series Surfex Disk Tiller.

The machine you have purchased is sturdy and dependable, but proper care and operation will ensure the service and long life built into it. The many illustrations provided in your manual will assist in making the necessary adjustments for adapting your Disk Tiller to work in practically all types of soil and field conditions. Study this manual carefully.

Occasionally your Disk Tiller may need parts. Your John Deere dealer will see that you get high-quality, genuine John Deere parts. When ordering, be sure and give him the correct part number or description of the part desired. If you will furnish your dealer with the information which should be recorded at the bottom of this page, it will assist him in giving you prompt and efficient service.

Study this manual carefully and keep it handy, in a safe place, for future reference.

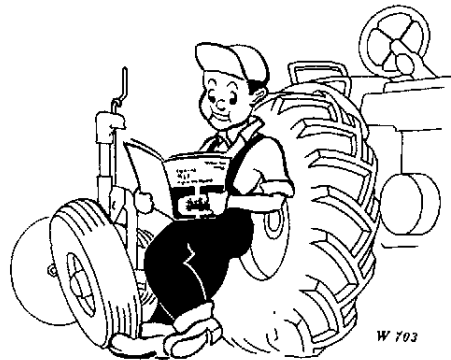

### JOHN DEERE SURFLEX DISK TILLER


Size of Tiller.....Ft. Series No.....

Date Purchased.....19.....


*(To be filled in by Purchaser)*

## CONTENTS


	<i>Page</i>
SPECIFICATIONS.....	4-5
OPERATION.....	6-17
Depth Adjustment.....	6-7
Depth Indicator.....	7
Safety Suggestions.....	7
Preparing Tiller for Use.....	8-10
Rear Furrow Wheel.....	8
Adjusting Disk Gangs.....	9-10
Starting Tiller in Field.....	10-14
Hitch and Front Furrow Wheel (Regular).....	11
Hitch and Front Furrow Wheel (Special).....	12-13
Leveling Frame.....	13
Rear Furrow Wheel.....	14
Rear Axle Bar.....	14
Final Check.....	14
Tire Inflation.....	14
Transporting.....	15-18
Trash Guards.....	18
Weight Boxes.....	19
Disk Scrapers.....	19
Packer Hitch Adapter.....	19
Increasing Size of Tiller.....	20
Reducing Size of Tiller.....	20
MAINTENANCE INSTRUCTIONS.....	21
Wheel Bearings.....	21
Gang Shafts.....	21
LUBRICATION.....	22-23

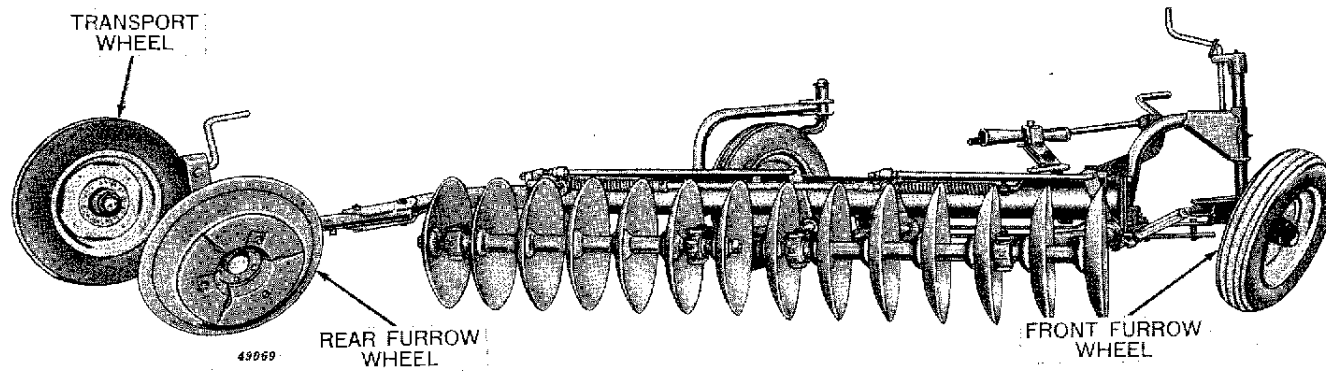

*Rear View of John Deere No. 1200 Series 8-Foot Surfex Disk Tiller*

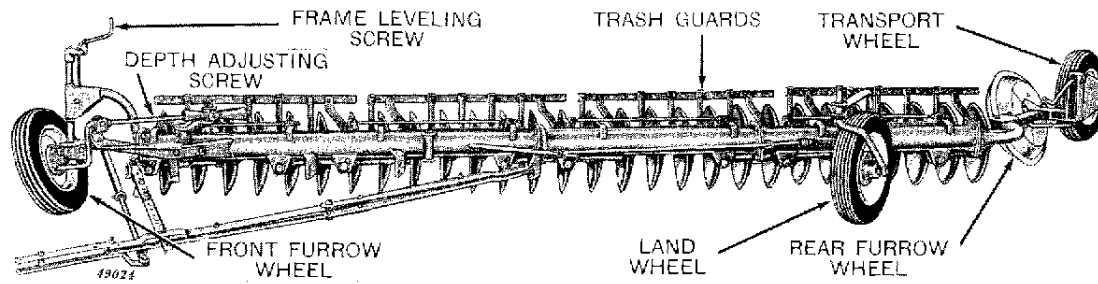

*Front View of John Deere No. 1200 Series 16-Foot Surfex Disk Tiller*

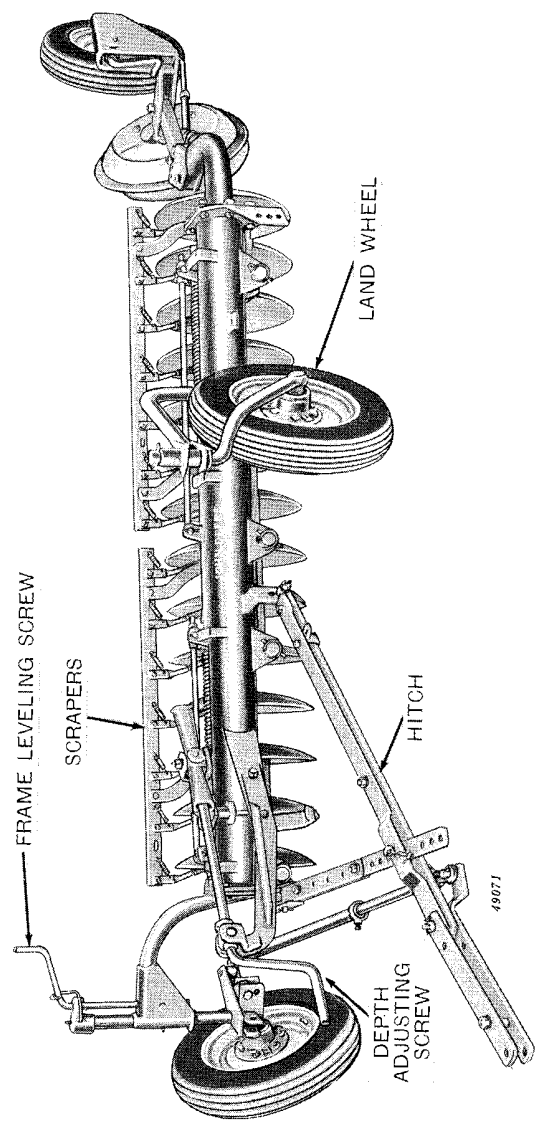

**Front View of John Deere No. 1200 Series 8-Foot Surfex Disk Tiller**

## SPECIFICATIONS AND DATA

Depth Screw	Series No.		Disks		Approx. Cut	Reducible by	Seeding Attach- ment
	Powr-Trol	No.	Size	Concav.			
1201	1201H	14	18"	2"	8-Ft.	....	No
1201S	1201SH	14	18"	2"	8-Ft.	....	Yes
1202	1202H	14	20"	2-1/2"	8-Ft.	....	No
1202S	1202SH	14	20"	2-1/2"	8-Ft.	....	Yes
1206	1206H	14	22"	2-1/2"	8-Ft.	....	No
1206S	1206SH	14	22"	2-1/2"	8-Ft.	....	Yes
1207	1207H	14	22"	3"	8-Ft.	....	No
1207S	1207SH	14	22"	3"	8-Ft.	....	Yes
1211	1211H	21	18"	2"	12-Ft.	4-Ft.	No
1211S	1211SH	21	18"	2"	12-Ft.	4-Ft.	Yes
1212	1212H	21	20"	2-1/2"	12-Ft.	4-Ft.	No
1212S	1212SH	21	20"	2-1/2"	12-Ft.	4-Ft.	Yes
1216	1216H	21	22"	2-1/2"	12-Ft.	4-Ft.	No
1216S	1216SH	21	22"	2-1/2"	12-Ft.	4-Ft.	Yes
1217	1217H	21	22"	3"	12-Ft.	4-Ft.	No
1217S	1217SH	21	22"	3"	12-Ft.	4-Ft.	Yes
1221	1221H	28	18"	2"	16-Ft.	4- or 8-Ft.	No
1221S	1221SH	28	18"	2"	16-Ft.	4- or 8-Ft.	Yes
1222	1222H	28	20"	2-1/2"	16-Ft.	4- or 8-Ft.	No
1222S	1222SH	28	20"	2-1/2"	16-Ft.	4- or 8-Ft.	Yes
1226	1226H	28	22"	2-1/2"	16-Ft.	4- or 8-Ft.	No
1226S	1226SH	28	22"	2-1/2"	16-Ft.	4- or 8-Ft.	Yes
1227	1227H	28	22"	3"	16-Ft.	4- or 8-Ft.	No
1227S	1227SH	28	22"	3"	16-Ft.	4- or 8-Ft.	Yes
1231	1231H	35	18"	2"	20-Ft.	4-, 8-, or 12-Ft.	No
1231S	1231SH	35	18"	2"	20-Ft.	4-, 8-, or 12-Ft.	Yes
1232	1232H	35	20"	2-1/2"	20-Ft.	4-, 8-, or 12-Ft.	No
1232S	1232SH	35	20"	2-1/2"	20-Ft.	4-, 8-, or 12-Ft.	Yes
1236	1236H	35	22"	2-1/2"	20-Ft.	4-, 8-, or 12-Ft.	No
1236S	1236SH	35	22"	2-1/2"	20-Ft.	4-, 8-, or 12-Ft.	Yes
1237	1237H	35	22"	3"	20-Ft.	4-, 8-, or 12-Ft.	No
1237S	1237SH	35	22"	3"	20-Ft.	4-, 8-, or 12-Ft.	Yes

### DEPTH RANGE.

Approximately two to five inches deep, controlled by remote hydraulic cylinder or hand depth screw.

### DISK GANG.

Anti-friction bearings.

Scrapers or trash guards, available when ordered.

### DISK ANGLE.

Adjustable to hard, medium hard, medium loose, or loose ground conditions.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)