

Manure Grapple Attachment for 100 and 200 Series Farm Loaders



JOHN DEERE

 
OPERATORS MANUAL

Manure Grapple Attachment for 100
and 200 Series Farm Loaders

OMW37989 Issue L6 English

John Deere Welland Works
OMW37989 Issue L6

LITHO IN U.S.A.
ENGLISH

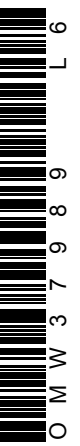

Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Use this manual in conjunction with your approved loader operator's manual. Failure to do so could result in personal injury or equipment damage.


This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Warranty appears on your copy of the purchase order which you should have received from your dealer.

Right-hand and left-hand sides are determined by facing in the direction of forward travel.



This machine is of metric design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

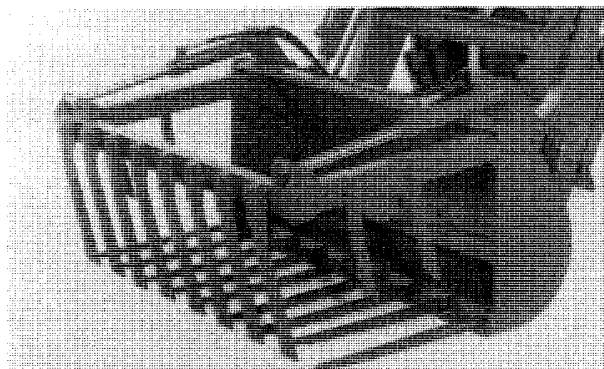

Checklists

PREDELIVERY

The following list is a reminder of points to inspect. Check off each item as it is found satisfactory or after correction is made.

- Attachment has been properly assembled.
- Hydraulic connections do not leak.

- Hardware is tightened to correct torque.
- This attachment has been tested and, to the best of my knowledge, is ready for delivery to the customer.

Signature: _____

Date: _____

W01;ATTCH A 230986

DELIVERY

The following list is a reminder of important information that should be explained to the customer.

- Safe operation and service.
- Loader controls and operation.

- Give the customer the operator's manual. Encourage the customer to read it.

Signature: _____

Date: _____

W01;ATTCH B 230986

AFTER-SALE

The following items should be checked sometime during the first six months of operation. Check off each item as found satisfactory or correction is made.

- Check for loose or missing hardware. Hardware is tightened to correct torque.
- Check for broken or missing parts. Make necessary repairs.

- Tractor transmission/hydraulic oil level is correct.
- If possible, operate the attachment. Attachments should respond correctly to controls.
- All decals are fastened and legible.

Signature: _____

Date: _____


W01;ATTCH C 230986

Contents

	Page
Safety Signs	1
Safety	2
Approved Loaders	3
Operating the Grapple	4
Lubrication and Maintenance	8
Storage	10
Assembly	11

Safety Signs

SAFETY SIGN LOCATION

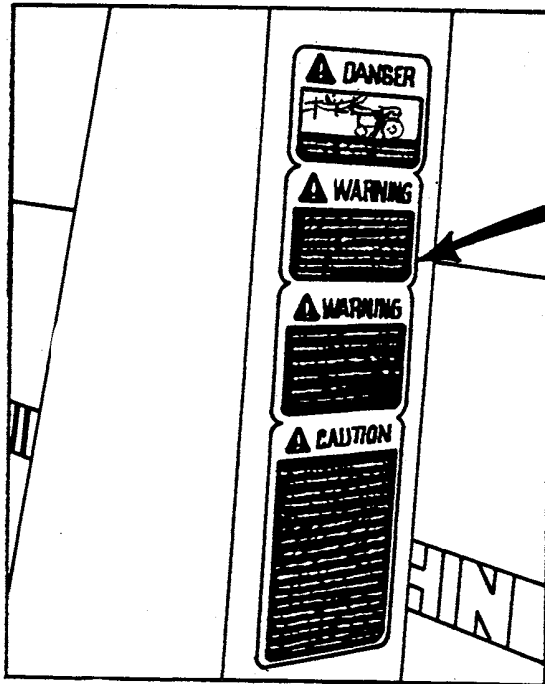

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



AB6;TS1389 053;ALERT 071085

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

▲ DANGER

▲ WARNING

▲ CAUTION

AB6;TS187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

Keep safety signs in good condition. Replace missing or damaged safety signs.



AB6;TS188 053;SIGNS 071085

LEARN MACHINE SAFETY

Carefully read this manual and appropriate loader operator's manual. Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate this machine without proper instruction.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



AB6;TS183 W01;ATTCH E 230986

Buy Now



Our support email:

ebooklibonline@outlook.com