

**ROUND BALE GRAPPLE  
AND SILAGE GRAPPLE  
ATTACHMENTS  
FOR 146, 148, AND 158  
FARM LOADERS**



**JOHN DEERE**

 
**OPERATORS MANUAL**

ROUND BALE GRAPPLE AND SILAGE GRAPPLE  
ATTACHMENTS FOR 146, 148, AND 158 FARM  
LOADERS

OMW37990 L6 English

**JOHN DEERE WELLAND WORKS  
OMW37990 L6**

LITHO IN THE U.S.A.  
ENGLISH



# Introduction


**Read this manual** carefully to learn how to operate and service your machine correctly. Use this manual in conjunction with your approved loader operator's manual. Failure to do so could result in personal injury or equipment damage.

**This manual should be considered** a permanent part of your machine and should remain with the machine when you sell it.

**Warranty appears** on your copy of the purchase order which you should have received from your dealer.

**Right-hand and left-hand** sides are determined by facing in the direction of forward travel.

**Measurements** in this manual are U.S. customary units and their metric equivalents.

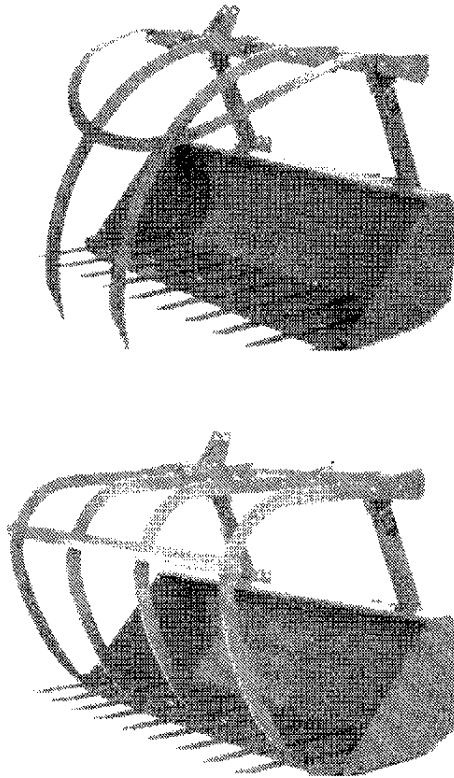

# Checklists

## PREDELIVERY

The following list is a reminder of points to inspect. Check off each item as it is found satisfactory or after correction is made.

- Attachment has been properly assembled.
- Hydraulic connections do not leak.

- Hardware is tightened to correct torque.
- This attachment has been tested and, to the best of my knowledge, is ready for delivery to the customer.

Signature: \_\_\_\_\_

Date: \_\_\_\_\_

W01;ATTCH A 230986

## DELIVERY

The following list is a reminder of important information that should be explained to the customer.

- Safe operation and service.
- Loader controls and operation.

- Give the customer the operator's manual. Encourage the customer to read it.

Signature: \_\_\_\_\_

Date: \_\_\_\_\_

W01;ATTCH B 230986

## AFTER-SALE

The following items should be checked sometime during the first six months of operation. Check off each item as found satisfactory or correction is made.

- Check for loose or missing hardware. Hardware is tightened to correct torque.
- Check for broken or missing parts. Make necessary repairs.

- Tractor transmission/hydraulic oil level is correct.
- If possible, operate the attachment. Attachments should respond correctly to controls.
- All decals are fastened and legible.

Signature: \_\_\_\_\_

Date: \_\_\_\_\_

W01;ATTCH C 230986

# Contents

	Page
<b>Safety Signs</b> . . . . .	1
<b>Safety</b> . . . . .	2
<b>Approved Loaders</b> . . . . .	5
<b>Operating the Grapple</b> . . . . .	6
<b>Storage</b> . . . . .	11
<b>Lubrication and Maintenance</b> . . . . .	12
<b>Assembly</b> . . . . .	14

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)