

# **158**

# **Farm Loader**

**John Deere Welland Works**  
**OMW37998 Issue D9**  
**(This manual replaces OM-W37998-A7)**

LITHO IN U.S.A.  
**ENGLISH**

# Introduction



W11803  
-JUN-05OCT88

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

Right-hand and left-hand sides of the implement are determined by facing the direction the implement will travel when going forward.

Warranty is on the warranty certificate which you should have received from your dealer.

Write product identification numbers in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

# Checklists

## DELIVERY

The following list is a reminder of important information that should be explained to the customer.

- Safe operation and service.
- Loader controls and operation.
- Lubrication.
- Give the customer the operator's manual. Encourage the customer to read it.

Signature: \_\_\_\_\_

Date: \_\_\_\_\_

W01,5PD,B -19-24NOV86

## AFTER-SALE

The following items should be checked sometime during the first six months of loader operation. Check off each item as found satisfactory or correction is made.

- Check for loose or missing hardware. Mounting frame hardware is tightened to correct torque.
- Check for broken or missing parts. Repair as necessary.
- Hydraulic hoses and connections do not leak.
- Transmission/hydraulic oil level is correct.
- If possible, operate the loader. Loader should respond correctly to controls.
- All decals are fastened and legible.

Signature: \_\_\_\_\_

Date: \_\_\_\_\_

W01,5PD,C -19-24NOV86

*Checklists*

**OWNER REGISTER**

Name \_\_\_\_\_ Model \_\_\_\_\_

Address \_\_\_\_\_ Serial Number \_\_\_\_\_

City \_\_\_\_\_ Date Sold \_\_\_\_\_

State/Prov \_\_\_\_\_ Mail Code \_\_\_\_\_

W01,12PD,C -19-22NOV86

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Relieving Hydraulic Pressure SCV .....	25-2
<b>Preparing The Tractor</b>		Connecting Hoses SCV .....	25-2
Approved Tractors .....	10-1	Relieving Hydraulic Pressure ICV .....	25-3
Using Roll-Over Protective Structure .....	10-1	Connecting Hoses ICV .....	25-3
Keep ROPS Installed Properly .....	10-2	Check Loader Operation .....	25-4
Approved Front Tires .....	10-2	<b>Transporting</b> .....	30-1
Inflating Front Tires .....	10-2	<b>Operating The Loader</b>	
Checking Front Wheel Hardware .....	10-3	Understanding Round Bale Handling	
Removing Front Weights .....	10-3	Hazards .....	35-2
Selecting Front Tread .....	10-3	Avoiding Tractor Roll-Over When	
Selecting Rear Tread .....	10-3	Handling Round Bales .....	35-2
Adding Rear Ballast .....	10-4	Carrying Round Bales .....	35-3
Operating With Selective Control Valve .....	10-4	Lift Capacity Of Loader With Bale Fork .....	35-3
Setting Hydraulic Speed .....	10-5	Lift Capacity Of Loader With Grapple .....	35-4
Using SCV Lockout Stops .....	10-5	Removing Material From A Pile .....	35-4
Operating With Independent Control		Carrying Material .....	35-5
Valve .....	10-6	Loading Operations .....	35-5
Using Lever Lock Clip .....	10-6	Leveling And Scraping Forward .....	35-5
<b>Controls</b>		Leveling In Reverse .....	35-6
Using Float .....	15-1	Digging .....	35-6
Using SCV Lockout .....	15-1	Backfilling .....	35-6
Operating Loader With SCV .....	15-2	<b>Attachments</b>	
Operating Loader With ICV .....	15-2	Materials Bucket .....	40-1
Using Regenerative Dump Position ICV .....	15-3	Installing Side Cutting Edges .....	40-1
Using Control Lever Lock .....	15-3	Attaching Bucket Tines .....	40-2
Relieving Hydraulic Pressure		Installing Extensions For Materials Bucket .....	40-2
Loader Attached .....	15-4	Installing Bucket Level Indicator .....	40-3
Loader Not Attached .....	15-4	Forklift .....	40-4
<b>Detaching The Loader</b>		Round Bale Grapple .....	40-4
Relieving Hydraulic Pressure SCV .....	20-1	Silage Grapple .....	40-4
Disconnecting Hoses SCV .....	20-1	Bale Fork .....	40-5
Relieving Hydraulic Pressure ICV .....	20-2	Parking Stand .....	40-5
Disconnecting Hoses ICV .....	20-2	<b>Lubrication and Maintenance</b>	
Backing Away From Loader .....	20-4	Selecting Grease .....	45-2
<b>Attaching The Loader</b>		Lubricating Loader .....	45-3
Attaching Loader .....	25-1		

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMW37998 D9-19-04JAN90

COPYRIGHT© 1989  
DEERE & COMPANY  
Moline, Illinois

All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions

Copyright 1987, 1986, 1979, 1978, 1973, 1972 Deere & Company

Contents

	<b>Page</b>
Checking Transmission/Hydraulic Oil Level . . .	45-3
Tightening Mounting Frame Hardware . . . . .	45-4
Tightening Loader Mast Hardware . . . . .	45-4
Tightening Side Frame Hardware . . . . .	45-5
<b>Troubleshooting</b> . . . . .	<b>50-1</b>
<b>Service</b>	
Checking Bolt Torque . . . . .	55-2
Tightening Hydraulic Fittings . . . . .	55-3
Tightening O-Ring Fittings . . . . .	55-4
Tightening Flare Type Tube Fittings . . . . .	55-5
Tightening Flare Type Hose Fittings . . . . .	55-6
Tightening Pipe Thread Fittings . . . . .	55-6
Changing Control Lever Position . . . . .	55-7
Identifying Hose Connections SCV With Grapple . . . . .	55-7
Identifying Hose Connections SCV Without Grapple . . . . .	55-8
Servicing Tractor Air Intake Filter . . . . .	55-11
<b>Storage</b> . . . . .	<b>60-1</b>
<b>Crime Prevention</b> . . . . .	<b>65-1</b>
<b>Specifications</b> . . . . .	<b>70-1</b>
<b>Index</b>	

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



O53.ALERT -19-07OCT85

T81389 -UN-07DEC88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.




O53.SIGNAL -19-07OCT85

TS187 -19-30SEP88

## FOLLOW SAFETY INSTRUCTION

Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

 Keep safety signs in good condition. Replace missing or damaged safety signs.

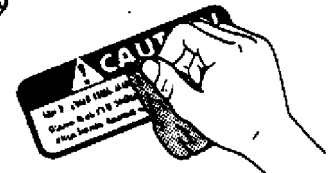

O53.SIGNS -19-07OCT85

TS188 -UN-17JAN89




## LEARN MACHINE SAFETY

 Carefully read this manual. Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate this machine without proper instruction.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

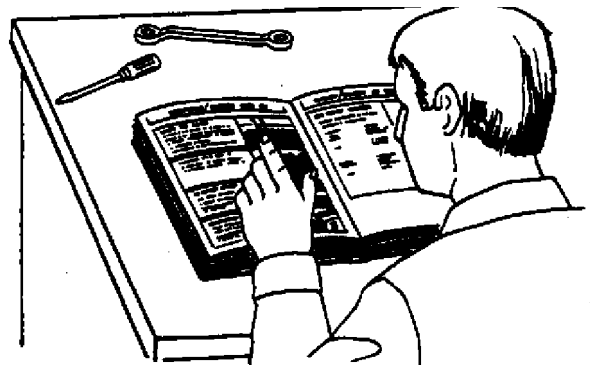

O53,READ2 -19-08JUL85

TS183 -UN-23AUG88


## PROTECT PEOPLE AND ANIMALS

 Never allow anyone to walk or work under a raised loader.

Be sure that people, livestock, or pets are not standing near the machine while operating.

Do not use the loader for a work platform.

Do not lift or carry anyone on loader or in bucket or attachment.

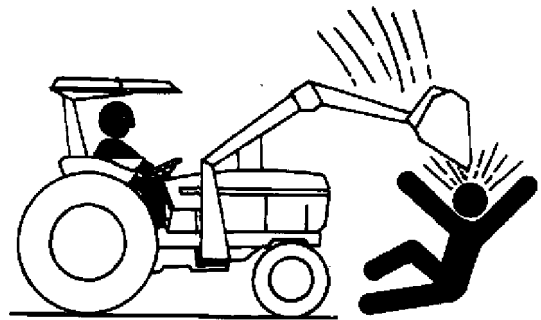

WX158,OM,A -19-28MAR89

W14235 -UN-05OCT88

## OPERATE CONTROLS SAFELY

 
Become familiar with controls.

Be sure anyone operating the loader is aware of safe operation and potential hazards.

Operate loader from operator's seat only. Remain at controls until operating cycle is complete.

Stop loader gradually when lowering or lifting loads.

To help prevent loss of control, do not use "FLOAT" position to lower loader.

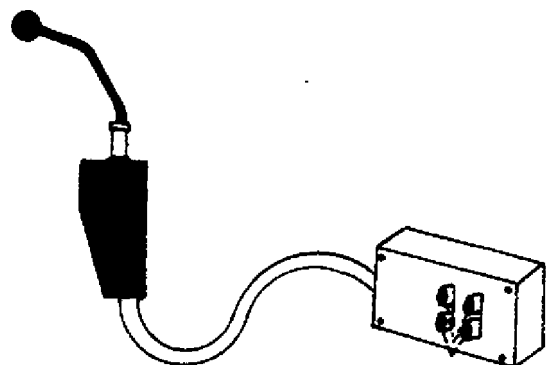

WX158,OM,B -19-21MAR89

W11377 -UN-06OCT88






## OPERATE LOADER SAFELY

 Improper use of loader can cause serious injury or death.

Use particular care when working on inclines and hillsides.

Avoid holes, ditches, and obstructions which may cause tractor/loader to tip.

Allow for additional length of loader on tractor while turning.

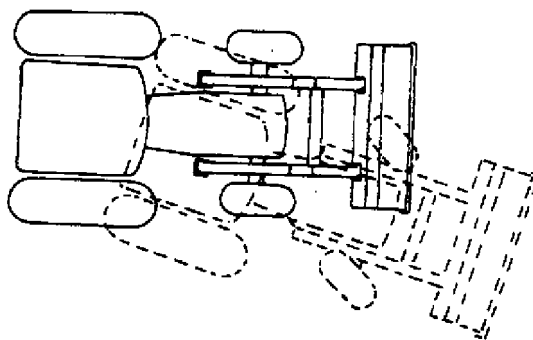

W11378 -UN-06OCT88

WX158,OM,C -19-21MAR89

## CARRY MATERIALS SAFELY

 
Do not exceed lift capacity of loader.

Carry load low at all times.

Avoid handling loose or shiftable loads.

Reduce tractor ground speed when traveling over rough ground or when making turns.

Drive slowly through gates and doors.

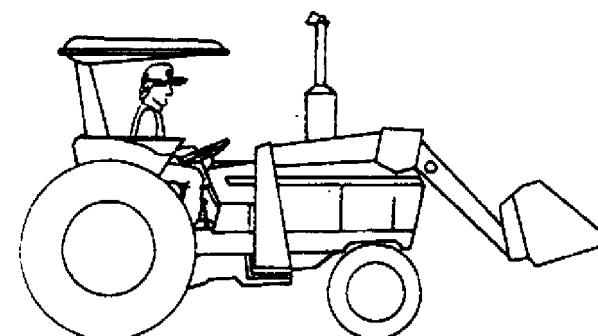


W11380 -UN-06OCT88

WX158,OM,D -19-21MAR89

## USE ROLL-OVER PROTECTIVE STRUCTURE (ROPS)

 To help prevent personal injury or death caused by tractor roll-over, be sure tractor is equipped with roll-over protective structure (ROPS) and use approved seat belt. In addition, add rear ballast recommended.

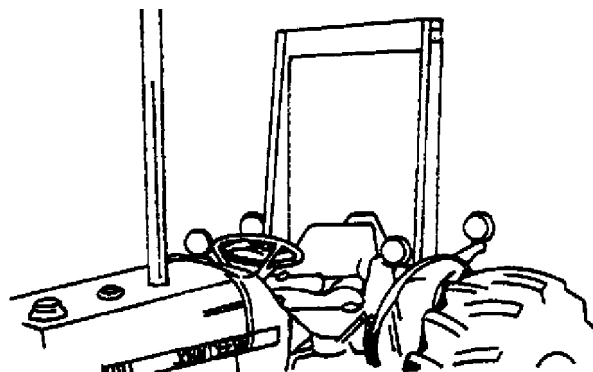

W11507 -UN-06OCT88

WX158,OM,E -19-21MAR89

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)