

280 Farm Loader

John Deere Welland Works
OMW38892 Issue E9
(This manual replaces OM-W38892-A7)
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WARRANTY is on the warranty certificate which you should have received from your dealer.



THIS MACHINE IS OF METRIC design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

WRITE IDENTIFICATION NUMBERS in the space provided in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.



W13125
-UN-05OCT88

W01,W38892,IFC -19-13APR89

Checklists

DELIVERY

The following list is a reminder of important information that should be explained to the customer.

- Safe operation and service.
- Loader controls and operation.
- Lubrication.
- Give the customer the operator's manual. Encourage the customer to read it.

Signature: _____

Date: _____

W01,5PD,B -19-24NOV86

AFTER-SALE

The following items should be checked sometime during the first six months of loader operation. Check off each item as found satisfactory or correction is made.

- Check for loose or missing hardware. Mounting frame hardware is tightened to correct torque.
- Check for broken or missing parts. Repair as necessary.
- Hydraulic hoses and connections do not leak.
- Transmission/hydraulic oil level is correct.
- If possible, operate the loader. Loader should respond correctly to controls.
- All decals are fastened and legible.

Signature: _____

Date: _____

W01,5PD,C -19-24NOV86

Checklists

OWNER REGISTER

Name _____ Model _____

Address _____ Serial Number _____

City _____ Date Sold _____

State/Prov _____ Mail Code _____

W01,12PD,C -19-24NOV86

Contents

| Page | Page |
|--|-------|
| Safety | 05-1 |
| Preparing The Tractor | |
| Approved Tractors | 10-1 |
| Using Roll-Over Protective Structure | 10-1 |
| Approved Front Tires | 10-2 |
| Inflating Front Tires | 10-3 |
| Checking Front Wheel Hardware | 10-3 |
| Removing Front Weights | 10-3 |
| Selecting Front Tread | 10-3 |
| Adjusting Front Fenders | 10-5 |
| Selecting Rear Tread | 10-6 |
| Adding Rear Ballast | 10-6 |
| Operating With SCV | 10-7 |
| Setting Hydraulic Speed | 10-7 |
| Installing SCV Lockout Stops | 10-7 |
| Operating With ICV | 10-8 |
| Using Lever Lock Clip | 10-8 |
| Controls | |
| Using Float | 15-1 |
| Using SCV Lockout | 15-1 |
| Operating Loader With SCV | 15-2 |
| Operating Loader With ICV | 15-2 |
| Using Regenerative Dump Position ICV | 15-3 |
| Using Control Lever Lock | 15-3 |
| Relieving Hydraulic Pressure ICV | |
| Loader Attached | 15-4 |
| Loader Not Attached | 15-4 |
| Detaching The Loader | |
| Lowering Parking Stands | 20-1 |
| Removing Pins | 20-2 |
| Removing Loader | 20-3 |
| Relieving Hydraulic Pressure SCV | 20-4 |
| Disconnecting Hoses SCV | 20-5 |
| Relieving Hydraulic Pressure ICV | 20-5 |
| Disconnecting Hoses ICV | 20-6 |
| Backing Away From Loader | 20-6 |
| Attaching The Loader | |
| Positioning Tractor To Loader | 25-1 |
| Relieving Hydraulic Pressure SCV | 25-1 |
| Connecting Hoses SCV | 25-1 |
| Relieving Hydraulic Pressure ICV | 25-2 |
| Connecting Hoses ICV | 25-2 |
| Attaching Loader | 25-3 |
| Installing Pins | 25-3 |
| Raising Parking Stands | 25-4 |
| Check Loader Operation | 25-5 |
| Transporting | 30-1 |
| Operating The Loader | |
| Preoperating Checks | 35-1 |
| Operating Loader Carefully | 35-2 |
| Preparing To Detach Bucket | 35-5 |
| Detaching Bucket | 35-5 |
| Using Bucket Level Indicator | 35-7 |
| Removing Material From A Pile | 35-7 |
| Carrying Material | 35-8 |
| Loading Operations | 35-8 |
| Leveling And Scraping Forward | 35-9 |
| Leveling in Reverse | 35-9 |
| Digging | 35-9 |
| Backfilling | 35-10 |
| Attachments | |
| Materials Bucket | 40-1 |
| Attaching Bucket Tines | 40-1 |
| Heavy-Duty Materials Bucket | 40-2 |
| Heavy-Duty Bucket Teeth | 40-2 |
| Round Bale Fork | 40-2 |
| Round Bale/Silage Grapple | 40-2 |
| Installing Hood Guard | 40-3 |
| Door Stop | 40-4 |
| Lubrication And Maintenance | |
| Selecting Grease | 50-2 |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMW38892 E9-19-10JAN90

COPYRIGHT© 1989
 DEERE & COMPANY
 Moline, Illinois
 All rights reserved
 A John Deere ILLUSTRATION™ Manual
 Previous Editions
 Copyright1987,1986,1983 Deere & Company

Contents


| | Page |
|--|-------------|
| Lubricating Loader | 50-3 |
| Checking Transmission/Hydraulic Oil Level | 50-4 |
| Tightening Mounting Frame Hardware | 50-4 |
| Tightening Tractor Hardware | 50-5 |
| Replace Finger Guards | 50-6 |
| Adjusting Wedge | 50-6 |
| Troubleshooting | 55-1 |
| Service | |
| Bolt Torque | 60-2 |
| Tightening Hydraulic Fittings | 60-4 |
| Changing Control Lever Position | 60-7 |
| Identifying Hose Connections | 60-8 |
| Servicing Tractor Air Intake Filter | 60-11 |
| Storage | 65-1 |
| Crime Prevention | 70-1 |
| Specifications | 75-1 |
| Index | |

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

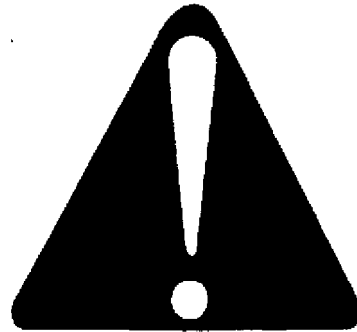

O53,ALERT -19-16JUN87

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-07OCT85

-19-30SEP88


TS187

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

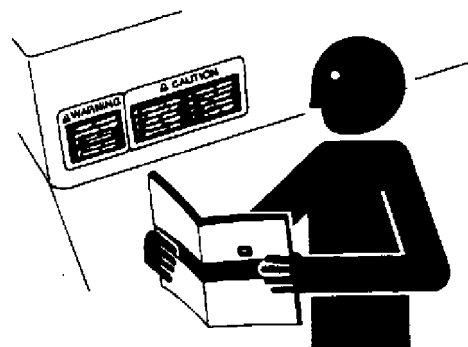

O53,READ -19-23APR87

-UN-23AUG88

TS201




PROTECT PEOPLE AND ANIMALS

Never allow anyone to walk or work under a raised loader.

Be sure that people, livestock, or pets are not standing near the machine while operating.

Do not use the loader for a work platform.

Do not lift or carry anyone on loader or in bucket or attachment.

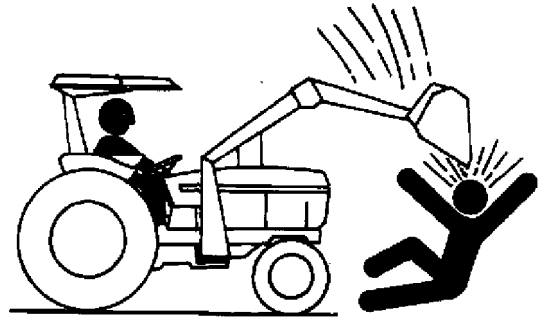

W14235 -UN-05OCT88

WX158.OM.A -19-28MAR89

OPERATE CONTROLS SAFELY


Become familiar with controls.

Be sure anyone operating the loader is aware of safe operation and potential hazards.

Operate loader from operator's seat only. Remain at controls until operating cycle is complete.

Stop loader gradually when lowering or lifting loads.

To help prevent loss of control, do not use "FLOAT" position to lower loader.

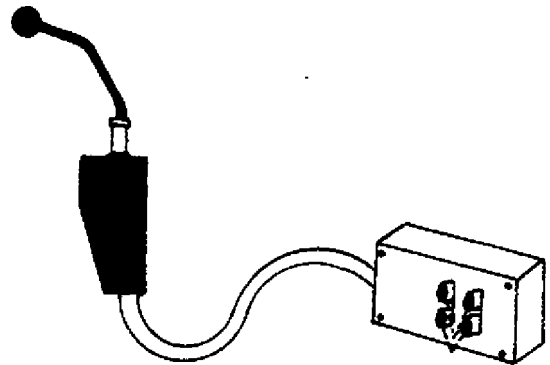

W11377 -UN-06OCT88

WX158.OM.B -19-21MAR89




OPERATE LOADER SAFELY

Improper use of loader can cause serious injury or death.

Use particular care when working on inclines and hillsides.

Avoid holes, ditches, and obstructions which may cause tractor/loader to tip.

Allow for additional length of loader on tractor while turning.

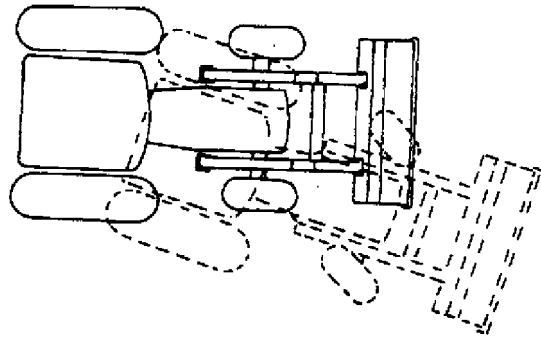

W11378 -UN-06OCT88

WX158,OM,C -19-21MAR89

CARRY MATERIALS SAFELY


Do not exceed lift capacity of loader.

Carry load low at all times.

Avoid handling loose or shiftable loads.

Reduce tractor ground speed when traveling over rough ground or when making turns.

Drive slowly through gates and doors.

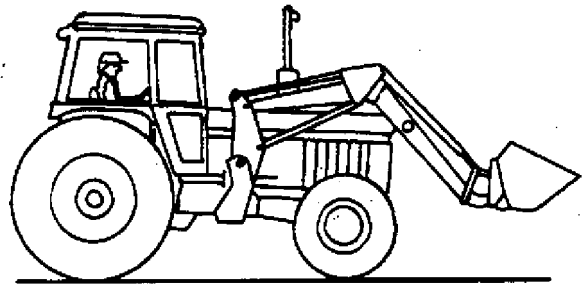

W11718 -UN-06OCT88

W01,6SY,AB -19-18JUL86

USE ROLL-OVER PROTECTIVE STRUCTURE (ROPS)

To help prevent personal injury or death caused by tractor roll-over, be sure tractor is equipped with roll-over protective structure (ROPS) and use approved seat belt. In addition, add rear ballast recommended.



W13130 -UN-05OCT88

W01,8SY,B -19-18JUL86

Buy Now



Our support email:

ebooklibonline@outlook.com