 
 
 
 
 
 
 
 
 


**440
Loader**



John Deere Welland Works

OMW43409 Issue E4

(This manual replaces OMW42582 Issue G3)

LITHO IN U.S.A.
ENGLISH

Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

W THIS MACHINE IS OF METRIC design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE IDENTIFICATION NUMBERS in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be

stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.



-JN-12AUG93

W01101

WX.440,IFC -19-23AUG93

Contents

	Page		Page
Safety	05-1	Attachments	
Prepare the Tractor		Materials Buckets	40-1
Approved Tractors	10-1	Preparing Bucket for Tines	40-1
Using Roll-over Protective Structure	10-1	Attach Bucket Tines	40-2
Keep ROPS Installed Properly	10-1	Forklift	40-2
Removing Front Weights	10-2	Ballast Box	40-3
Approved Front Tires	10-2	Ballast Box Extension	40-4
Setting Front Tread Width	10-3	Bucket Level Indicator	40-5
Inflating Front Tires	10-3	Lubrication and Maintenance	
Checking Front Wheel Hardware	10-3	Lubricating and Maintaining Loader Safely . . .	45-1
Approved Rear Tires	10-4	Observing Intervals	45-1
Selecting Rear Tread	10-5	Selecting Grease	45-2
Tractor Ballast Requirements	10-6	Alternative Lubricants	45-2
Suggested Minimum Ballasting	10-7	Lubricating Loader	45-3
Using Ballast Chart	10-8	Checking Transmission/Hydraulic Oil	
Adding Rear Wheel Ballast	10-9	Level	45-3
Adding Ballast to 3-Point Hitch	10-10	Tightening Mounting Frame Hardware	45-4
Controls	15-1	Troubleshooting	50-1
Detaching the Loader	20-1	Service	
Attaching the Loader	25-1	Servicing Loader Safely	55-1
Transporting	30-1	Keep Service Area Clean	55-2
Operating the Loader		Metric Cap Screw Torque Values	55-3
Preoperating Checks	35-1	Servicing Tractor	55-4
Using Ballast Box	35-1	Avoid High Pressure Fluids	55-4
Using Bucket Level Indicator	35-2	O-Ring Installation	55-5
Leveling and Scraping Forward	35-2	Torque Procedure for Fittings	55-5
Leveling in Reverse	35-3	Hose Identification	55-6
Removing Material from a Pile	35-3	Replacing Orifices	55-6
Carrying Material	35-3	Storage	60-1
Loading Operations	35-4	Crime Prevention	65-1
Digging	35-5	Assembly	
Backfilling	35-5	GENERAL	70-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMW43409 E4-19-08APR94

COPYRIGHT© 1993
 DEERE & COMPANY
 Moline, Illinois
 All rights reserved
 A John Deere ILLUSTRATION™ Manual
 Previous Editions
 Copyright1994 Deere & Company

Page

Specifications
Index

75-1



Checklists

PREDELIVERY

The following list is a reminder of points to inspect. Check off each item as it is found satisfactory or after correction is made.



¼ Loader has been correctly assembled.

¼ All decals are in place and readable.

¼ Tractor is properly ballasted.



¼ Scratches are painted.

¼ Wheel tread is properly set.

¼ Hoses do not contact any sharp edges or hang too low below tractor.

¼ Transmission/hydraulic oil level is correct.



¼ This loader has been tested and to the best of my knowledge is ready for delivery to the customer.

¼ Loader responds correctly to controls.

¼ Mounting frame hardware is tightened to correct torque.

Signature: _____

¼ Loader has been lubricated.

Date: _____

¼ Hydraulic connections do not leak.



WX,440,CK,A -19-23AUG93

DELIVERY

The following list is a reminder of important information that should be explained to the customer.



¼ Safe operation and service.

¼ Give the customer the operator's manual. Encourage the customer to read it.

¼ Loader controls and operation.



Signature: _____

¼ Lubrication.

Date: _____

WX,440,CK,B -19-23AUG93



AFTER-SALE

The following items should be checked sometime during the first six months of loader operation. Check off each item as found satisfactory or correction is made.

¼ Check for loose or missing hardware. Mounting frame hardware is tightened to correct torque.

¼ If possible, operate the loader. Loader should respond correctly to controls.

¼ Check for broken or missing parts. Repair as necessary.



¼ All decals are fastened and legible.

Signature: _____

¼ Hydraulic hoses and connections do not leak.

Date: _____

¼ Transmission/hydraulic oil level is correct.



WX,440,CK,C -19-23AUG93

OWNER REGISTER

Name _____ Model _____

Address _____ Serial Number _____

City _____ Date Sold _____

State/Prov _____ Mail Code _____

WX,440,CK,D -19-23AUG93



Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.



DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.



 
Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.



Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

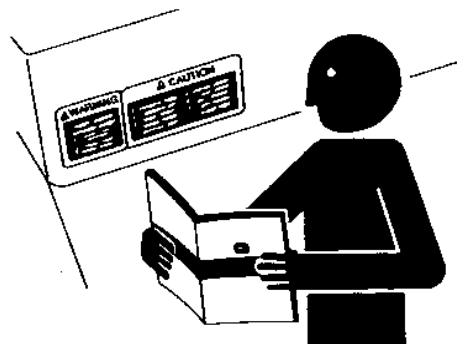

DX,READ -19-03MAR93

TS201 -UN-23AUG88

P

PROTECT PEOPLE AND ANIMALS

Never allow anyone to walk or work under a raised loader.

 


Be sure that people, livestock, or pets are not standing near the machine while in operation.

Do not use the loader as a work platform.




Do not lift or carry anyone on loader, in bucket or on any attachment.

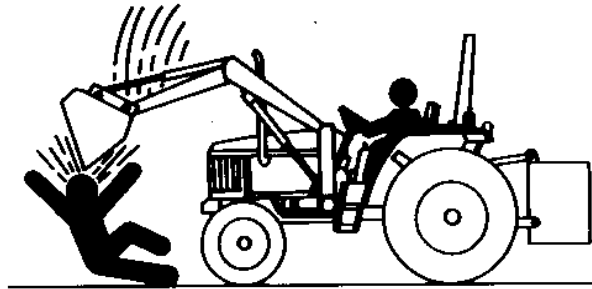

-UN-12AUG93

 W01140

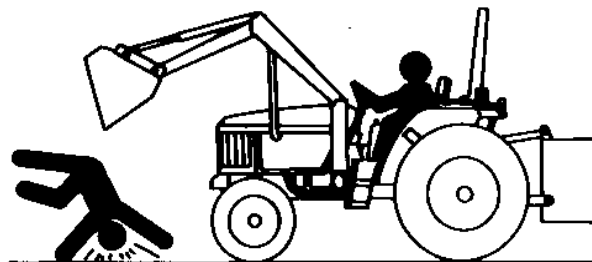

-UN-12AUG93

W01150

 
WX,440,SY,5 -19-23AUG93

AVOID INJURY OR DEATH FROM ROLLOVER ACCIDENTS

To avoid rollovers:



- Be careful when operating on a slope.
- Avoid holes, ditches and obstructions which may cause tractor and loader to tip over.
- Balance loads so weight is evenly distributed and load is stable.
- Carry loads close to the ground to aid visibility and lower center of gravity.
- Know capacity of loader. Do not overload.
- Reduce speed before turning. Avoid sharp turns.

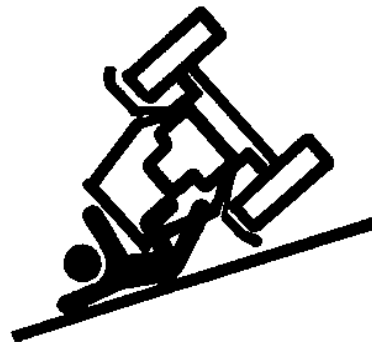

-UN-07DEC88

RW13093

WX,520,SY,2 -19-21FEB92

 
 


AVOID POWER LINES

Serious injury or death can result if tractor or loader contacts electrical lines.

Check lift height clearance before raising loader.

Do not leave the operator's seat if any part of tractor or loader contacts lines.

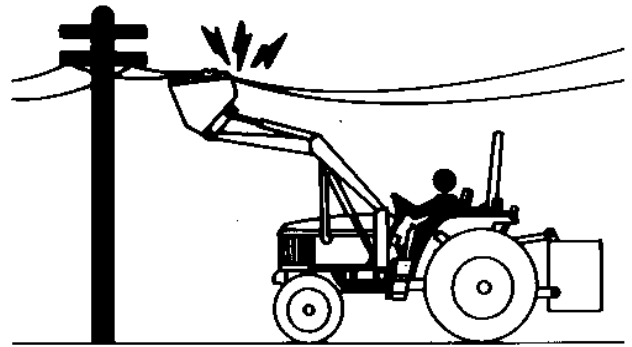


WX,440,SY,6 -19-23AUG93

W01145 -UN-12AUG93

DIG SAFELY

Before digging, check for location of underground cables, gas lines and water mains.

 Do not leave the operator's seat if any part of tractor or loader contacts lines.

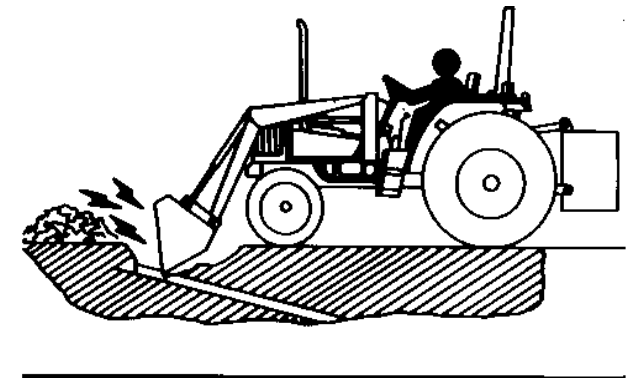

WX,440,SY,7 -19-23AUG93

W01149 -UN-12AUG93

DETACH LOADER SAFELY

 
Detach loader on a hard level surface.

Before disconnecting hydraulic hoses relieve all hydraulic pressure.



WX,80,SY,I -19-30MAY89

W14000 -UN-05OCT88



Buy Now



Our support email:

ebooklibonline@outlook.com