



419 Loader

OPERATOR'S MANUAL 419 Loader OMW48833 Issue E2 (ENGLISH)

CALIFORNIA
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

John Deere Welland Works
LITHO IN U.S.A.



Introduction

Foreword



W05120 -UN-04APR02

419 Loader

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record

all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

Introduction

Dealer's Record

Owner's Name _____ Date Sold _____
Address _____ Model _____
City _____ Serial Number _____
State/Prov _____ Zip/Mail Code _____

OUO1078,000002D -19-26SEP00-1/1

Predelivery

After the loader has been completely set up, inspect it to be sure it is in good working condition before delivering it to the customer. The following checklist is a reminder of important points to inspect. Check off each item as it is found satisfactory or after proper adjustment has been made.

- Loader has been assembled correctly.
- Mounting frame hardware is tightened to correct torque.
- Tractor is properly ballasted.
- Wheel tread is properly set.
- Loader has been lubricated.
- Loader responds correctly to controls.

- Hydraulic connections do not leak.
- Tractor transmission/hydraulic oil level is correct.
- All decals are in place and readable.
- Scratches are painted.
- Hoses do not contact any sharp edges or hang too low below tractor.
- This loader has been inspected and checked. To the best of my knowledge, it is ready for delivery to the customer.

(Date Set Up) _____

(Signature) _____

OUO1078,0000030 -19-26SEP00-1/1

Delivery

The following checklist is a reminder of very important information which should be conveyed to the customer at the time the loader is delivered. Check off each item as it is fully explained to the customer.

- John Deere warranty.
- Safe and correct operation and service.
- Daily and periodic inspections.
- Servicing machine regularly and correctly.
- Loader controls and operation. (*NOTE: Fast dump feature on single lever control only operates at low RPM.*)
- Give the Operator's Manual to the customer and encourage customer to read entire manual.
- Advise customer of safety precautions that must be observed while using this loader.
- Review information on how to prepare the loader.
- Review recommended procedures for attaching to or detaching from tractor.
- Recommended transporting information.
- Review loader operation.
- Make customer aware of all optional equipment offered for this machine.
- Recommended lubricants.
- Review service intervals and lubrication points.
- Review all adjustments.
- Recommended machine storage/parking.
- Have customer record machine serial number in the Specifications section.
- John Deere parts and service.
- Remove and file this page.

(Date Delivered)_____

(Signature)_____

After-Sale

It is suggested the following items be checked after the loader has been operated for approximately 50 hours.

- Go over entire machine for loose or missing hardware. Mounting frame hardware is tightened to correct torque.
- Check for broken or damaged parts. Repair as necessary.
- Decals intact and legible.
- Acquaint the customer with any special attachments that will help do a better job.
- Check with the customer as to the performance of the machine.
- Operate the loader to see if it is functioning properly.
- Hydraulic hoses and connections do not leak.
- Tractor transmission/hydraulic oil level is correct.
- Review the entire Operator's Manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date Checked)_____

(Signature)_____

Look For Supplemental Information

Occasionally new or revised information will become available after manuals are printed. To get this up-to-date information into your hands, publication supplements are prepared and supplied to the field in the machine literature package.

Supplements can be supplied in the following forms and are usually identified with one of these titles:

- Direction(s) Sheet
- Installation Instructions
- Publications Supplement

Before your initial review of the Operator's Manual, look through the machine literature package to see if

any supplemental information has been provided. If supplied, review this information to determine which operating procedures are impacted or modified by the revised instructions. Pay close attention to "CAUTION" and "IMPORTANT" statements as they address your safety, the safety of others, and safe operation of the machine.

When Operator's Manuals are revised, the supplemental information is incorporated directly into the manual, thereby eliminating the supplement.

Contents

	Page		Page
Safety	05-1	Transporting	
Safety Signs	10-1	Carrying Loads	35-1
Preparing the Tractor		Keep Riders Off Machine	35-1
Approved Tractor	15-1	Driving on Public Roads	35-2
Using Roll-Over Protective Structure (ROPS) ..	15-1	Operating Loader	
Keep ROPS Installed Properly	15-1	Preoperating Checks	40-1
Removing Front Weights	15-2	Using Ballast Box	40-3
Approved Front Tires	15-2	Avoid Rollover Accidents	40-4
Inflating Front Tires	15-2	Do Not Handle Round or Large Square Bales ..	40-4
Setting Front Tread Width	15-3	Using Bucket Level Indicator	40-5
Checking Front Wheel Hardware	15-3	Leveling and Scraping Forward	40-5
Approved Rear Tires	15-3	Leveling in Reverse	40-6
Selecting Rear Tread Width for Loader		Carrying Material	40-6
Operation	15-4	Removing Material from a Pile	40-6
Tractor Ballast Requirements	15-4	Loading Operations	40-7
Loader Required Minimum Ballasting	15-5	Digging	40-8
Adding Ballast to Rear Wheels	15-5	Backfilling	40-8
Installing Hitch Pin Bushings on Ballast		Attaching and Detaching Bucket, Forklift,	
Box for Category 1 Quick Coupler Hitch	15-6	or Blade	40-9
Attaching Ballast Box		Operating Boom-Mounted Front Blade	40-10
Three-Point Hitch	15-7	Operating Forklift	40-14
Quick Coupler Hitch	15-8	Attachments	
Adding Ballast to 3-Point Hitch	15-10	Materials Buckets	45-1
Controls		Replaceable Cutting Edge	45-1
Multi-Function Control Lever		Tines for Material Buckets	45-1
Operating	20-1	Bucket Level Indicator	45-2
Locking Out	20-2	Forklift	45-2
Using Float	20-2	Boom-Mounted Front Blade	45-3
Detaching Loader		Ballast Box	45-3
Preparing to Remove Loader	25-1	Ballast Box Extension	45-3
Removing Loader	25-2	Bushing Kit for iMatch™ Quick Coupler Hitch ..	45-4
Removing Ballast Box	25-5	Lubrication and Maintenance	
Attaching Loader		Lubricating and Maintaining Loader Safely	50-1
Preparing to Attach Loader	30-1	Perform Lubrication and Maintenance	50-1
Attaching Loader	30-2	Observe Lubrication Symbols	50-1
Checking Loader Operation	30-7	Grease	50-2
		Alternative and Synthetic Lubricants	50-2
		First 10 and Every 50 Hours	50-3

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2002
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Buy Now



Our support email:

ebooklibonline@outlook.com