

4425 Combine (From Serial No. 048201)



 
JOHN DEERE

OPERATORS MANUAL 4425 Combine (From Serial No. 048201)

OMZ91797 Issue D7 English

John Deere Werke Zweibrücken
OMZ91797 Issue D7

LITHO IN U.S.A.
ENGLISH





INTRODUCTION



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Your operator's manual contains SI metric measurements which are followed immediately by the U.S. customary units of measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use.


Record identification number(s) in space provided at the end of this manual. Accurately record "ALL" of the letters and numbers in case a computer is used to trace a stolen machine or for ordering parts from a dealer. Make an additional copy of the numbers and file it in a safe place.

The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that JOHN DEERE will back its products where defects appear within the warranty period. In some circumstances, JOHN DEERE also provided field improvements, often without charge to the customer, even if the product is out of warranty.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S. and Canada.

Warranty and field improvements are a part of JOHN DEERE's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.


Identification Views

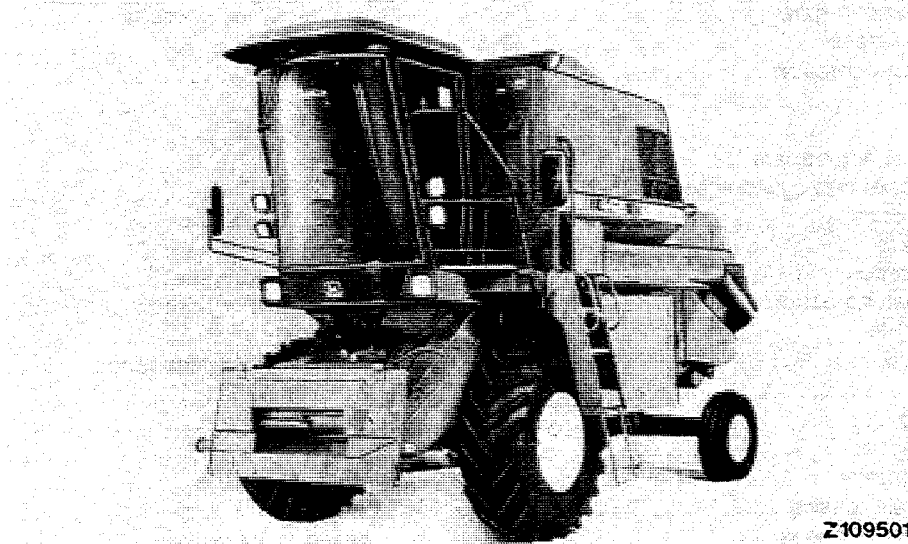

Z109501

*Left-Hand View, 4425 Combine with Cab, without Header;
Straw Chopper in Transport Position*

Z109501-4425AZE-150187

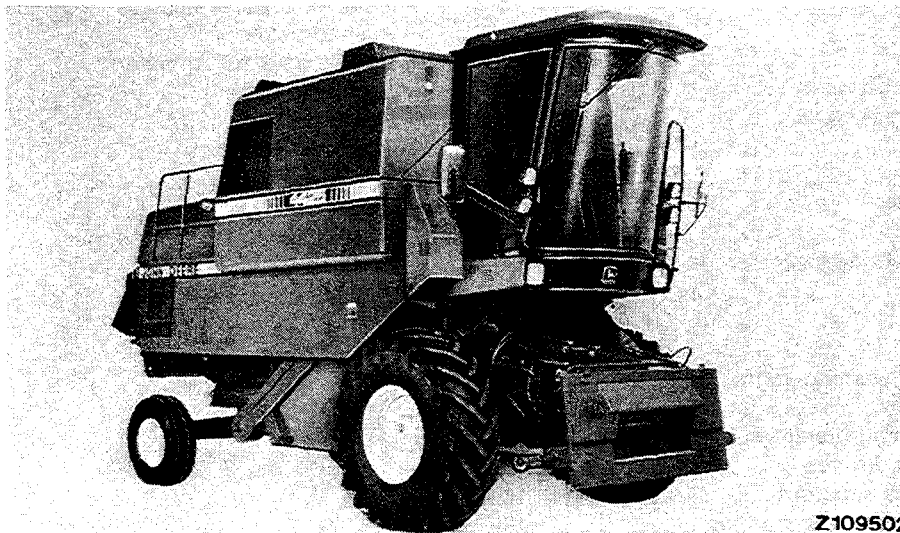

Z109502

*Right-Hand View, 4425 Combine with Cab, without Header;
Straw Chopper in Transport Position*

Z109502-4425AZE-150187

Contents

SAFETY RULES	05-1	COMBINE OPERATION AND FIELD	
FUNDAMENTALS OF COMBINE HARVESTING ..	10-	ADJUSTMENTS	20-
- Choice of harvesting time	10-1	Pre-starting checks	20-1
- Avoiding grain losses	10-1	- Daily checks on combine	20-1
- Cutting platform operation	10-2	- Engine oil	20-1
- Feeder house	10-2	- Coolant	20-1
- Separator	10-3	- Hydraulic oil	20-1
- Fundamentals of adjustment	10-3	- Hydrostatic oil	20-2
- Adjusting concave and cylinder speed	10-4	- Fuel	20-2
- Separating process	10-4	- Fire extinguisher	20-4
- Cleaning process	10-5	Operating the engine	20-5
- Grain transportation	10-5	- Starting the engine	20-5
- Evaluating threshing action	10-6	- Stopping the engine	20-9
- Grain tank sample	10-6	- Cold weather operation	20-11
- Checking tailings	10-7	- Starting aids	20-12
- Overthreshing	10-8	- Operating in tropical conditions	20-13
- Underthreshing	10-8	Break-in period	20-14
- Adjusting fan speed	10-9	- Engine	20-14
- Adjusting the chaffer	10-9	- Combine	20-15
- Determining grain losses	10-11	Driving the combine	20-16
- Prevention of grain losses	10-13	- Steering and driving	20-16
- Combine settings chart	10-14	- Operating foot brakes	20-17
CONTROLS AND INSTRUMENTS	15-	- Operating the clutch and	
- Miscellaneous controls	15-1	engaging a gear	20-17
- Operator's platform - controls	15-2	Transporting the combine	20-19
- Controls and instruments	15-3	- Under own power	20-19
- Operator's platform and instrument panel	15-4	- On truck trailer or railcar	20-20
- Instruments in corner post	15-6	- Towing the combine	20-21
Operator's platform and cab	15-8	Header adjustments	20-22
- Access ladder	15-8	- Header drive	20-22
- Adjusting steering column	15-9	- Hydraulic reverser	20-23
- Operator's seat	15-10	- Height control	20-23
- Operator's cab	15-11	- Platform pressure gauge	20-23
- Operator's cab controls	15-12	- Reel adjustment	20-24
- Air conditioning system	15-12	Combine field adjustments	20-25
- Heater	15-12	- Separator drive	20-25
- Fan	15-13	- Cylinder speed	20-25
- Windshield wiper	15-13	- Concave clearance	20-25
- Radio	15-14	- Fan speed	20-26
Lighting system and signals	15-16	- Chaffer and grain sieves	20-27
- Main switch	15-16	Grain tank and unloading auger	20-28
- Light switch	15-16	- Grain tank	20-28
- Headlights	15-17	- Unloading auger	20-28
- Turn signal and warning lights	15-17		
- Work lights	15-19		
Warning devices and monitors	16-1		
- Optical warning devices	16-1		
- Low shaft speed monitors	16-4		
- HARVESTRAK combine monitor	16-5		

Contents

OPERATION AND FIELD ADJUSTMENTS –		
ADDITIONAL EQUIPMENT	25-	
Straw spreader	25-1	
Straw chopper	25-2	
– Straw warning devices	25-2	
– Operating position	25-4	
– Adjusting length of cut	25-7	
– Front position	25-8	
Front and rear axle	25-9	
– Wheel treads	25-9	
HARVESTRAK COMBINE MONITOR	26-	
– General information	26-1	
– Position and basic function	26-1	
– Control panel – components	26-3	
– Grain size adjustments	26-3	
– Sensor selection	26-4	
– Adjustments	26-4	
– Operational check	26-6	
FUEL, LUBRICANTS, HYDRAULIC OIL,		
COOLANT AND CAPACITIES	30-	
– Fuel	30-1	
– Engine oil	30-2	
– Engine coolant	30-3	
– Transmission oil	30-4	
– Hydraulic oil	30-5	
– Lubricants	30-6	
LUBRICATING POINTS AND PERIODIC		
SERVICES, V-BELTS AND CHAINS	35-	
Lubricating points	35-1	
Periodic services	35-4	
– After the first few hours of		
operation	35-4	
– Every 10 operating hours	35-5	
– After the first 100 hours of		
operation	35-6	
– Every 200 operating hours	35-7	
– Every 400 operating hours	35-8	
– After the harvesting season	35-9	
– Every 800 operating hours	35-10	
– Every 1200 operating hours	35-10	
Service – V-belts and chains	35-11	
– V-belts	35-11	
– Chains	35-11	
Service – Opening side guards and		
inspection covers	35-14	
SERVICE – ENGINE	40-	
Engine	40-1	
– Access to engine	40-1	
– Engine compartment	40-2	
– Adjusting valve tappets	40-2	
– Oil level	40-3	
– Filter element	40-4	
Fuel system	40-5	
– Fuel tank	40-5	
– Fuel transfer pump	40-6	
– Water trap	40-8	
– Fuel filter	40-9	
– Bleeding the fuel system	40-11	
Cooling system	40-14	
– Engine coolant	40-14	
– Flushing the cooling system	40-15	
– Radiator and rotary screen	40-16	
– Water pump and fan drive	40-17	
Air intake system	40-18	
– Pre-cleaner	40-18	
– Dust ejector unit	40-18	
– Dry-type air cleaner element	40-19	
– Air intake lines	40-22	
SERVICE – AIR CONDITIONING SYSTEM,		
ELECTRICAL SYSTEM, HARVESTRAK		
COMBINE MONITOR AND HYDRAULIC		
SYSTEM	45-	
Air conditioning system	45-1	
– Compressor	45-1	
– Refrigerant level	45-1	
– Condenser air intake dome	45-2	
– Rotary blade drive	45-2	
– Condenser	45-3	
– Pre-cleaner screens	45-3	
– Paper filter element	45-4	
– Recirculating filter	45-4	
– Cleaning filter elements	45-4	
– Condensed water hoses	45-6	
– Evaporator and heater	45-7	

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com