


480C Forklift

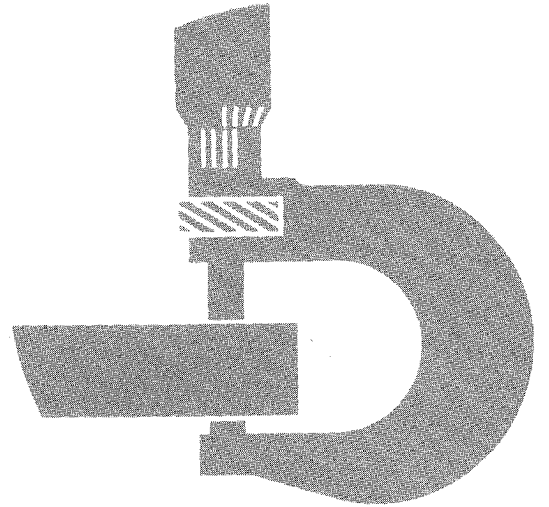

TECHNICAL MANUAL

480C FORKLIFT TECHNICAL MANUAL TM-1249 (JUN-81)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Lubrication

SECTION 01 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0120 - Non-Powered Wheels
and Fastenings

SECTION 02 - AXLES AND SUSPENSION SYSTEMS

- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shafts, Bearings and
Reduction Gears

SECTION 03 - TRANSMISSION

- Group 0300 - Removal and Installation
- Group 0315 - Controls
- Group 0350 - Gears, Shafts, Bearings and
Power Shift Clutch
- Group 0360 - Hydraulic System

SECTION 04 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating
Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block

SECTION 04 - ENGINE - Continued

- Group 0407 - Oiling System
- Group 0409 - Cylinder Head and Valves
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0415 - Engine Balancer
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings

SECTION 05 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0560 - External Fuel Supply Systems

SECTION 07 - TRACTION CLUTCH

- Group 0715 - Controls
- Group 0752 - Elements

SECTION 09 - STEERING SYSTEM

- Group 0960 - Hydraulic System

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

COPYRIGHT® 1981
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION

730:11 01 100881

SECTION AND GROUP CONTENTS - CONTINUED

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1060 - Hydraulic System

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging-System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1676 - Instruments and Indicators

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1749 - Chassis Weights

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System

SECTION 45 - FORKLIFTS

- Group 4503 - Forks
- Group 4512 - Masts
- Group 4560 - Hydraulic System

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System

SECTION 99 - SPECIAL TOOLS

ALPHABETICAL INDEX

A

Adjust Clutch Disconnect Lever	0715-04
Adjust Parking Brake	1111-10
Air Cleaner	0520-01
Air Filter Element	0520-01
Air Filter Restriction Indicator	1676-01
Air Filter Restriction Indicator Test	9010-20
Axle Assembly, Non-Powered	0230-15
Axle Housing	0250-03
Axle Shaft	0250-10

B

Battery	1671-02
Bleed Air From Lift Cylinder	4560-65
Bleed Brake Hydraulic System	1060-15
Bleed Fuel System	0400-23
Brake Disk	1011-01
Brake Pedal and Equilizing Valve Adjustment	9025-50
Brake Valve	1060-02
Brake Valve, Test	9025-47

C

Camshaft and Valve Actuating Means	0402-01
Charging Circuit Testing	9015-04
Chassis Weights	1749-01
Circuit Breaker	1674-02
Clutch Assembly	0752-02
Clutch Control Valve, Test	9025-53
Clutch Disconnect Lever, Adjustment	0715-04
Clutch Disconnect Lever Adjustment	9020-27
Clutch Disconnect Linkage	0715-01
Clutch Fork	0715-01
Clutch Fork Shaft	0715-02
Clutch Housing (Reverser)	0300-20
Cold Weather Starting Aids	0505-01
Compression Pressure, Test	9010-13
Connecting Rods and Pistons	0403-01
Control Valve	4560-12
Control Valve Linkage	4560-26
Cooling System Test	9010-13
Cooling Systems	0510-01
Counterweights	1749-02
Countershaft Bearing Support, Transmission	0350-14

Crankshaft and Main Bearings	0401-01
Crankshaft Gear	0401-08
Crankshaft Rotation Direction	9010-04
Cylinder Block	0404-01
Cylinder Head and Valves	0409-01
Cylinder, Lift	4560-53
Cylinder, Mast	4512-09
Cylinders, Sideshift	4560-43
Cylinder, Steering	0960-21
Cylinder, Tilt	4560-34

D

Differential Drive Shaft Cone Point Adjustment	0350-29
Differential Drive Shaft Preload Adjustment	0350-33
Differential Housing Backlash Adjustment	0350-37
Differential Housing Preload Adjustment	0350-37
Differential Lock Assembly	0350-20
Differential Lock Linkage Adjustment	9020-26
Drop Retarder, Lift Cylinder	4560-66

E

Element, Hydraulic Oil Filter	4560-32
Electrical System, Diagnose Malfunctions	9015-04
Electrical System Short Test	9015-09
Electrical System Testing	9015-01
Electrical System, Tests	9015-04
Charging Circuit	9015-14
Instruments and Indicators	9015-17
Lighting Circuit	9015-15
Miscellaneous Accessories	9015-19
Starting Circuit	9015-10
System Short	9015-09
Engine Auxiliary Systems	0505-01
Engine Balancer	0415-01
Engine Coolant Heater	0505-01
Engine Coolant Temperature Sender	1676-02
Engine, Diagnose Malfunctions	9010-06
Engine Oil Pressure Indicator Switch	1676-02
Engine Oil Pressure Test	9010-13
Engine Removal and Installation	0400-05
Engine System Testing	9010-01

Continued on next page

ALPHABETICAL INDEX - Continued

Engine Test
 Compression Pressure 9010-13
 Engine oil Pressure 9010-13
 Cooling System 9010-13
 Fuel Transfer Pump Pressure 9010-14
 Air Filter Restriction Indicator 9010-20
 External Fuel Supply Systems 0560-01

F

Fast Idle Adjustment 9010-16
 Filter, Hydraulic Oil 4560-31
 Flasher 1673-02
 Flywheel Housing and Fastenings 0433-01
 Forks 4503-01
 Forklift Functions, Test 9035-35
 Forklift Hydraulics 4560-01
 Forklift Hydraulics, Diagnose
 Malfunctions 9025-21
 Forklifts 4503-01
 Fuel Filter 0420-01
 Fuel Injection System 0413-01
 Fuel Sender 1676-02
 Fuel Tank 0560-01
 Fuel Transfer Pump 0421-01
 Fuel Transfer Pump Pressure Test 9010-14

G

Gauges 1676-01
 Gears, Shafts, Bearings and Power
 Shift Clutch, Transmission 0350-01
 General Information 9005-01
 General Specification I-III-01

H

Headlights 1673-01
 Hoop 1910-01
 Hood Supports 1910-02
 Horn Switch 1674-01
 Hour Meter 1676-01
 Hub 0230-03
 Hydraulic Brakes, Diagnose Malfunctions .. 9025-25
 Hydraulic Pump Using Flow Meter, Test ... 9025-28
 Hydraulic Pump Using Orifice, Test 9025-30
 Hydraulic System Testing 9025-02
 Hydraulics, Forklift 4560-01
 Hydraulic Oil Filter 4560-31
 Hydraulic Oil Filter Element 4560-32
 Hydraulic Pump 2160-03
 Hydraulic Pump Drive 2160-11
 Hydraulic System, Main 2160-01

I

Indicator Lights 1676-01
 Injection Pump Timing Advance
 Adjustment 9010-18
 Instruments and Indicators
 Testing 9015-17
 Intake Manifold 0414-01
 Intake System 0520-01

J, K

Key Switch 1674-01

L

Lift Cylinder 4560-53
 Lift Cylinder Drop Retarder 4560-66
 Lift Cylinders For Leakage, Test 9035-39
 Light Switch 1673-02
 Light, Tail/Flood 1673-01
 Lighting Circuit Testing 9015-15
 Lights, Warning 1673-01
 Linkage, Control Valve 4560-26
 Lubricants I-IV-02
 Lubrication Information I-IV-01

M

Main Hydraulic System 2160-01
 Masts 4512-01
 Measure and Adjust Valves 0402-08
 Miscellaneous Accessories Testing 9015-19
 Miscellaneous Components, Engine 0400-06

N

Neutral Start Switch 1674-02
 Non-Powered Axle Assembly 0230-15
 Non-Powered Wheels and Fastenings 0120-01

O

Oiling System 0407-01
 Operation of Priority Valve, Test 9025-44
 Operator Enclosure 1810-01
 Operator's Station 1810-01
 Overhead Guard 1810-01

P

Parking Brake Adjustment 9020-26
 Parking Brake Band Assembly 1111-03
 Parking Brake Drum 1111-05
 Parking Brake Indicator Switch 1676-02
 Parking Brake Linkage 1115-01

Continued on next page

730-11 01 18088:

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com