

# **4400 and 4500 Telescopic Handlers**

**DCEO-Mannheim  
TM4541 (23JAN01)**

Printed in Germany  
**ENGLISH**

# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Information is organized in groups for the various components requiring service instruction.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

# Contents

## **SECTION 05—Safety**

Group 05—Safety Information

## **SECTION 50—Transmission**

Group 00—General Information

Group 05—Removal and Replacement

Group 10—Disassembly and Assembly of the  
Torque Converter Housing

Group 15—Disassembly and Assembly of the  
Gearbox

Group 20—Disassembly and Assembly of the  
Reverser Unit

Group 25—Disassembly and Assembly of the  
Hydraulic 2/4 Wheel Drive Unit

## **SECTION 60—REMOVAL AND REPAIR OF AXLES AND BRAKES**

Group 05—Front Axle Removal

Group 10—Rear Axle Removal

Group 15—Hydraulic Steering

Group 20—Cab - Steering Column

Group 25—Axles and Brakes - Brake Circuit

Group 30—Brakes

## **SECTION 70—HYDRAULIC SYSTEM**

Group 00—General Information

Group 10—Hydraulic Pump

Group 20—Hydraulics - Priority Valve

Group 30—Hydraulics - Fault Finding

## **SECTION 80—CHASSIS AND BOOM**

Group 05—Removal and Repair

## **SECTION 90—OPERATOR'S CAB**

Group 00—Cab - Disassembly and Reassembly

Group 05—Cab Heater/Cab Seat - Removal

## **SECTION 240—ELECTRICAL SYSTEM**

Group 05—System Information

Group 10—System Diagrams

## **Index**

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM4541-19-23JAN01

COPYRIGHT© 1997  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual

# Section 05 Safety

## Contents


Page

**Group 05—Safety Information . . . . . 05-05-1**

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

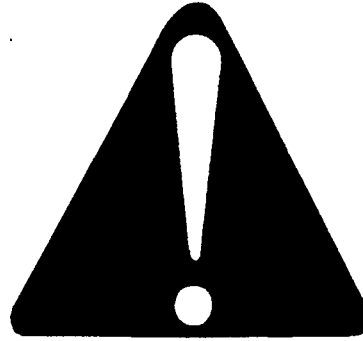

DX,ALERT -19-03MAR93

T81389 -UN-07DEC88

## PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral.



GS002

-UN-18AUG95

GS002

GS,BYPAS1 -19-15JUL95

## HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

-UN-23AUG88

TS227

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)