

Shop Manual

ENGINE

SAA6D140E-5

(For construction and industrial)

KOMATSU

ENGINE

SAA6D140E-5

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01844-01
00 Index and foreword	SEN01845-01
Index	SEN01846-01 ●
Foreword and general information	SEN01847-01 ●
01 Specification	SEN01848-01
Specification and technical data	SEN01849-01 ●
10 Structure and function	SEN01850-01
Structure and function, Part 1	SEN01851-01 ●
Structure and function, Part 2	SEN01852-01 ●
20 Standard value table	SEN01853-01
Standard service value table	SEN01854-01 ●
30 Testing and adjusting	SEN01855-01
Testing and adjusting	SEN01856-01 ●
40 Troubleshooting	SEN01857-01
General information on troubleshooting	SEN01858-01 ●
Troubleshooting of mechanical system (S-mode)	SEN01859-01 ●
Troubleshooting of electrical system (E-mode), Part 1	SEN01860-01 ●
Troubleshooting of electrical system (E-mode), Part 2	SEN01861-01 ●
50 Disassembly and assembly	SEN01862-01
General information on disassembly and assembly	SEN01863-01 ●
Disassembly and assembly, Part 1 (with EGR)	SEN01864-01 ●
Disassembly and assembly, Part 2 (EGR-less)	SEN01865-01 ●
Disassembly and assembly, Part 3	SEN01866-01 ●

Table of contents

00 Index and foreword	
Index	SEN01846-01
Composition of shop manual	2
Table of contents	3
Foreword and general information	SEN01847-01
Safety notice	2
How to read the shop manual	7
Handling of electric equipment and hydraulic component	9
Handling of connectors newly used for engines	16
How to read electric wire code	19
Precautions when carrying out operation	22
Standard tightening torque table	25
Conversion table	28
01 Specification	
Specification and technical data	SEN01849-01
Outline	2
Specifications	6
General view	8
Dimensions table	12
Weight table	13
Engine performance curves	15
10 Structure and function	
Structure and function, Part 1	SEN01851-01
Air intake and exhaust system	2
Air intake and exhaust unit	2
EGR system	9
Engine unit	16
Cylinder head	16
Cylinder block	18
Main moving parts	20
Flywheel and flywheel housing	22
Vibration damper	23
Timing gear	24
Valve system	28
Structure and function, Part 2	SEN01852-01
Lubrication system	4
Lubrication system diagram	4
Oil pump	8
EGR oil pump	9
Oil filter	10
Oil cooler	12
Fuel system	14
CRI system diagram	14
Outline of CRI system	15
Structure and operation of CRI system	17
Structure and operation of component parts	18
Fuel piping	36
Fuel filter	38
Priming pump	40
Engine controller cooler	41

Cooling system.....	42
Cooling system diagram	42
Water pump	44
Water pump mounting.....	46
Thermostat.....	47
Corrosion resistor	48
Accessories	50
Front PTO	50
Electrical equipment	52
Alternator	52
Starting motor	54
Starting aid.....	55
Engine controller.....	56
Engine speed sensor	57
Engine oil level sensor.....	58
20 Standard value table	
Standard service value table	SEN01854-01
Standard service value table	2
Standard service value table for testing, adjusting, and troubleshooting	2
30 Testing and adjusting	
Testing and adjusting	SEN01856-01
Testing and adjusting (with EGR)	3
Testing and adjusting tools list	3
Testing air boost pressure.....	5
Testing exhaust temperature	6
Adjusting valve clearance	7
Testing blow-by pressure	8
Testing engine oil pressure	9
Testing EGR valve and bypass valve drive oil pressure	10
Handling fuel system parts	11
Releasing residual pressure in fuel system	11
Testing fuel pressure.....	12
Testing fuel return rate and leakage	13
Bleeding air from fuel circuit	16
Testing fuel system for leakage	18
Adjusting speed sensor	19
Testing and adjusting alternator belt tension	19
Handling controller high-voltage circuit.....	20
Testing and adjusting (EGR-less).....	21
Testing and adjusting tools list	21
Testing air boost pressure.....	23
Testing exhaust temperature	24
Adjusting valve clearance	25
Testing blow-by pressure	26
Testing engine oil pressure	27
Handling fuel system parts	28
Releasing residual pressure in fuel system	28
Testing fuel pressure.....	29
Testing fuel return rate and leakage	30
Bleeding air from fuel circuit	33
Testing fuel system for leakage	35
Adjusting speed sensor	36
Testing and adjusting alternator belt tension	36
Handling controller high-voltage circuit.....	37

40 Troubleshooting	
General information on troubleshooting	SEN01858-01
General information on troubleshooting	2
Points to remember when troubleshooting	2
Method of displaying trouble diagnosis lamps (Method of displaying error code)	3
Error codes and list.....	5
Troubleshooting of mechanical system (S-mode)	SEN01859-01
Troubleshooting of mechanical system (S-mode)	4
Troubleshooting of mechanical system (S-mode)	4
S-1 Starting performance is poor	8
S-2 Engine does not start	10
S-3 Engine does not pick up smoothly	14
S-4 Engine stops during operations	15
S-5 Engine does not rotate smoothly	16
S-6 Engine lacks output (or lacks power)	17
S-7 Exhaust smoke is black (incomplete combustion)	18
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	20
S-9 Oil becomes contaminated quickly	21
S-10 Fuel consumption is excessive	22
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down).....	23
S-12 Oil pressure drops.....	24
S-13 Oil level rises (Entry of coolant/fuel)	26
S-14 Coolant temperature becomes too high (overheating).....	28
S-15 Abnormal noise is made	29
S-16 Vibration is excessive	30
Troubleshooting of electrical system (E-mode), Part 1	SEN01860-01
Troubleshooting of electrical system (E-mode), Part 1	4
Information in troubleshooting table	4
E-1 Error code [111] Engine Controller Internal Failure	6
E-2 Error code [115] Eng. Ne and Bkup Speed Sensor Error.....	8
E-3 Error code [122] Charge Air Press Sensor High Error	10
E-4 Error code [123] Charge (boost) Air Press Sensor Low Error.....	14
E-5 Error code [131] Throttle Sensor High Error	16
E-6 Error code [132] Throttle Sensor Low Error	17
E-7 Error code [135] Oil Press. Sensor High Error.....	18
E-8 Error code [141] Oil Press. Sensor Low Error.....	20
E-9 Error code [143] Eng. Oil Press Low Torque Derate.....	20
E-10 Error code [144] Coolant Temp. Sensor High Error	22
E-11 Error code [145] Coolant Temp. Sensor Low Error	24
E-12 Error code [146] Eng. Overheat	24
E-13 Error code [153] Charge Air Temp. Sensor High Error	26
E-14 Error code [154] Charge Air Temp. Sensor Low Error	28
E-15 Error code [187] Sensor Sup. 2 Volt. Low Error.....	28
E-16 Error code [221] Ambient Air Press. Sensor High Error.....	30
E-17 Error code [222] Ambient Air Press. Sensor Low Error	33
E-18 Error code [227] Sensor Sup. 2 Volt. High Error	34
E-19 Error code [234] Eng. Overspeed	37
E-20 Error code [238] Ne Speed Sensor Sup. Volt. Error.....	38
E-21 Error code [263] Fuel Temp. Sensor High Error.....	40
E-22 Error code [265] Fuel Temp. Sensor Low Error	42
E-23 Error code [271] PCV1 Short Error	44
E-24 Error code [272] PCV1 Open Error	46
E-25 Error code [273] PCV2 Short Error	48
E-26 Error code [274] PCV2 Open Error.....	50
E-27 Error code [322] Injector #1 (L/B #1) System Open/Short Error	52
E-28 Error code [323] Injector #5 (L/B #5) System Open/Short Error	54
E-29 Error code [324] Injector #3 (L/B #3) System Open/Short Error	56

E-30 Error code [325] Injector #6 (L/B #6) System Open/Short Error	58
E-31 Error code [331] Injector #2 (L/B #2) System Open/Short Error	60
E-32 Error code [332] Injector #4 (L/B #4) System Open/Short Error	62
E-33 Error code [342] Engine Controller Data Matching Error	64
E-34 Error code [351] INJ. Drive Circuit Error	66
E-35 Error code [352] Sensor Sup. 1 Volt. Low Error	67
E-36 Error code [386] Sensor Sup. 1 Volt. High Error	68
E-37 Error code [415] Eng. Oil Press. Low Speed Derate	71
E-38 Error code [441] Supply Voltage Low Error	71
E-39 Error code [442] Supply Voltage High Error	71
Troubleshooting of electrical system (E-mode), Part 2	SEN01861-01
Troubleshooting of electrical system (E-mode), Part 2	3
E-40 Error code [449] Rail Press. High Error 2	3
E-41 Error code [451] Rail Press. Sensor High Error	4
E-42 Error code [452] Rail Press. Sensor Low Error	7
E-43 Error code [553] Rail Press. High Error 1	7
E-44 Error code [559] No-pressure Feed By Supply pump 1	8
E-45 Error code [689] Eng. Ne Speed Sensor Error	12
E-46 Error code [731] Eng. Bkup Speed Sensor Phase Error	14
E-47 Error code [757] All Engine Controller Data Lost Error	14
E-48 Error code [778] Eng. Bkup Speed Sensor Error	16
E-49 Error code [1228] EGR Valve Servo Error 1	19
E-50 Error code [1625] EGR Valve Servo Error 2	19
E-51 Error code [1626] Bypass Valve Solenoid Drive Short Circuit Error	20
E-52 Error code [1627] Bypass Valve Solenoid Drive Open Error	21
E-53 Error code [1628] Bypass Valve Servo Error 1	22
E-54 Error code [1629] Bypass Valve Servo Error 2	23
E-55 Error code [1631] Bypass Valve Lift Sensor High Error	24
E-56 Error code [1632] Bypass Valve Lift Sensor Low Error	25
E-57 Error code [2185] Throttle Sens. Sup. Volt. High Error	26
E-58 Error code [2186] Throttle Sens. Sup. Volt. Low Error	27
E-59 Error code [2249] No-pressure Feed By Supply pump 2	27
E-60 Error code [2271] EGR Valve Lift Sensor High Error	28
E-61 Error code [2272] EGR Valve Lift Sensor Low Error	29
E-62 Error code [2351] EGR Valve Solenoid Drive Short Error	30
E-63 Error code [2352] EGR Valve Solenoid Drive Open Error	32
E-64 Error code [2555] Intake Air Heater Relay Open Error	33
E-65 Error code [2556] Intake Air Heater Relay Short Error	34
50 Disassembly and assembly	
General information on disassembly and assembly	SEN01863-01
General information on disassembly and assembly	2
How to read this manual	2
Coating materials list	4
Special tools list	7
Sketches of special tools	8
Disassembly and assembly, Part 1 (with EGR)	SEN01864-01
Disassembly and assembly, Part 1 (with EGR)	2
General disassembly of engine	2
General assembly of engine	19
Disassembly and assembly, Part 2 (EGR-less)	SEN01865-01
Disassembly and assembly, Part 2 (EGR-less)	2
General disassembly of engine	2
General assembly of engine	18

Disassembly and assembly, Part 3	SEN01866-01
Disassembly and assembly, Part 3	2
Removal and installation of fuel supply pump unit (with EGR).....	2
Removal and installation of fuel supply pump unit (EGR-less).....	4
Replacement of oil seal of engine mounted on machine.....	7

ENGINE

SAA6D140E-5

00 Index and foreword

Foreword and general information

Safety notice	2
How to read the shop manual	7
Handling of electric equipment and hydraulic component	9
Handling of connectors newly used for engines	16
How to read electric wire code	19
Precautions when carrying out operation	22
Standard tightening torque table	25
Conversion table	28

Safety notice

(Rev. 2007/03)

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **▲** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

▲ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine.

- 1) Before carrying out any greasing or repairs, read all the safety plates stuck to the machine. For the locations of the safety plates and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (–) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is seen well from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

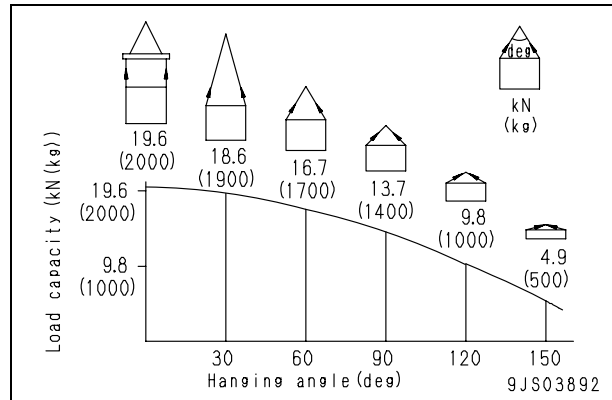

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
- Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

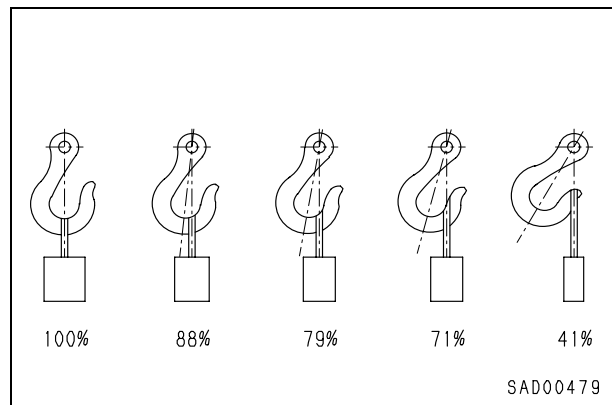


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
- Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes (Standard "Z" twist ropes without galvanizing) (JIS G3525, No. 6, Type 6X37-A)		
Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

1) Disconnection

⚠ **Collect the air conditioner refrigerant (R134a) from the air conditioner circuit in advance.**


⚠ **If the refrigerant gas (R134a) gets in your eyes, you may lose your sight. Accordingly, when collecting or filling it, you must be qualified for handling the refrigerant and put on protective goggles.**

- ★ Ask professional traders for collecting and filling operation of refrigerant (R134a).
- ★ Never release the refrigerant (R134a) to the atmosphere.

2) Connection

- 1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.
- 2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.
- 3] Check that each O-ring is not damaged or deteriorated.
- 4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (**DENSO: ND-OIL8, ZEXEL: ZXL100PG (equivalent to PAG46)**) to its O-rings.

- ★ Example of O-ring (Fitted to every joint of hoses and tubes)

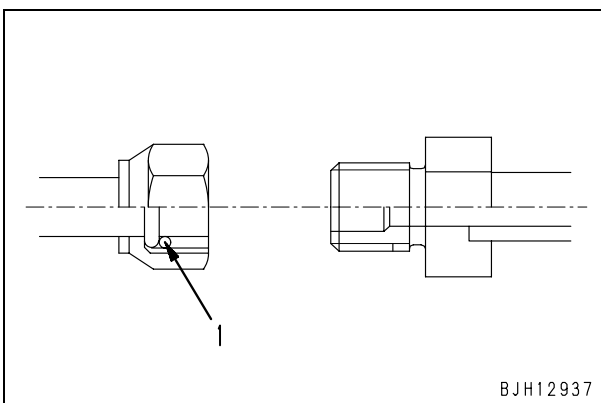

- ★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

How to read the shop manual

- Materials and specifications are subject to change without notice.

1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

01. Specification

This section explains the specifications of the machine.

10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

40. Troubleshooting





 


This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes.

50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

2. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing work.
	Weight	Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for tightening torque during assembly.
	Coat	Places to be coated with adhesives, etc. during assembly.
	Oil, coolant	Places where oil, etc. must be added, and capacity.
	Drain	Places where oil, etc. must be drained, and quantity to be drained.

3. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

Handling of electric equipment and hydraulic component


To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct “operation“, “maintenance and inspection“, “troubleshooting“, and “repairs” must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives section on “Handling electric equipment”.

Points to remember when handling electric equipment

1. Handling wiring harnesses and connectors

Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wiring.


Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

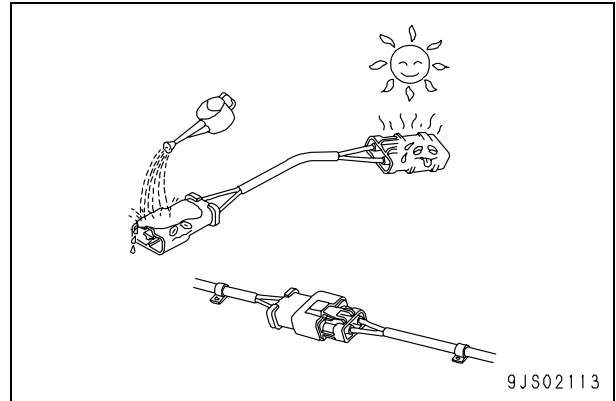

2. Main failures occurring in wiring harness


1) Defective contact of connectors (defective contact between male and female)

Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces. The corroded or oxidized contact surfaces may become shiny again (and contact may become normal) by connecting and disconnecting the connector about 10 times.

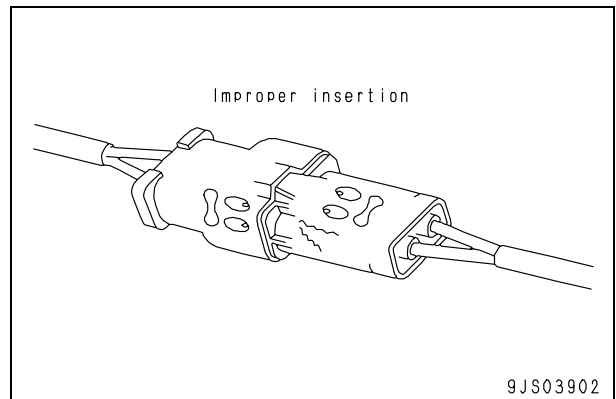


2) Defective crimping or soldering of connectors

The pins of the male and female connectors are in contact at the crimped terminal or soldered portion, but if there is excessive force brought to bear on the wiring, the plating at the joint will peel and cause improper connection or breakage.

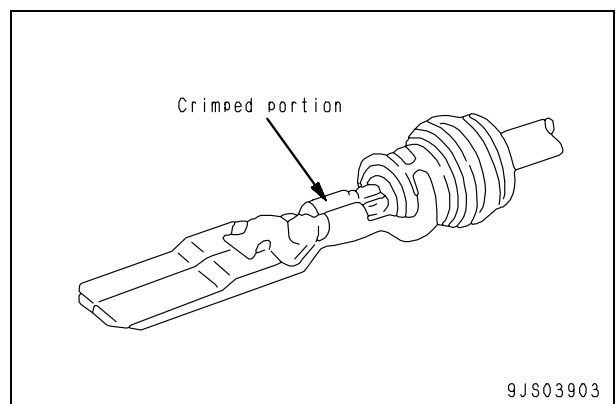


3) Disconnections in wiring

If the wiring is held and the connectors are pulled apart, or components are lifted with a crane with the wiring still connected, or a heavy object hits the wiring, the crimping of the connector may separate, or the soldering may be damaged, or the wiring may be broken.

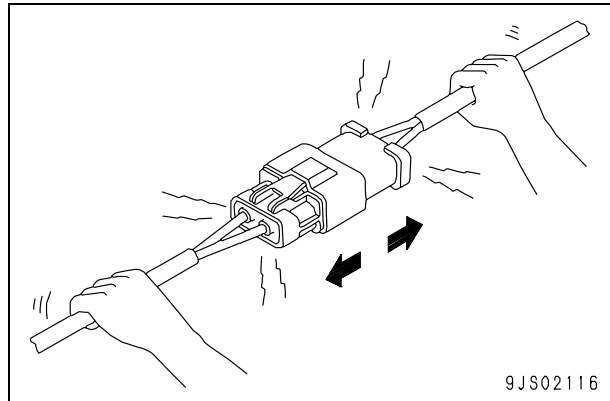

4) High-pressure water entering connector


The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector, depending on the direction of the water jet. Accordingly, take care not to splash water over the connector. The connector is designed to prevent water from entering, but at the same time, if water does enter, it is difficult for it to be drained. Therefore, if water should get into the connector, the pins will be short-circuited by the water, so if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

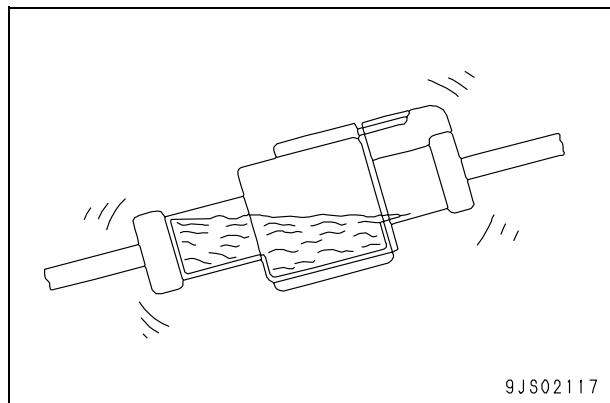

5) Oil or dirt stuck to connector

If oil or grease are stuck to the connector and an oil film is formed on the mating surface between the male and female pins, the oil will not let the electricity pass, so there will be defective contact. If there is oil or grease stuck to the connector, wipe it off with a dry cloth or blow it dry with compressed air and spray it with a contact restorer.

- ★ When wiping the mating portion of the connector, be careful not to use excessive force or deform the pins.
- ★ If there is oil or water in the compressed air, the contacts will become even dirtier, so remove the oil and water from the compressed air completely before cleaning with compressed air.

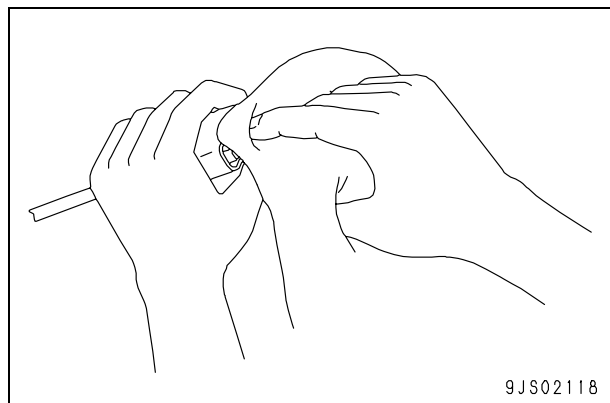

3. Removing, installing, and drying connectors and wiring harnesses

1) Disconnecting connectors

- 1] Hold the connectors when disconnecting.

When disconnecting the connectors, hold the connectors. For connectors held by a screw, loosen the screw fully, then hold the male and female connectors in each hand and pull apart. For connectors which have a lock stopper, press down the stopper with your thumb and pull the connectors apart.

★ Never pull with one hand.

- 2] When removing from clips

- Both of the connector and clip have stoppers, which are engaged with each other when the connector is installed.





- When removing a connector from a clip, pull the connector in a parallel direction to the clip for removing stoppers.

★ If the connector is twisted up and down or to the left or right, the housing may break.

- 3] Action to take after removing connectors

After removing any connector, cover it with a vinyl bag to prevent any dust, dirt, oil, or water from getting in the connector portion.

★ If the machine is left disassembled for a long time, it is particularly easy for improper contact to occur, so always cover the connector.

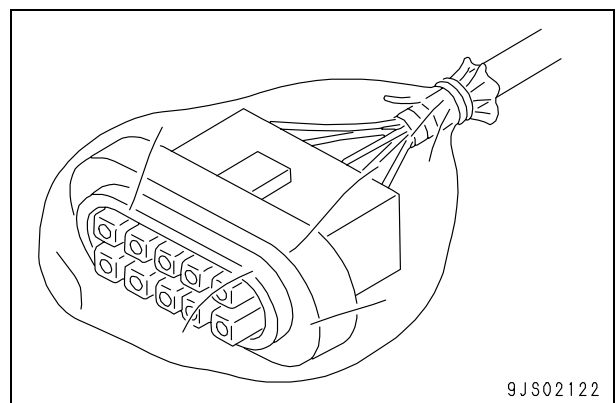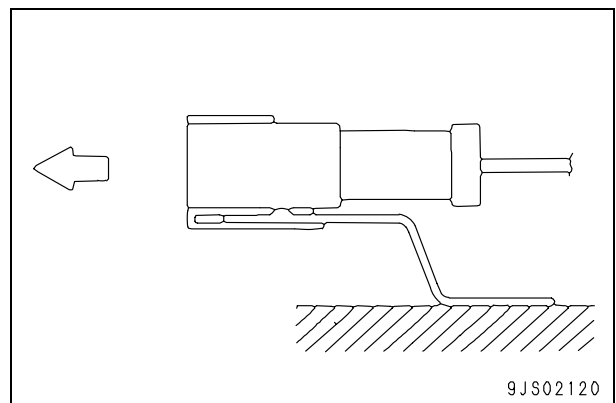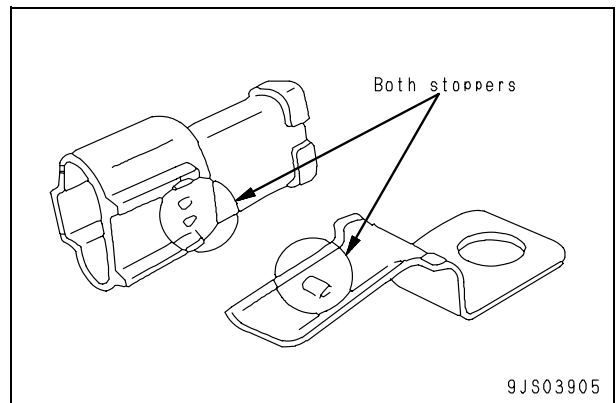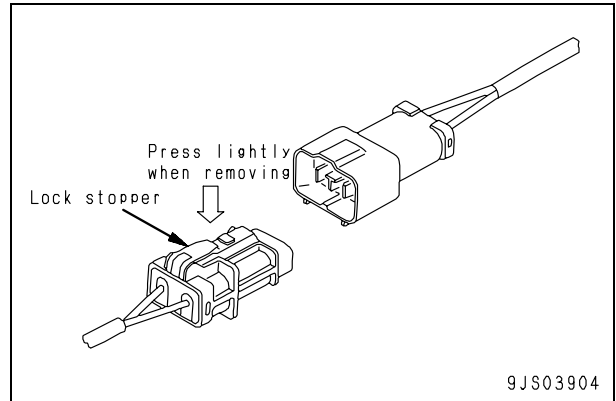

2) Connecting connectors

1] Check the connector visually.

Check that there is no oil, dirt, or water stuck to the connector pins (mating portion).

Check that there is no deformation, defective contact, corrosion, or damage to the connector pins.

Check that there is no damage or breakage to the outside of the connector.

★ If there is any oil, water, or dirt stuck to the connector, wipe it off with a dry cloth. If any water has got inside the connector, warm the inside of the wiring with a dryer, but be careful not to make it too hot as this will cause short circuits.

★ If there is any damage or breakage, replace the connector.

2] Fix the connector securely.




Align the position of the connector correctly, and then insert it securely. For connectors with the lock stopper, push in the connector until the stopper clicks into position.

3] Correct any protrusion of the boot and any misalignment of the wiring harness.

For connectors fitted with boots, correct any protrusion of the boot. In addition, if the wiring harness is misaligned, or the clamp is out of position, adjust it to its correct position.

★ If the connector cannot be corrected easily, remove the clamp and adjust the position.

● If the connector clamp has been removed, be sure to return it to its original position. Check also that there are no loose clamps.

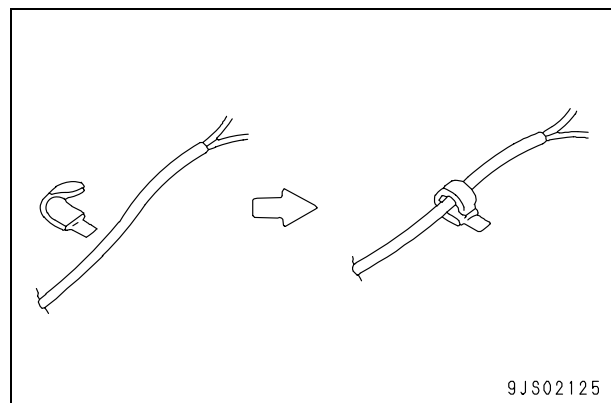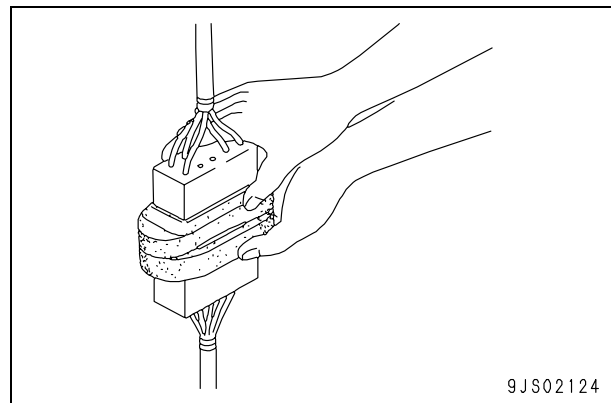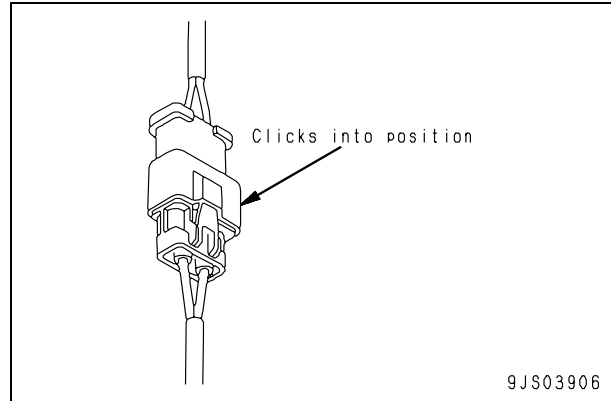

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com