



# **2009 Sportster Models Service Manual**

**99484-09**

**©2008 H-D.**

## MAINTENANCE

### 1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

### 1.2 GENERAL

Servicing a New Motorcycle.....	1-4
Safe Operating Maintenance.....	1-4
Shop Practices.....	1-4
Repair Notes.....	1-4
Safety.....	1-4
Removing Parts.....	1-4
Cleaning.....	1-4
Disassembly and Assembly.....	1-5
Checking Torques on Fasteners.....	1-5
Magnetic Parts Trays.....	1-5
Repair and Replacement Procedures.....	1-5
Hardware and Threaded Parts.....	1-5
Threadlocking Agents.....	1-5
Wiring, Hoses and Lines.....	1-5
Instruments and Gauges.....	1-5
Bearings.....	1-5
Bushings.....	1-5
Gaskets.....	1-5
Lip Type Seals.....	1-5
O-Rings (Preformed Packings).....	1-6
Gears.....	1-6
Shafts.....	1-6
Part Replacement.....	1-6
Exhaust System Leakage.....	1-6
Cleaning.....	1-6
Part Protection.....	1-6
Cleaning Process.....	1-6
Rust or Corrosion Removal.....	1-6
Bearings.....	1-6
Tool Safety.....	1-6
Air Tools.....	1-6
Wrenches.....	1-6
Pliers/Cutters/Pry bars.....	1-6
Hammers.....	1-7
Punches/Chisels.....	1-7
Screwdrivers.....	1-7
Ratchets and Handles.....	1-7
Sockets.....	1-7
Storage Units.....	1-7

### 1.3 FUEL AND OIL

Fuel.....	1-8
Gasoline Blends.....	1-8
Engine Lubrication.....	1-8
Winter Lubrication.....	1-9

### 1.4 MAINTENANCE SCHEDULE

General.....1-10

### 1.5 BULB REQUIREMENTS

Bulb Chart.....1-14

### 1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-15
Removing and Replacing Oil Filler Cap.....	1-15
Checking Oil with Cold Engine.....	1-15
Checking Oil with Warm Engine.....	1-15
Changing Oil and Filter.....	1-16
General.....	1-16

Draining Oil Tank.....	1-16
Removing Oil Filter.....	1-16
Installing New Oil Filter.....	1-17
Refilling Oil Tank.....	1-17

### 1.7 BRAKES

General.....	1-18
Inspection.....	1-18
Troubleshooting.....	1-18

### 1.8 BLEEDING HYDRAULIC BRAKE SYSTEM

General.....	1-20
Bleeding Front Brake: All Models.....	1-20
Bleeding Rear Brake: All Models.....	1-22

### 1.9 BRAKE PADS AND DISCS: XL MODELS

Inspection.....	1-24
Brake Pads.....	1-24
Brake Disc Thickness, Lateral Runout and Warpage.....	1-24
Brake Pad Replacement: Front.....	1-25
Brake Pad Replacement: Rear.....	1-27

### 1.10 BRAKE PADS AND DISCS: XR MODELS

Inspection.....	1-31
Brake Pads.....	1-31
Brake Disc Thickness, Lateral Runout and Warpage.....	1-31
Brake Pad Replacement: Front.....	1-31
Removal.....	1-31
Installation.....	1-32
Brake Pad Replacement: Rear.....	1-33
Removal.....	1-33
Installation.....	1-34

### 1.11 TIRES AND WHEELS

Tires.....	1-36
Tire Replacement.....	1-37
Inspection.....	1-37
When To Replace Tires.....	1-37
Wheel Bearings.....	1-37
Wheel Spokes.....	1-37

### 1.12 PRIMARY CHAIN

Inspection.....	1-39
Adjustment.....	1-39

### 1.13 CLUTCH

Adjustment.....	1-41
-----------------	------

### 1.14 TRANSMISSION LUBRICANT

Transmission Lubrication: Sportster Models.....	1-43
Check Lubricant Level.....	1-43
Changing Lubricant.....	1-44

### 1.15 REAR BELT AND SPROCKETS

General.....	1-45
Cleaning.....	1-45
Inspection.....	1-45
Sprockets.....	1-45
Idler Pulley: XR Models.....	1-45
Rear Belt.....	1-45

### 1.16 REAR BELT DEFLECTION

Rear Drive Belt: Sportster Models.....	1-47
--	------

## TABLE OF CONTENTS

---

General.....	1-47
Gauging Deflection.....	1-47
Belt Deflection Adjustment.....	1-48
Wheel Alignment.....	1-49
Checking Wheel Alignment.....	1-49
Adjusting Wheel Alignment.....	1-50
<b>1.17 BATTERY MAINTENANCE</b>	
General.....	1-52
Battery Disconnection and Removal.....	1-53
Cleaning and Inspection.....	1-54
Charging Battery.....	1-54
Safety Precautions.....	1-54
Using a Battery Charger.....	1-54
Battery Installation and Connection.....	1-55
Storage.....	1-56
<b>1.18 SPARK PLUGS</b>	
General.....	1-58
Inspection.....	1-58
Spark Plug Cable Inspection.....	1-59
<b>1.19 STEERING HEAD BEARINGS</b>	
Adjustment.....	1-60
Lubrication.....	1-60
<b>1.20 SHOCK ABSORBER ADJUSTMENT</b>	
Shock Absorber Preload Adjustment: Sportster Models....	1-62
<b>1.21 REAR FORK BEARINGS</b>	
Lubrication.....	1-64
Replacement.....	1-64
<b>1.22 FRONT FORK OIL</b>	
Changing Fork Oil: XL Models.....	1-65
Draining Fork Oil.....	1-65
Filling Fork Oil: Forks Assembled, in Frame.....	1-65
Filling Fork Oil: Forks Disassembled, out of Frame.....	1-66
Changing Fork Oil: XR Models.....	1-66
Left Fork.....	1-67
Right Fork.....	1-69
<b>1.23 CABLE AND CHASSIS LUBRICATION</b>	
General.....	1-72
Cables and Hand Levers.....	1-72
Foot Shift Lever and Rear Brake Pedal.....	1-72
Jiffy Stand.....	1-72
Steering Head Bearings.....	1-72
<b>1.24 AIR CLEANER: XL MODELS</b>	
General.....	1-73
Removal.....	1-73
Cleaning, Inspection and Repair.....	1-73
Installation.....	1-74
<b>1.25 AIR CLEANER: XR MODELS</b>	
General.....	1-75
Removal.....	1-75
Cleaning, Inspection and Repair.....	1-76
Installation.....	1-76
<b>1.26 EXHAUST SYSTEM</b>	
Exhaust System Leak Check.....	1-78
<b>1.27 THROTTLE CONTROL</b>	
Cable Inspection and Lubrication.....	1-79
Cable Adjustment.....	1-79
<b>1.28 IDLE SPEED AND IGNITION TIMING</b>	
Idle Speed.....	1-80
Ignition Timing.....	1-80
<b>1.29 FUEL SUPPLY FILTER</b>	
General.....	1-81
Removal.....	1-81
Installation.....	1-81
<b>1.30 ENGINE MOUNTS AND STABILIZER LINKS</b>	
Inspection.....	1-82
<b>1.31 HEADLAMP ALIGNMENT</b>	
Headlamp Alignment.....	1-83
Headlamp Adjustment: Sportster Models.....	1-83
Adjustment (XL 883C and XL 1200C Models).....	1-83
Adjustment (All Models Except XL 883C and XL 1200C).....	1-84
<b>1.32 FLUID AND LUBRICANT REQUIREMENTS</b>	
Brake Fluid.....	1-85
Brake Component Grease.....	1-85
Front Fork Oil.....	1-85
Primary Drive/Transmission Lubricant.....	1-85
Engine Oil.....	1-85
<b>1.33 CRITICAL FASTENERS</b>	
Inspection.....	1-86
Checking Torques on Fasteners.....	1-86
<b>1.34 STORAGE</b>	
General.....	1-88
Placing in Storage.....	1-88
Removal From Storage.....	1-88
<b>1.35 TROUBLESHOOTING</b>	
General.....	1-90
Engine.....	1-90
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-90
Engine Turns Over But Does Not Start.....	1-90
Starts Hard.....	1-90
Starts But Runs Irregularly or Misses.....	1-90
Spark Plug Fouls Repeatedly.....	1-91
Pre-Ignition or Detonation (Knocks or Pings).....	1-91
Check Engine Light Illuminates During Operation.....	1-91
Overheating.....	1-91
Valve Train Noise.....	1-91
Excessive Vibration.....	1-91
Lubrication System.....	1-91
Oil Does Not Return To Oil Tank.....	1-91

## TABLE OF CONTENTS

Engine Uses Too Much Oil Or Smokes Excessively...	1-91
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-91
Low Oil Pressure.....	1-91
High Oil Pressure.....	1-92
Electrical System.....	1-92
Alternator Does Not Charge.....	1-92
Alternator Charge Rate Is Below Normal.....	1-92
Speedometer Operates Erratically.....	1-92
Transmission.....	1-92
Shifts Hard.....	1-92
Jumps Out Of Gear.....	1-92
Clutch Slips.....	1-92
Clutch Drags Or Does Not Release.....	1-92
Clutch Chatters.....	1-92
Handling.....	1-92
Brakes.....	1-92
Brake Does Not Hold Normally.....	1-92
<b>CHASSIS</b>	
<b>2.1 FASTENER TORQUE VALUES</b>	
Fastener Torque Values in this Chapter.....	2-1
<b>2.2 SPECIFICATIONS</b>	
Sportster Specifications.....	2-8
Chassis Specifications.....	2-8
Tire Specifications.....	2-9
<b>2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)</b>	
Vehicle Identification Number (V.I.N.): Sportster Models.....	2-11
General.....	2-11
Abbreviated V.I.N.....	2-11
<b>2.4 WHEELS</b>	
General.....	2-13
Troubleshooting.....	2-13
Front Wheel.....	2-14
Removal.....	2-14
Disassembly: Cast Front Wheel.....	2-15
Disassembly: Laced Front Wheel.....	2-15
Cleaning and Inspection.....	2-15
Assembly: Cast Front Wheel.....	2-15
Assembly: Laced Front Wheel.....	2-16
Installation.....	2-20
Rear Wheel.....	2-20
Removal.....	2-20
Disassembly.....	2-21
Cleaning and Inspection.....	2-21
Assembly.....	2-21
Installation.....	2-24
Sealed Wheel Bearings.....	2-24
Inspection.....	2-24
Removal.....	2-25
Installation.....	2-27
<b>2.5 WHEEL LACING: 16 INCH RIM</b>	
General.....	2-28
Procedure.....	2-28
<b>2.6 WHEEL LACING: 19 INCH RIM</b>	
Procedure.....	2-31
<b>2.7 WHEEL LACING: 21 INCH RIM</b>	
General.....	2-35
Procedure.....	2-35
<b>2.8 TRUING LACED WHEELS</b>	
General.....	2-39
Lateral Truing.....	2-39
Radial Truing.....	2-40
<b>2.9 CHECKING CAST WHEEL RUNOUT</b>	
General.....	2-42
Lateral Runout.....	2-42
Radial Runout.....	2-42
<b>2.10 FRONT BRAKE MASTER CYLINDER</b>	
General.....	2-43
Inspection.....	2-43
Removal.....	2-43
Disassembly.....	2-45
Cleaning, Inspection and Repair.....	2-47
Assembly.....	2-47
Installation.....	2-48
<b>2.11 FRONT BRAKE CALIPER: XL MODELS</b>	
Removal.....	2-52
Disassembly.....	2-53
Cleaning, Inspection and Repair.....	2-55
Assembly.....	2-56
Lubricating Front Caliper Bolt Pins and Boots.....	2-56
Installing Brake Pads in Caliper.....	2-57
Installation.....	2-58
<b>2.12 FRONT BRAKE CALIPER: XR MODELS</b>	
Removal.....	2-60
Disassembly.....	2-61
Cleaning, Inspection and Repair.....	2-62
Assembly.....	2-63
Installation.....	2-64
<b>2.13 REAR BRAKE MASTER CYLINDER: XL MODELS</b>	
General.....	2-65
Inspection.....	2-65
Removal.....	2-65
Disassembly.....	2-68
Cleaning, Inspection and Repair.....	2-69
Assembly.....	2-70
Installation.....	2-72
<b>2.14 REAR BRAKE MASTER CYLINDER: XR MODELS</b>	
General.....	2-73
Inspection.....	2-73
Removal.....	2-73
Disassembly.....	2-74
Cleaning, Inspection and Repair.....	2-75
Assembly.....	2-76

## TABLE OF CONTENTS

---

Installation.....	2-77	Cleaning, Inspection and Repair.....	2-112
<b>2.15 REAR BRAKE MASTER CYLINDER RESERVOIR</b>		Assembly.....	2-112
General.....	2-79	Installation.....	2-113
Removal: XL Models.....	2-79		
Installation: XL Models.....	2-80		
Removal: XR Models.....	2-80		
Installation: XR Models.....	2-81		
<b>2.16 REAR BRAKE CALIPER: XL MODELS</b>		<b>2.22 FRONT FORK: XR MODELS</b>	
Removal.....	2-82	General.....	2-115
Disassembly.....	2-84	Removal.....	2-115
Cleaning, Inspection and Repair.....	2-85	Disassembly.....	2-115
Lubricating Rear Caliper Bolt Pins and Boots.....	2-85	Left Side.....	2-115
Assembly.....	2-86	Right Side.....	2-117
Installation.....	2-87	Cleaning and Inspection.....	2-119
<b>2.17 REAR BRAKE CALIPER: XR MODELS</b>		Assembly.....	2-119
Removal.....	2-90	Left Side.....	2-119
Disassembly.....	2-91	Right Side.....	2-122
Cleaning, Inspection and Repair.....	2-93	Installation.....	2-124
Assembly.....	2-93		
Installation.....	2-94		
<b>2.18 BRAKE LINES</b>		<b>2.23 FORK STEM AND BRACKET ASSEMBLY</b>	
Front Brake Line: All Models.....	2-97	Removal and Disassembly.....	2-126
Removal.....	2-97	Cleaning, Inspection and Repair.....	2-126
Installation.....	2-98	Assembly and Installation.....	2-127
Rear Brake Line: XL Models.....	2-99		
Removal.....	2-100	<b>2.24 BELT GUARD AND DEBRIS DEFLECTOR</b>	
Installation.....	2-100	Belt Guard: XL Models.....	2-128
Rear Brake Line: XR Models.....	2-101	Removal.....	2-128
Removal.....	2-101	Installation.....	2-128
Installation.....	2-102	Debris Deflector: XL Models.....	2-128
		Removal.....	2-128
<b>2.19 TIRES</b>		Installation.....	2-128
General.....	2-103	Belt Guard: XR Models.....	2-128
Removal.....	2-103	Removal.....	2-128
Cleaning, Inspection and Repair.....	2-104	Installation.....	2-128
Installation.....	2-104	Debris Deflector: XR Models.....	2-129
Tube Type Tires.....	2-104	Removal.....	2-129
Tubeless Tires.....	2-105	Installation.....	2-129
Checking Tire Runout.....	2-105		
Lateral Runout.....	2-105	<b>2.25 REAR FORK</b>	
Radial Runout.....	2-105	General.....	2-130
Wheel Balancing.....	2-106	Removal.....	2-130
Weights for Laced Wheels.....	2-106	Disassembly.....	2-130
Weights for Cast Wheels.....	2-106	Cleaning and Inspection.....	2-131
<b>2.20 LEFT SIDE COVER</b>		Assembly.....	2-131
General.....	2-107	Installation.....	2-131
Opening Left Side Cover.....	2-107		
Closing Left Side Cover.....	2-108	<b>2.26 SHOCK ABSORBERS</b>	
Removing Left Side Cover.....	2-108	General.....	2-133
Installing Left Side Cover.....	2-109	Removal.....	2-133
<b>2.21 FRONT FORK: XL MODELS</b>		Cleaning and Inspection.....	2-133
General.....	2-110	Installation.....	2-133
Removal.....	2-110		
Disassembly.....	2-110	<b>2.27 STABILIZER LINKS</b>	
		General.....	2-135
		Upper Front Stabilizer Link.....	2-135
		Removal.....	2-135
		Installation.....	2-135
		Lower Front Stabilizer Link.....	2-135
		Removal.....	2-135
		Installation.....	2-135
		Rear Stabilizer Link.....	2-136
		Removal.....	2-136

## TABLE OF CONTENTS

Installation.....	2-136
<b>2.28 FRONT ENGINE MOUNT/ISOLATOR</b>	
Removal.....	2-137
Installation.....	2-138
<b>2.29 REAR ENGINE MOUNT/ISOLATOR</b>	
Removal.....	2-139
Installation.....	2-141
<b>2.30 THROTTLE CABLES: ALL MODELS</b>	
Removal and Disassembly.....	2-142
Cleaning, Inspection and Repair.....	2-144
Assembly and Installation.....	2-144
<b>2.31 CLUTCH CONTROL</b>	
General.....	2-146
Removal and Disassembly.....	2-146
Clutch Cable: Lower.....	2-146
Clutch Lever and Clutch Cable: Upper.....	2-147
Clutch Hand Control.....	2-147
Assembly and Installation.....	2-148
Clutch Hand Control.....	2-148
Clutch Lever and Clutch Cable: Upper.....	2-149
Clutch Cable: Lower.....	2-149
Finish.....	2-149
<b>2.32 HANDLEBARS</b>	
Removal.....	2-150
All Models.....	2-150
XL 883C and XL 1200C.....	2-150
All XL Models Except XL 883C, XL 1200C.....	2-151
XR1200.....	2-152
Installation.....	2-153
XL 883C and XL 1200C.....	2-153
All XL Models Except XL 883C, XL 1200C.....	2-154
XR1200.....	2-154
All Models.....	2-155
<b>2.33 FRONT FENDER</b>	
XL Models.....	2-156
Removal.....	2-156
Installation.....	2-156
XR Models.....	2-156
Removal.....	2-156
Installation.....	2-156
<b>2.34 REAR FENDER: ALL XL MODELS EXCEPT XL 1200N</b>	
General.....	2-157
Removal.....	2-157
Installation.....	2-159
<b>2.35 REAR FENDER AND LICENSE PLATE BRACKET: XL 1200N</b>	
General.....	2-161
Removal and Disassembly.....	2-161
Assembly and Installation.....	2-163
<b>2.36 REAR FENDER: XR MODELS</b>	
Removal.....	2-166
Installation.....	2-166
<b>2.37 JIFFY STAND</b>	
General.....	2-167
Jiffy Stand Interlock: International Models.....	2-167
Removal.....	2-167
Cleaning and Lubrication.....	2-167
Installation.....	2-168
<b>2.38 SEAT: XL MODELS</b>	
General.....	2-169
Seat Removal: XL Models.....	2-169
Seat Installation: XL Models.....	2-169
<b>2.39 SEAT: XR MODELS</b>	
Seat Removal: XR 1200 Model.....	2-171
Seat Installation: XR 1200 Model.....	2-171
Passenger Pillion: XR 1200 Model.....	2-171
Removal.....	2-171
Installation.....	2-171
<b>2.40 RIDER FOOT CONTROLS: XL MODELS EQUIPPED WITH MID-MOUNT CONTROLS</b>	
Right Footrest and Rear Brake Pedal Assembly.....	2-173
Removal.....	2-173
Installation.....	2-173
Left Footrest and Shift Lever Assembly.....	2-173
Removal.....	2-173
Installation.....	2-173
<b>2.41 RIDER FOOT CONTROLS: XL MODELS EQUIPPED WITH FORWARD CONTROLS</b>	
Right Footrest and Rear Brake Pedal Assembly.....	2-175
Removal.....	2-175
Installation.....	2-175
Left Footrest and Shift Lever Assembly.....	2-176
Removal.....	2-176
Installation.....	2-177
Adjusting Shift Pedal.....	2-178
<b>2.42 RIDER FOOT CONTROLS: XR MODELS</b>	
Right Footrest and Rear Brake Pedal Assembly.....	2-179
Removal.....	2-179
Installation.....	2-179
Left Footrest and Shift Lever Assembly.....	2-179
Removal.....	2-179
Installation.....	2-180
Adjusting Shift Pedal.....	2-180
<b>2.43 PASSENGER FOOTRESTS</b>	
General.....	2-181
XL Models.....	2-181
Removal.....	2-181
Installation.....	2-181
XR Models.....	2-181
Removal.....	2-181
Installation.....	2-181

## TABLE OF CONTENTS

---

<b>2.44 FORK LOCK</b>	
Removal.....	2-183
Installation.....	2-183
<b>ENGINE</b>	
<b>3.1 FASTENER TORQUE VALUES</b>	
Fastener Torque Values in this Chapter.....	3-1
<b>3.2 SPECIFICATIONS</b>	
Specifications: 2009 Sportster Models.....	3-5
<b>3.3 ENGINE</b>	
General.....	3-11
<b>3.4 OIL PRESSURE</b>	
General.....	3-12
Oil Pressure Indicator Lamp.....	3-12
Checking Oil Pressure.....	3-13
Connecting Gauge: XL Models.....	3-13
Connecting Gauge: XR Models.....	3-13
Testing Pressure.....	3-13
Removing Gauge: XL Models.....	3-13
Removing Gauge: XR Models.....	3-13
Finalize Test.....	3-13
<b>3.5 CRANKCASE BREATHING SYSTEM: XL MODELS</b>	
General.....	3-15
<b>3.6 CRANKCASE BREATHING SYSTEM: XR MODELS</b>	
General.....	3-16
<b>3.7 TROUBLESHOOTING</b>	
Diagnosing Valve Train Noise.....	3-18
Compression Test.....	3-18
Cylinder Leakage Test.....	3-18
Diagnosing Smoking Engine or High Oil Consumption.....	3-19
Check Prior to Cylinder Head Removal.....	3-19
Check After Cylinder Head Removal.....	3-19
Adjustment and Testing.....	3-19
General.....	3-19
<b>3.8 ENGINE LUBRICATION SYSTEM</b>	
Oil Pump Operation.....	3-20
Oil Flow: XL Models.....	3-23
Oil Flow: XR Models.....	3-23
<b>3.9 HOW TO USE THIS SECTION</b>	
Typical Symptoms.....	3-29
Top End Repair.....	3-29
Bottom End Repair.....	3-29
<b>3.10 TOP END SERVICE</b>	
Engine in Chassis.....	3-30
Engine Removed from Chassis.....	3-31
<b>3.11 BOTTOM END SERVICE</b>	
Engine in Chassis.....	3-32
Engine Removed From Chassis.....	3-33
<b>3.12 REMOVING ENGINE FROM CHASSIS</b>	
General.....	3-34
Procedure: XL Models.....	3-34
Procedure: XR Models.....	3-38
<b>3.13 INSTALLING ENGINE IN CHASSIS</b>	
General.....	3-43
Procedure: XL Models.....	3-43
Procedure: XR Models.....	3-45
<b>3.14 PRECISION COOLING SYSTEM: XR MODELS</b>	
General.....	3-48
Return Oil Manifold.....	3-48
Removal.....	3-48
Installation.....	3-49
Cylinder Head Oil Return Lines.....	3-49
Removal.....	3-49
Installation.....	3-50
Cylinder Head Oil Feed Assembly.....	3-50
Removal.....	3-50
Installation.....	3-50
Oil Pump Lines.....	3-51
Removal.....	3-51
Installation.....	3-52
Oil Cooler.....	3-52
Removal.....	3-52
Installation.....	3-52
<b>3.15 TOP END OVERHAUL: DISASSEMBLY</b>	
General.....	3-53
Stripping Motorcycle for Top End Repair.....	3-53
Cylinder Heads.....	3-54
Disassembling Rocker Covers.....	3-54
Removing Cylinder Head.....	3-56
Disassembling Push Rods and Covers.....	3-59
Cylinder and Piston.....	3-60
<b>3.16 TOP END OVERHAUL: ASSEMBLY</b>	
General.....	3-62
Piston and Cylinder.....	3-62
Push Rods, Covers, and Retainers.....	3-63
Cylinder Head.....	3-65
Rocker Covers.....	3-68
Assembling Motorcycle After Top End Repair.....	3-71
<b>3.17 BOTTOM END OVERHAUL: DISASSEMBLY</b>	
General.....	3-73
Tappets.....	3-73
Oil Pump: XL Models.....	3-73
Gearcase Cover and Cam Gears: XL Models.....	3-73
Oil Pump Housing/Gearcase Cover and Cam Gears: XR Models.....	3-74
Crankcase.....	3-76
Removing Piston Oil Jets.....	3-77

## TABLE OF CONTENTS

Removing Cylinder Base Studs.....	3-77
<b>3.18 BOTTOM END OVERHAUL: ASSEMBLY</b>	
Crankcase.....	3-78
Installing Piston Oil Jets.....	3-78
Installing Pinion Shaft Bearings.....	3-78
Installing Left Main Bearing.....	3-80
Assembling Crankcase Halves.....	3-80
Installing Cylinder Base Studs.....	3-83
Cam Gears and Gearcase Cover: XL Models.....	3-83
Cam Gears and Gearcase Cover: XR Models.....	3-86
Tappets.....	3-89
Assembling Top End of Engine.....	3-90
<b>3.19 VALVE TAPPETS</b>	
General.....	3-91
Removal.....	3-91
Cleaning and Inspection.....	3-91
Installation.....	3-91
<b>3.20 GEARCASE COVER AND CAM GEARS</b>	
General.....	3-92
Removal and Disassembly.....	3-92
Cleaning, Inspection and Repair.....	3-92
Cam and Pinion Gear Identification, Inspection and Selection.....	3-92
Bushing Inspection and Removal: XL Only.....	3-92
Bushing Installation: XL Only.....	3-94
Cam Gear Bushings in Right Crankcase.....	3-94
Cam Gear Bushings (Except Rear Intake Bushing) in Gearcase Cover.....	3-94
Rear Intake Cam Gear Bushing in Gearcase Cover.....	3-94
Pinion Shaft Bushing in Gearcase Cover.....	3-94
Bushing Reaming: XL Only.....	3-95
Cam Gear Bushings in Right Crankcase.....	3-95
Cam Gear Bushings (Except Rear Intake Bushing) in Gearcase Cover.....	3-96
Rear Intake Cam Gear Bushing in Gearcase Cover.....	3-96
Pinion Shaft Bushing in Gearcase Cover.....	3-96
Assembly and Installation.....	3-97
<b>3.21 CYLINDER HEAD</b>	
Removal.....	3-98
Disassembly.....	3-98
Cleaning and Inspection.....	3-100
Cylinder Heads.....	3-100
Rocker Arm Assemblies.....	3-100
Valves.....	3-102
Valve Seats.....	3-102
Valve Guides.....	3-102
Valve Springs.....	3-102
Spark Plug Threads.....	3-103
Push Rods.....	3-103
Replacing Rocker Arm Bushings.....	3-103
Replacing Valve Guides.....	3-104
Removal.....	3-104
Installation.....	3-105
Refacing Valve Seats.....	3-108
Replacing Valve Seats.....	3-110
Assembly.....	3-110
Installation.....	3-113
<b>3.22 CYLINDER AND PISTON</b>	
Removal and Disassembly.....	3-114
Cleaning, Inspection and Repair.....	3-114
Checking Gasket Surface.....	3-114
Measuring Cylinder Bore.....	3-114
Measuring Piston to Cylinder Fit.....	3-115
Boring and Honing Cylinder.....	3-116
Fitting Piston Rings.....	3-116
Connecting Rod Bushings.....	3-118
Removing Upper Connecting Rod Bushings.....	3-118
Installing Upper Connecting Rod Bushings.....	3-120
Reaming Upper Connecting Rod Bushings.....	3-120
Honing Upper Connecting Rod Bushings.....	3-121
Repair.....	3-121
Assembly and Installation.....	3-121
<b>3.23 CRANKCASE</b>	
General.....	3-122
Removal.....	3-122
Disassembly.....	3-123
Fitting Pinion Bearings.....	3-124
Bearing Selection.....	3-125
Inner Bearing Finish Example.....	3-127
Lapping Engine Main Bearing Races.....	3-128
Assembling Crankcase Halves.....	3-129
<b>3.24 OIL PUMP: XL MODELS</b>	
General.....	3-130
Removal.....	3-131
Disassembly.....	3-131
Cleaning and Inspection.....	3-131
Assembly.....	3-131
Installation.....	3-132
<b>3.25 OIL PUMP: XR MODELS</b>	
General.....	3-133
Disassembly.....	3-134
Cleaning and Inspection.....	3-135
Assembly.....	3-136
<b>3.26 OIL FILTER MOUNT</b>	
General.....	3-137
Disassembly.....	3-137
Cleaning and Inspection.....	3-137
Assembly.....	3-137
<b>3.27 OIL TANK</b>	
Oil Hose Routing: XL Models.....	3-138
Oil Line Routing: XR Models.....	3-138
Removal.....	3-140
Installation.....	3-142
<b>FUEL SYSTEM</b>	
<b>4.1 FASTENER TORQUE VALUES</b>	
Fastener Torque Values in this Chapter.....	4-1
<b>4.2 SPECIFICATIONS: FUEL SYSTEM</b>	
Specifications: 2009 Sportster Models.....	4-4

## TABLE OF CONTENTS

---

<b>4.3 ELECTRONIC FUEL INJECTION (EFI)</b>	
Troubleshooting.....	4-5
<b>4.4 AIR CLEANER: XL MODELS</b>	
Removal.....	4-6
Cleaning, Inspection and Repair.....	4-6
Installation.....	4-7
<b>4.5 AIRBOX: XR MODELS</b>	
Removal.....	4-8
Installation.....	4-8
<b>4.6 FUEL TANK: XL MODELS</b>	
General.....	4-9
Purging and Disconnecting Fuel Supply Hose.....	4-10
Removing Fuel Tank.....	4-10
Cleaning and Inspection.....	4-11
Installing Fuel Tank.....	4-11
Reconnecting Fuel Hose and Filling Fuel Tank.....	4-12
Vapor Valve.....	4-12
Console Replacement.....	4-13
Removal.....	4-13
Installation.....	4-14
<b>4.7 FUEL TANK: XR MODELS</b>	
General.....	4-16
Purging and Disconnecting Fuel Supply Hose.....	4-16
Removing Fuel Tank.....	4-16
Disassemble Fuel Tank.....	4-18
Cleaning and Inspection.....	4-18
Assemble Fuel Tank.....	4-19
Installing Fuel Tank.....	4-19
Reconnecting Fuel Hose and Filling Fuel Tank.....	4-20
<b>4.8 THROTTLE POSITION (TP) SENSOR</b>	
General.....	4-21
Removal: XL Models.....	4-22
Installation: XL Models.....	4-22
Removal: XR Models.....	4-23
Installation: XR Models.....	4-23
<b>4.9 ENGINE TEMPERATURE (ET) SENSOR</b>	
General.....	4-25
Removal.....	4-25
Installation.....	4-26
<b>4.10 INDUCTION MODULE: XL MODELS</b>	
General.....	4-28
Removal.....	4-28
Disassembly.....	4-30
Assembly.....	4-31
Installation.....	4-32
<b>4.11 INDUCTION MODULE: XR MODELS</b>	
General.....	4-34
Removal.....	4-34
Disassembly.....	4-35
Assembly.....	4-36
Installation.....	4-36
<b>4.12 IDLE AIR CONTROL (IAC)</b>	
General.....	4-38
Removal: XL Models.....	4-39
Installation: XL Models.....	4-39
Removal: XR Models.....	4-40
Installation: XR Models.....	4-41
<b>4.13 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR</b>	
General.....	4-42
Removal: XL Models.....	4-42
Installation: XL Models.....	4-43
Removal: XR Models.....	4-44
Installation: XR Models.....	4-44
<b>4.14 OXYGEN SENSOR</b>	
General.....	4-46
Removal.....	4-46
Installation.....	4-47
<b>4.15 EXHAUST SYSTEM: XL MODELS</b>	
General.....	4-48
Removal.....	4-49
Mufflers and Exhaust Pipes.....	4-49
Muffler Interconnect Bracket.....	4-49
Installation.....	4-50
Muffler Interconnect Bracket.....	4-50
Exhaust Pipes and Mufflers.....	4-50
<b>4.16 EXHAUST SYSTEM: XR MODELS</b>	
General.....	4-52
Removal.....	4-52
Mufflers.....	4-52
Header Pipes.....	4-53
Installation.....	4-53
Header Pipes.....	4-53
Mufflers.....	4-53
<b>4.17 FUEL INJECTORS</b>	
General.....	4-54
Removal.....	4-54
Installation.....	4-55
<b>4.18 FUEL PUMP</b>	
General.....	4-57
Removal.....	4-57
Disassembly.....	4-58
Pressure Regulator and Filter Housing.....	4-58
Fuel Pump Assembly and Pump Bracket.....	4-59
Low Fuel Level Sensor Assembly.....	4-59
Fuel Pump/Sender Harness.....	4-59
Assembly.....	4-59
Fuel Pump/Sender Harness.....	4-59
Low Fuel Level Sensor Assembly.....	4-59
Fuel Pump Assembly and Pump Bracket.....	4-59
Pressure Regulator and Filter Housing.....	4-59
Installation.....	4-60
<b>4.19 FUEL PRESSURE TEST</b>	
General.....	4-62

## TABLE OF CONTENTS

Testing.....	4-62	Clutch Pack Cleaning and Inspection.....	5-23	
<b>4.20 INTAKE LEAK TEST</b>		Adjusting Screw Disassembly/Assembly.....	5-24	
General.....	4-64	Clutch Shell/Hub Inspection.....	5-24	
Leak Tester.....	4-64	Clutch Shell Bearing Replacement.....	5-25	
Parts List.....	4-64	Assembly.....	5-26	
Tester Assembly.....	4-64	Installation.....	5-28	
Tester Adjustment.....	4-64			
Procedure.....	4-64			
<b>4.21 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)</b>				
General.....	4-66	<b>5.7 DRIVE BELT</b>		
Charcoal Canister.....	4-67	Removal.....	5-30	
Removal.....	4-67	XL Models.....	5-30	
Installation.....	4-68	XR Models.....	5-31	
Vapor Valve: XL Models.....	4-68	Installation.....	5-31	
Removal.....	4-68	XL Models.....	5-31	
Installation.....	4-68	XR Models.....	5-32	
Hose Routing.....	4-69	Idler Pulley: XR Models Only.....	5-33	
Induction Module.....	4-69	Removal.....	5-33	
Canister Hose Routings: XL Models.....	4-70	Installation.....	5-34	
Canister Hose Routings: XR Models.....	4-70			
<b>DRIVE/TRANSMISSION</b>				
<b>5.1 FASTENER TORQUE VALUES</b>				
Fastener Torque Values in this Chapter.....	5-1	<b>5.8 TRANSMISSION</b>		
<b>5.2 SPECIFICATIONS: DRIVE</b>				
2009 Sportster Specifications.....	5-3	General.....	5-35	
<b>5.3 PRIMARY CHAIN ADJUSTER</b>				
General.....	5-4	<b>5.9 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL</b>		
Removal.....	5-4	General.....	5-37	
Primary Cover.....	5-4	Engine Removal and Disassembly.....	5-37	
Primary Chain Adjuster.....	5-6			
Installation.....	5-6			
Primary Chain Adjuster.....	5-6	<b>5.10 TRANSMISSION REMOVAL AND DISASSEMBLY</b>		
Primary Cover.....	5-7	Transmission Removal From Left Crankcase.....	5-41	
<b>5.4 CLUTCH RELEASE MECHANISM</b>			Mainshaft/Countershaft.....	5-44
Removal and Disassembly.....	5-9	Mainshaft Disassembly.....	5-45	
Cleaning, Inspection and Repair.....	5-10	Cleaning and Inspection.....	5-46	
Assembly and Installation.....	5-10	Countershaft Disassembly.....	5-46	
Cleaning and Inspection.....	5-46	Cleaning and Inspection.....	5-46	
<b>5.5 PRIMARY DRIVE AND CLUTCH: XL MODELS</b>				
General.....	5-12	<b>5.11 TRANSMISSION ASSEMBLY</b>		
Removal.....	5-14	Mainshaft Assembly.....	5-48	
Disassembly.....	5-14	Countershaft Assembly.....	5-48	
Inspection and Repair.....	5-15			
Assembly.....	5-16	<b>5.12 MAIN DRIVE GEAR AND BEARING</b>		
Installation.....	5-17	General.....	5-50	
<b>5.6 PRIMARY DRIVE AND CLUTCH: XR MODELS</b>			Removal.....	5-51
General.....	5-20	Main Drive Gear.....	5-51	
Removal.....	5-22	Main Drive Gear Ball Bearing.....	5-52	
Disassembly.....	5-22	Disassembly.....	5-52	
		Assembly.....	5-53	
		Installation.....	5-54	
		Main Drive Gear Bearing: XL Models.....	5-54	
		Main Drive Gear Bearing: XR Models.....	5-55	
		Main Drive Gear.....	5-55	
		Main Drive Gear Seal.....	5-57	
<b>5.13 TRANSMISSION RIGHT CASE BEARINGS</b>				
Removal.....	5-59			
Countershaft Needle Bearing.....	5-59			
Shifter Drum Bushing.....	5-59			
Installation.....	5-59			
Countershaft Needle Bearing.....	5-59			
Shifter Drum Bushing.....	5-59			

## TABLE OF CONTENTS

---

<b>5.14 TRANSMISSION LEFT CASE BEARINGS</b>	
Removal.....	5-60
Mainshaft and Countershaft Bearings.....	5-60
Shifter Drum Bushing.....	5-60
Installation.....	5-60
Mainshaft and Countershaft Bearings.....	5-60
Shift Drum Bushing.....	5-60
<b>5.15 TRANSMISSION INSTALLATION</b>	
General.....	5-61
Installation.....	5-61
Shifter Forks and Drum Assembly.....	5-62
Assembling Crankcases.....	5-63
Shifter Shaft Installation.....	5-65
<b>5.16 TRANSMISSION SPROCKET</b>	
Removal.....	5-67
All Models.....	5-67
XL Models.....	5-67
XR Models.....	5-67
All Models.....	5-68
Installation.....	5-68
All Models.....	5-68
XL Models.....	5-69
XR Models.....	5-70
All Models.....	5-70
<b>ELECTRICAL</b>	
<b>6.1 FASTENER TORQUE VALUES</b>	
Fastener Torque Values in this Chapter.....	6-1
<b>6.2 SPECIFICATIONS: ELECTRICAL</b>	
Specifications: 2009 Sportster Models.....	6-4
<b>6.3 VOLTAGE REGULATOR</b>	
General.....	6-5
Removal: XL Models.....	6-5
Installation: XL Models.....	6-6
Removal: XR Models.....	6-7
Installation: XR Models.....	6-8
<b>6.4 FUSES AND RELAYS</b>	
General.....	6-10
Replacing Fuses.....	6-10
Replacing Relays.....	6-10
<b>6.5 MAIN FUSE HOLDER</b>	
General.....	6-11
Replacement.....	6-11
<b>6.6 SPEEDOMETER: XL SINGLE GAUGE MODELS EXCEPT XL 883C/XL 1200C</b>	
Removal.....	6-12
Installation.....	6-12
<b>6.7 SPEEDOMETER AND TACHOMETER: XL DUAL GAUGE MODELS</b>	
Speedometer Removal.....	6-14
Speedometer Installation.....	6-14
Trip Odometer Reset Switch Replacement.....	6-15
Tachometer Removal.....	6-16
Tachometer Installation.....	6-16
<b>6.8 SPEEDOMETER: XL 883C/XL 1200C</b>	
Removal.....	6-17
Installation.....	6-18
<b>6.9 SPEEDOMETER AND TACHOMETER: XR MODELS</b>	
Speedometer Removal.....	6-19
Speedometer Installation.....	6-19
Trip Odometer Reset Switch Replacement.....	6-21
Tachometer Removal.....	6-21
Tachometer Installation.....	6-21
<b>6.10 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)</b>	
General.....	6-22
Testing.....	6-22
Removal.....	6-22
Installation.....	6-23
<b>6.11 BATTERY CABLES</b>	
Removal.....	6-24
Installation.....	6-25
<b>6.12 BATTERY TRAY</b>	
General.....	6-26
Removal.....	6-26
Installation.....	6-27
<b>6.13 STARTER</b>	
General.....	6-29
Wiring Diagrams.....	6-29
Paint Touch-Up.....	6-29
Removal.....	6-29
Field Coil Assembly.....	6-29
Disassembly.....	6-29
Inspection.....	6-29
Assembly.....	6-30
Drive Assembly.....	6-31
Disassembly.....	6-31
Inspection.....	6-31
Assembly.....	6-31
Installation.....	6-32
<b>6.14 STARTER SOLENOID</b>	
Solenoid Assembly.....	6-33
Disassembly.....	6-33
Assembly.....	6-33
Solenoid Plunger.....	6-33
Disassembly.....	6-33
Assembly.....	6-33
Solenoid Contacts.....	6-33
Disassembly.....	6-33

## TABLE OF CONTENTS

Assembly.....	6-34
<b>6.15 IGNITION SYSTEM</b>	
Troubleshooting.....	6-36
<b>6.16 IGNITION AND LIGHT SWITCH</b>	
General.....	6-37
Removal.....	6-37
Installation.....	6-37
<b>6.17 ELECTRONIC CONTROL MODULE (ECM)</b>	
General.....	6-39
Removal.....	6-39
XL Models.....	6-39
XR Models.....	6-39
Installation.....	6-39
XL Models.....	6-39
XR Models.....	6-39
<b>6.18 SPARK PLUG CABLES</b>	
General.....	6-41
Removal.....	6-41
Installation.....	6-42
<b>6.19 IGNITION COIL</b>	
General.....	6-44
Troubleshooting.....	6-44
Removal.....	6-44
Installation.....	6-45
<b>6.20 CHARGING SYSTEM</b>	
General.....	6-47
Alternator.....	6-47
Voltage Regulator.....	6-47
<b>6.21 HEADLAMP</b>	
Replacement: XL 883C/XL 1200C.....	6-48
Replacement: All Models Except XL 883C/XL 1200C.....	6-50
<b>6.22 INDICATOR LAMP MODULE</b>	
General.....	6-52
Preliminary Disassembly: All Models.....	6-52
Replacement: XL 1200L and XL 1200N.....	6-52
Replacement: XL 883C and XL 1200C.....	6-53
Replacement: All Other Models.....	6-53
Reassembling Vehicle: All Models.....	6-54
<b>6.23 TAIL LAMP: ALL MODELS EXCEPT XL 1200N</b>	
General.....	6-55
Bulb Replacement.....	6-55
Base Replacement.....	6-55
<b>6.24 TURN SIGNALS</b>	
General.....	6-58
Bulb Replacement.....	6-58
Front Housing Replacement.....	6-58
Rear Housing Replacement.....	6-59
Preliminary Vehicle Disassembly: All Models.....	6-59
Disconnect Wiring: All Models Except XL 1200N.....	6-59
Disconnect Wiring: XL 1200N.....	6-60
Remove and Disassemble Turn Signal Assembly: All But XR 1200.....	6-61
Reassemble and Install Turn Signal Assembly: All But XR 1200.....	6-62
Remove and Disassemble Turn Signal Assembly: XR 1200.....	6-63
Reassemble and Install Turn Signal Assembly: XR 1200.....	6-64
Connect Wiring: All Models Except XL 1200N.....	6-64
Connect Wiring: XL 1200N.....	6-64
Final Assembly: All Models.....	6-64
<b>6.25 LICENSE PLATE LAMP MODULE: XL 1200N</b>	
General.....	6-65
Removal (Domestic Only).....	6-65
Installation (Domestic Only).....	6-65
Removal (HDI Only).....	6-66
Installation (HDI Only).....	6-68
<b>6.26 REAR LIGHTING CONVERTER MODULE: XL 1200N (DOMESTIC ONLY)</b>	
General.....	6-70
Removal.....	6-70
Installation.....	6-71
<b>6.27 REAR STOP LAMP SWITCH</b>	
General.....	6-72
Replacement.....	6-72
<b>6.28 CRANK POSITION SENSOR (CKP)</b>	
General.....	6-74
Removal.....	6-74
Installation.....	6-74
<b>6.29 ALTERNATOR</b>	
Removal and Disassembly.....	6-75
Rotor.....	6-75
Stator.....	6-75
Cleaning and Inspection.....	6-76
Assembly and Installation.....	6-76
Stator.....	6-76
Rotor.....	6-77
Final Assembly.....	6-77
<b>6.30 VEHICLE SPEED SENSOR (VSS)</b>	
General.....	6-78
Removal.....	6-78
Installation.....	6-78
<b>6.31 NEUTRAL INDICATOR SWITCH</b>	
General.....	6-79
Replacement.....	6-79
<b>6.32 MAIN WIRING HARNESS</b>	
General.....	6-81
Removal.....	6-81
Installation.....	6-82

## TABLE OF CONTENTS

---

### 6.33 ELECTRICAL CADDIES

General.....	6-85
Voltage Regulator Caddy: XL Models Only.....	6-85
Removal.....	6-85
Installation.....	6-85
Wire Harness Caddy: XL Models.....	6-85
Removal.....	6-86
Installation.....	6-87
Wire Harness Caddy: XR Models.....	6-89
Removal.....	6-89
Installation.....	6-90

### 6.34 JIFFY STAND SWITCH: INTERNATIONAL MODELS

General.....	6-91
Removal.....	6-91
Installation.....	6-92

### 6.35 OPTIONAL SECURITY SIREN

General.....	6-93
Removal.....	6-93
Disassembly.....	6-93
Battery Replacement.....	6-94
Schedule.....	6-94
Battery Replacement: Early Style Siren.....	6-94
Battery Replacement: Late Style Siren.....	6-94
Assembly.....	6-95
Installation.....	6-95

### 6.36 OIL PRESSURE SWITCH

General.....	6-96
Removal.....	6-96
Installation.....	6-97

### 6.37 HORN

Troubleshooting.....	6-98
Voltage Test.....	6-98
Replacement: Models with Front Mounted Horn.....	6-98
Replacement: Models with Side Mounted Horn.....	6-98

### 6.38 MAIN FUSE

General.....	6-100
Removal.....	6-100
Installation.....	6-100

### 6.39 HANDLEBAR SWITCH ASSEMBLIES

General.....	6-101
Repair Procedures.....	6-101
Connectors.....	6-102

### 6.40 RIGHT HANDLEBAR SWITCHES

Removal.....	6-103
Disassembly.....	6-103
Switch Repair/Replacement.....	6-104
Upper Housing Repair.....	6-104
Lower Housing Repair.....	6-105
Turn-Right Signal Switch.....	6-105
Front Stoplight Switch.....	6-105
Assembly.....	6-105
Installation.....	6-106

### 6.41 LEFT HANDLEBAR SWITCHES

Removal.....	6-109
Disassembly.....	6-109
Switch Repair/Replacement.....	6-109
Upper Housing Repair.....	6-109
Lower Housing Repair.....	6-110
Turn-Left Signal Switch.....	6-110
Clutch Interlock Switch.....	6-110
Assembly.....	6-110
Installation.....	6-111

## APPENDIX A CONNECTOR REPAIR

---

### A.1 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....	A-1
General.....	A-1
Separating Pin and Socket Housings.....	A-1
Mating Pin and Socket Housings.....	A-1
Removing Terminals from Housing.....	A-1
Inserting Terminals into Housing.....	A-2
Preparing Wire Leads for Crimping.....	A-2
Crimping Terminals to Leads.....	A-3
Inspecting Crimped Terminals.....	A-4

### A.2 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....	A-5
General.....	A-5
Disassembly.....	A-5
Assembly.....	A-5

### A.3 DELPHI CONNECTORS

Delphi Connector Repair.....	A-6
General.....	A-6
Separating Pin and Socket Housings.....	A-6
Mating Pin and Socket Housings.....	A-6
Removing Socket Terminals.....	A-6
Installing Socket Terminals.....	A-6

### A.4 DELPHI MAIN FUSE HOUSING

Delphi Main Fuse Housing Repair.....	A-8
General.....	A-8
Removing Main Fuse.....	A-8
Installing Main Fuse.....	A-8
Removing Socket Terminals.....	A-8
Installing Socket Terminals.....	A-8

### A.5 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....	A-10
General.....	A-10
Separating Pin and Socket Housings.....	A-10
Mating Pin and Socket Housings.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Removing Pin Terminals.....	A-12
Installing Pin Terminals.....	A-12
Crimping Terminals.....	A-13

## TABLE OF CONTENTS

### A.6 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....	A-14
Preparing Wire Leads for Crimping.....	A-14
Crimping Terminal to Lead.....	A-14
Inspecting Crimps.....	A-14

### A.7 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....	A-15
Preparing Wire Leads For Crimping.....	A-15
Adjusting Crimper Tool.....	A-15
Crimping a Barrel Contact To Wire Lead.....	A-15
Inspecting Crimps.....	A-15

### A.8 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....	A-17
Preparing Wire Leads for Crimping.....	A-17
Crimping a Mini Terminal to Wire Lead.....	A-17
Inspecting Crimps.....	A-17

### A.9 MOLEX CONNECTORS

Molex Connector Repair.....	A-18
Separating Pin and Socket Housings.....	A-18
Mating Pin and Socket Housings.....	A-18
Removing Terminals.....	A-18
Installing Terminals.....	A-18
Crimp Terminal to Lead.....	A-19
Prepare Lead.....	A-19
Prepare Tool.....	A-19
Position Terminal in the Punch/Die.....	A-20
Insert Stripped Lead.....	A-20
Crimp Terminal to Lead.....	A-21
Inspect Crimp.....	A-21

### A.10 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....	A-22
General.....	A-22
Separating Pin and Socket Housings.....	A-22
Mating Pin and Socket Housings.....	A-22
Removing Socket Terminal.....	A-22
Inserting Socket Terminal.....	A-22

### A.11 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS

Fuse Block Repair.....	A-24
Removing Socket Terminals.....	A-24
Installing Socket Terminals.....	A-24
Crimping Terminals.....	A-24

### A.12 PACKARD 480 METRI-PACK CONNECTORS

480 Metri-Pack Connector Repair.....	A-25
General.....	A-25
Separating Pin and Socket Housings.....	A-25
Mating Pin and Socket Housings.....	A-25
Removing Socket Terminals.....	A-25
Installing Socket Terminals.....	A-25

### A.13 PACKARD 630 METRI-PACK CONNECTORS

630 Metri-Pack Connector Repair.....	A-26
General.....	A-26
Separating Pin and Socket Housings.....	A-26
Mating Pin and Socket Housings.....	A-26
Removing Socket Terminal.....	A-26
Installing Socket Terminal.....	A-26

### A.14 PACKARD METRI-PACK TERMINALS

Metri-Pack Terminal Crimps.....	A-27
Matching Terminal To Crimper.....	A-27
Preparing Wire Lead.....	A-27
Crimping Wire Core.....	A-27
Crimping Insulation/Seal.....	A-27
Inspecting Crimps.....	A-28

### A.15 PACKARD ECM CONNECTOR

Packard 100W Connector Repair.....	A-29
General.....	A-29
Separating Socket Housing From ECM.....	A-29
Mating Socket Housing To ECM.....	A-29
Removing Socket Terminal.....	A-29
Installing Socket Terminal.....	A-29
Crimping Terminals.....	A-29

### A.16 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-31
General.....	A-31
Separating Pin and Socket Housings.....	A-31
Mating Pin and Socket Housings.....	A-31
Removing Terminal.....	A-31
Installing Terminal.....	A-32
Preparing Wire Leads for Crimping.....	A-32
Crimping Terminals.....	A-32
Inspecting Crimps.....	A-32

### A.17 SEALED SPLICING CONNECTORS

Sealed Splice Connector Repair.....	A-34
General.....	A-34
Preparing Wire Leads.....	A-34
Splicing Wire Leads.....	A-34
Inspecting Seals.....	A-34

## APPENDIX B WIRING

### B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

### B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2009 Sportster Wiring Diagrams.....	B-4

## TABLE OF CONTENTS

---

### APPENDIX C CONVERSIONS

---

#### C.1 METRIC CONVERSION

Conversion Table.....C-1

#### C.2 FLUID CONVERSIONS

United States System.....C-2

Metric System.....C-2

British Imperial System.....C-2

#### C.3 TORQUE CONVERSIONS

United States System.....C-3

Metric System.....C-3

### APPENDIX D COMPENSATING SPROCKET

---

#### D.1 COMPENSATING SPROCKET

General.....D-1

Removal and Disassembly.....	D-1
Cleaning, Inspection and Repair.....	D-1
Sprocket Bearing Replacement.....	D-1
Removal.....	D-1
Installation.....	D-2
Assembly and Installation.....	D-2

### APPENDIX E GLOSSARY

---

#### E.1 GLOSSARY

Acronyms and Abbreviations.....E-1

### REFERENCE MATERIAL

---

TOOLS.....I

TORQUE VALUES.....IX

INDEX.....XXIX



TABLE OF CONTENTS

<b>SUBJECT</b>	<b>PAGE NO.</b>
1.1 FASTENER TORQUE VALUES.....	1-1
1.2 GENERAL.....	1-4
1.3 FUEL AND OIL.....	1-8
1.4 MAINTENANCE SCHEDULE.....	1-10
1.5 BULB REQUIREMENTS.....	1-14
1.6 ENGINE OIL AND FILTER.....	1-15
1.7 BRAKES.....	1-18
1.8 BLEEDING HYDRAULIC BRAKE SYSTEM.....	1-20
1.9 BRAKE PADS AND DISCS: XL MODELS.....	1-24
1.10 BRAKE PADS AND DISCS: XR MODELS.....	1-31
1.11 TIRES AND WHEELS.....	1-36
1.12 PRIMARY CHAIN.....	1-39
1.13 CLUTCH.....	1-41
1.14 TRANSMISSION LUBRICANT.....	1-43
1.15 REAR BELT AND SPROCKETS.....	1-45
1.16 REAR BELT DEFLECTION.....	1-47
1.17 BATTERY MAINTENANCE.....	1-52
1.18 SPARK PLUGS.....	1-58
1.19 STEERING HEAD BEARINGS.....	1-60
1.20 SHOCK ABSORBER ADJUSTMENT.....	1-62
1.21 REAR FORK BEARINGS.....	1-64
1.22 FRONT FORK OIL.....	1-65
1.23 CABLE AND CHASSIS LUBRICATION.....	1-72
1.24 AIR CLEANER: XL MODELS.....	1-73
1.25 AIR CLEANER: XR MODELS.....	1-75
1.26 EXHAUST SYSTEM.....	1-78
1.27 THROTTLE CONTROL.....	1-79
1.28 IDLE SPEED AND IGNITION TIMING.....	1-80
1.29 FUEL SUPPLY FILTER.....	1-81
1.30 ENGINE MOUNTS AND STABILIZER LINKS.....	1-82
1.31 HEADLAMP ALIGNMENT.....	1-83
1.32 FLUID AND LUBRICANT REQUIREMENTS.....	1-85
1.33 CRITICAL FASTENERS.....	1-86
1.34 STORAGE.....	1-88
1.35 TROUBLESHOOTING.....	1-90

## **NOTES**

---



# FASTENER TORQUE VALUES

## FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE VALUE	NOTES
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm 1.4 MAINTENANCE SCHEDULE, General
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm 1.24 AIR CLEANER: XL MODELS, Installation
Air filter element screw	40-60 <b>in-lbs</b>	4.5-6.8 Nm 1.4 MAINTENANCE SCHEDULE, General
Air filter element screw	40-60 <b>in-lbs</b>	4.5-6.8 Nm 1.24 AIR CLEANER: XL MODELS, Installation
Axle nut, rear	95-105 ft-lbs	129-142 Nm 1.16 REAR BELT DEFLECTION, Belt Deflection Adjustment
Axle nut, rear	95-105 ft-lbs	129-142 Nm 1.16 REAR BELT DEFLECTION, Wheel Alignment
Battery cable connector nut	55-75 <b>in-lbs</b>	6.2-8.5 Nm 1.17 BATTERY MAINTENANCE, Battery Installation and Connection
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm 1.4 MAINTENANCE SCHEDULE, General
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm 1.17 BATTERY MAINTENANCE, Battery Installation and Connection
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm 1.17 BATTERY MAINTENANCE, Battery Installation and Connection
Battery strap screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm 1.17 BATTERY MAINTENANCE, Battery Installation and Connection
Bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm 1.8 BLEEDING HYDRAULIC BRAKE SYSTEM, Bleeding Front Brake: All Models
Bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm 1.8 BLEEDING HYDRAULIC BRAKE SYSTEM, Bleeding Rear Brake: All Models
Brake hose clamp-to-rear fork screw	30-40 <b>in-lbs</b>	3.4-4.5 Nm 1.16 REAR BELT DEFLECTION, Belt Deflection Adjustment
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm 1.9 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm 1.10 BRAKE PADS AND DISCS: XR MODELS, Brake Pad Replacement: Rear
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm 1.9 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm 1.9 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm 1.10 BRAKE PADS AND DISCS: XR MODELS, Brake Pad Replacement: Rear
Brake pad pins, front caliper	131-173 <b>in-lbs</b>	14.8-19.6 Nm 1.10 BRAKE PADS AND DISCS: XR MODELS, Brake Pad Replacement: Front
Caliper pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm 1.9 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front
Captive screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm 1.8 BLEEDING HYDRAULIC BRAKE SYSTEM, Bleeding Front Brake: All Models
Captive screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm 1.9 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front
Chain tensioner nut	20-25 ft-lbs	27.1-33.9 Nm 1.4 MAINTENANCE SCHEDULE, General
Clutch inspection cover screw	84-108 <b>in-lbs</b>	9.5-12.2 Nm 1.4 MAINTENANCE SCHEDULE, General
Clutch inspection cover screw	84-108 <b>in-lbs</b>	9.5-12.2 Nm 1.13 CLUTCH, Adjustment

FASTENER	TORQUE VALUE		NOTES
Clutch inspection cover screw	84-108 <b>in-lbs</b>	9.5-12.2 Nm	1.14 TRANSMISSION LUBRICANT, Transmission Lubrication: Sportster Models
Footrest mount fastener: XR models	45-50 ft-lb	61.0-67.8 Nm	1.13 CLUTCH, Adjustment
Footrest mount fastener: XR models	45-50 ft-lb	61.0-67.8 Nm	1.14 TRANSMISSION LUBRICANT, Transmission Lubrication: Sportster Models
Fork cap: XR models	21-29 ft-lbs	29-39 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XR Models
Fork cap: XR models	21-29 ft-lbs	29-39 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XR Models
Fork cap to retainer nut: XR models	150-195 <b>in-lbs</b>	17-22 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XR Models
Fork cap to retainer nut: XR models	150-195 <b>in-lbs</b>	17-22 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XR Models
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XL Models
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XL Models
Fork stem pinch screw	30-35 ft-lbs	40.7-47.5 Nm	1.19 STEERING HEAD BEARINGS, Adjustment
Front fork lower bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	1.19 STEERING HEAD BEARINGS, Adjustment
Front fork oil drain screw	13-17 <b>in-lbs</b>	1.5-2.0 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XL Models
Front master cylinder cover screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.10 BRAKE PADS AND DISCS: XR MODELS, Brake Pad Replacement: Front
Front master cylinder reservoir cover screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.4 MAINTENANCE SCHEDULE, General
Fuel pump module mounting screw	40-45 <b>in-lbs</b>	4.5-5.1 Nm	1.4 MAINTENANCE SCHEDULE, General
Fuel pump module mounting screw	40-45 <b>in-lbs</b>	4.5-5.1 Nm	1.29 FUEL SUPPLY FILTER, Installation
Handlebar clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	1.4 MAINTENANCE SCHEDULE, General
Handlebar switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	1.4 MAINTENANCE SCHEDULE, General
Handlebar switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	1.27 THROTTLE CONTROL, Cable Inspection and Lubrication
Headlamp Allen head capscrew	30-35 ft-lbs	40.7-47.5 Nm	1.31 HEADLAMP ALIGNMENT, Headlamp Adjustment: Sportster Models
Headlamp clamp nut	120-240 <b>in-lbs</b>	14-27 Nm	1.31 HEADLAMP ALIGNMENT, Headlamp Adjustment: Sportster Models
Inner fork nut, right: XR models	69-83 ft-lbs	93-113 Nm	1.22 FRONT FORK OIL, Changing Fork Oil: XR Models/Hand tighten. Then tighten to torque.
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	1.4 MAINTENANCE SCHEDULE, General
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	1.14 TRANSMISSION LUBRICANT, Transmission Lubrication: Sportster Models/Apply LOCTITE THREADLOCKER 565 (white).
Primary chain inspection cover	84-120 <b>in-lbs</b>	9.5-13.6 Nm	1.12 PRIMARY CHAIN, Adjustment
Primary chain inspection cover screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm	1.4 MAINTENANCE SCHEDULE, General
Primary chain lock nut	20-25 ft-lbs	27.1-33.9 Nm	1.12 PRIMARY CHAIN, Adjustment
Rider footrest support bracket mounting screw	45-50 ft-lbs	61-68 Nm	1.13 CLUTCH, Adjustment
Rider footrest support bracket mounting screw	45-50 ft-lbs	61-68 Nm	1.14 TRANSMISSION LUBRICANT, Transmission Lubrication: Sportster Models
Shift linkage pivot bolt	10-15 ft-lbs	13.6-20.3 Nm	1.13 CLUTCH, Adjustment

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**