



**2011 Harley-Davidson Touring Models
Service Manual**

99483-11

©2010 H-D.

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings (Pre-Formed Packings).....	1-4
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Exhaust System Leakage.....	1-5
Cleaning.....	1-5
Part Protection.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-5
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

1.4 BULB REQUIREMENTS

General.....1-9

1.5 MAINTENANCE SCHEDULE

General.....1-11

1.6 ENGINE OIL AND FILTER

Checking Oil Level.....	1-15
Oil Level Cold Check.....	1-15
Oil Level Hot Check.....	1-15
Changing Oil and Oil Filter.....	1-16

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-18
Installation.....	1-18
Exhaust System Leak Check.....	1-18

1.8 TIRES AND WHEELS

General.....	1-20
Tires.....	1-20
Tire Replacement.....	1-20
Inspection.....	1-20
When To Replace Tires.....	1-20
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21
Identify Wheel Spoke Groups.....	1-21
Wheel Spoke Adjustment.....	1-21

1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-23
Changing Primary Chaincase Lubricant.....	1-23

1.10 TRANSMISSION LUBRICANT

Transmission Lubrication.....	1-25
General.....	1-25
Check Lubricant Level.....	1-25
Changing Transmission Fluid.....	1-25

1.11 CLUTCH

Adjustment.....	1-27
-----------------	------

1.12 DRIVE BELT AND SPROCKETS

General.....	1-29
Cleaning.....	1-29
Inspection.....	1-29
Sprockets.....	1-29
Drive Belt.....	1-29
Checking Drive Belt Deflection.....	1-31
Setting Belt Deflection.....	1-31
Adjustment.....	1-31
Assembly.....	1-33

1.13 COMPENSATOR SPROCKET ISOLATOR

Inspection.....	1-34
-----------------	------

1.14 CABLE AND CHASSIS LUBRICATION

General.....	1-35
Steering Head Bearings.....	1-35
Jiffy Stand.....	1-35
Miscellaneous Lubrication.....	1-35
Hinges, Latches, Etc.....	1-35

1.15 BRAKES

Fluid Inspection.....	1-36
-----------------------	------

1.16 BRAKE PADS AND DISCS

Inspection.....	1-37
Brake Pads.....	1-37
Brake Disc Thickness.....	1-37
Brake Disc Lateral Runout.....	1-37
Brake Pad Replacement.....	1-37
Rear Brake Caliper.....	1-37
Front Brake Calipers.....	1-39

TABLE OF CONTENTS

1.17 SPARK PLUGS

Inspection.....	1-41
Spark Plug Cable Inspection.....	1-41

1.18 FRONT FORK OIL

Replacing Fork Oil.....	1-43
-------------------------	------

1.19 SUSPENSION ADJUSTMENTS

General.....	1-44
--------------	------

1.20 STEERING HEAD BEARINGS

Lubrication.....	1-46
Checking.....	1-46
Adjustment.....	1-47

1.21 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-48
Headlamp Adjustment: Single Headlamp Models.....	1-48
Headlamp Adjustment: Dual Headlamp Models.....	1-49
Auxiliary Lamp Alignment.....	1-49

1.22 CRITICAL FASTENERS

Inspection.....	1-51
Checking Torques on Fasteners.....	1-51

1.23 BATTERY MAINTENANCE

General.....	1-53
Cleaning and Inspection.....	1-54
Battery.....	1-54
Disconnection and Removal.....	1-54
Installation and Connection.....	1-54
Voltmeter Test.....	1-55
Voltmeter Test.....	1-55
Charging Battery.....	1-55
Safety Precautions.....	1-55
Using a Battery Charger.....	1-56
Storage.....	1-57

1.24 ENGINE MOUNTS

Inspection.....	1-58
General.....	1-58
Stabilizer Link.....	1-58
Front Engine Mount.....	1-58
Rear Frame Fasteners.....	1-58

1.25 STORAGE

General.....	1-59
Placing in Storage.....	1-59
Removal from Storage.....	1-59

1.26 TROUBLESHOOTING

General.....	1-61
Engine.....	1-61
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-61
Engine Turns Over But Does Not Start.....	1-61
Starts Hard.....	1-61
Starts But Runs Irregularly or Misses.....	1-61
A Spark Plug Fouls Repeatedly.....	1-62
Pre-ignition or Detonation (Knocks or Pings).....	1-62

Overheating.....	1-62
Valve Train Noise.....	1-62
Excessive Vibration.....	1-62
Check Engine Light Illuminates During Operation.....	1-62
Lubrication System.....	1-62
Oil Does Not Return To Oil Reservoir.....	1-62
Engine Uses Too Much Oil Or Smokes Excessively.....	1-62
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-62
Low Oil Pressure.....	1-63
High Oil Pressure.....	1-63
Electrical System.....	1-63
Alternator Does Not Charge.....	1-63
Alternator Charge Rate Is Below Normal.....	1-63
Speedometer Operates Erratically.....	1-63
Transmission.....	1-63
Shifts Hard.....	1-63
Jumps Out Of Gear.....	1-63
Clutch Slips.....	1-63
Clutch Drags Or Does Not Release.....	1-63
Clutch Chatters.....	1-63
Handling.....	1-63
Irregularities.....	1-63
Brakes.....	1-64
Brake Does Not Hold Normally.....	1-64

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS

Specifications.....	2-6
Chassis Specifications.....	2-6
Tire Specifications.....	2-7

2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

Vehicle Identification Number: Touring Models.....	2-9
--	-----

2.4 FRONT WHEEL

Removal.....	2-11
Cleaning and Inspection.....	2-12
Installation.....	2-12

2.5 REAR WHEEL

Removal.....	2-14
Cleaning and Inspection.....	2-15
Installation.....	2-16

2.6 REAR WHEEL COMPENSATOR

Isolator Replacement.....	2-18
Removal.....	2-18
Installation.....	2-18
Sprocket Bearing Replacement.....	2-18
Removal.....	2-18
Installation.....	2-18

2.7 WHEEL LACING: FRONT RIM

Wheel Lacing: Angle Flange Hub.....	2-21
-------------------------------------	------

TABLE OF CONTENTS

2.8 WHEEL LACING: 16 INCH REAR RIM

Wheel Lacing: 16 In. Rear Wheel.....	2-23
--------------------------------------	------

2.9 CHECKING AND TRUING WHEELS

General.....	2-26
Checking Wheel Runout.....	2-26
Checking Lateral Runout.....	2-26
Checking Radial Runout.....	2-26
Laced Wheel Rim Offset.....	2-26
Truing Laced Wheels.....	2-28
Radial Runout.....	2-28
Lateral Runout.....	2-29

2.10 SEALED WHEEL BEARINGS

Inspection.....	2-30
Removal.....	2-30
Installation.....	2-31

2.11 TIRES

General.....	2-33
Removal.....	2-33
Cleaning, Inspection and Repair.....	2-34
Installation.....	2-34
Tube Type Tires.....	2-34
Tubeless Tires.....	2-34
Checking Tire Runout.....	2-35
Lateral Runout.....	2-35
Radial Runout.....	2-35
Wheel Balancing.....	2-36
Weights.....	2-36

2.12 FRONT BRAKE MASTER CYLINDER

General.....	2-37
Removal and Disassembly.....	2-37
Removal.....	2-37
Disassembly.....	2-37
Cleaning and Inspection.....	2-39
Assembly and Installation.....	2-39
Assembly.....	2-39
Installation.....	2-39
Front Brake Line: Non-ABS Equipped.....	2-39
Removal.....	2-39
Installation.....	2-40

2.13 FRONT BRAKE CALIPER

Removal.....	2-42
Installation.....	2-42

2.14 REAR BRAKE MASTER CYLINDER

General.....	2-43
Removal and Disassembly.....	2-43
Removal.....	2-43
Disassembly.....	2-44
Cleaning and Inspection.....	2-46
Assembly and Installation.....	2-46
Assembly.....	2-46
Installation.....	2-46
Rear Brake Line: Non-ABS Equipped.....	2-46
Removal.....	2-46
Installation.....	2-48

2.15 REAR BRAKE CALIPER

Removal.....	2-49
Installation.....	2-49

2.16 BLEEDING BRAKES

General.....	2-50
Procedure.....	2-50

2.17 FRONT FORK

Changing Fork Oil.....	2-52
Draining.....	2-52
Filling.....	2-52
Removal.....	2-53
Disassembly.....	2-53
Cleaning and Inspection.....	2-55
Assembly.....	2-56
Installation.....	2-56

2.18 STEERING HEAD BEARINGS

Removal.....	2-58
Inspection.....	2-59
Installation.....	2-60

2.19 REAR AIR SUSPENSION

Check for Air Leaks.....	2-61
Compression Fitting.....	2-61
Air Valve Assembly.....	2-61
Air Tubes.....	2-61

2.20 REAR SHOCK ABSORBERS

Removal.....	2-63
Cleaning and Inspection.....	2-63
Disassembly and Assembly.....	2-63
Installation.....	2-63

2.21 REAR FORK

Removal.....	2-64
Disassembly and Assembly.....	2-64
Bearing Removal.....	2-64
Bearing Installation.....	2-65
Pivot Shaft/Mount Disassembly.....	2-65
Installation.....	2-66

2.22 CLUTCH CABLE

Removal.....	2-67
Installation.....	2-67

2.23 HANDLEBARS

Adjustment.....	2-70
Removal.....	2-70
Installation.....	2-71
Left Handgrip.....	2-72
Removal.....	2-72
Installation.....	2-72
Heated Handgrips.....	2-72
Remove Left Handgrip.....	2-72
Install Left Handgrip.....	2-73
Remove Right Handgrip.....	2-73
Install Right Handgrip.....	2-73
Rubber Mounts.....	2-73

TABLE OF CONTENTS

Removal.....	2-73	Tether Brackets.....	2-87
Installation.....	2-74	Removing Tether Bracket from Tour-Pak.....	2-87
2.24 MIRRORS		Removing Tether Bracket from Tour-Pak Lid.....	2-87
All Models Except FLHX.....	2-75	Installing Tether Bracket on Tour-Pak Lid.....	2-87
Removal.....	2-75	Installing Tether Bracket on Tour-Pak.....	2-87
Installation.....	2-75	Luggage Rack.....	2-87
FLHX.....	2-75	2.30 TOUR-PAK LIGHTS	
Removal.....	2-75	General.....	2-88
Installation.....	2-75	Side Marker Lights (if equipped).....	2-88
2.25 SEAT		Removal.....	2-88
Seat: Models without Tour-Pak.....	2-76	Installation.....	2-88
Removal.....	2-76	Tour-Pak Lights Harness.....	2-88
Installation.....	2-76	Removal.....	2-88
Seat: Models with Tour-Pak.....	2-76	Installation.....	2-88
Removal.....	2-76	Wrap-Around Lights (if equipped).....	2-89
Installation.....	2-77	Bulb Replacement.....	2-89
Seat: Road King Models.....	2-77	Removal.....	2-89
Removal.....	2-77	Installation.....	2-90
Installation.....	2-77	2.31 TOUR-PAK BACKREST	
Seat Retention Nut Replacement.....	2-77	Passenger Backrest.....	2-91
Seat Bumper.....	2-78	Removal.....	2-91
2.26 SADDLEBAGS		Installation.....	2-91
Removal.....	2-79	Rubber Isolators.....	2-91
Installation.....	2-79	Removal.....	2-91
2.27 SADDLEBAG SERVICE		Installation.....	2-91
Saddlebag Hardware.....	2-80	Passenger Backrest Flap.....	2-92
Removal.....	2-80	Removal.....	2-92
Installation.....	2-81	Installation.....	2-92
Saddlebag Guard/Support Rail.....	2-81	2.32 TOUR-PAK SPEAKER BOX	
Removal.....	2-81	Speaker Box.....	2-93
Installation.....	2-81	Removal.....	2-93
2.28 TOUR-PAK		Installation.....	2-93
Removal/Installation.....	2-83	2.33 LOWER FAIRING AND ENGINE GUARD	
Removal.....	2-83	Lower Fairing.....	2-94
Installation.....	2-83	Removal.....	2-94
Adjustment.....	2-84	Disassembly.....	2-94
Luggage Rack/Tour-Pak Support.....	2-84	Assembly.....	2-95
Removal.....	2-84	Installation.....	2-95
Assembly and Installation.....	2-84	Serrated Washer Replacement.....	2-95
2.29 TOUR-PAK SERVICE		Removal.....	2-95
Lockset.....	2-85	Installation.....	2-95
Removal.....	2-85	Engine Guard.....	2-95
Installation.....	2-85	Removal.....	2-95
Hinges.....	2-85	Installation.....	2-95
Removal.....	2-85	2.34 UPPER FAIRING AND WINDSHIELD: FORK MOUNTED FAIRING MODELS	
Installation.....	2-85	Outer Fairing and Windshield.....	2-97
Latches/Lockset Catch.....	2-86	Removal.....	2-97
Removal.....	2-86	Installation.....	2-97
Installation.....	2-86	2.35 FAIRING CAP: FORK MOUNTED FAIRING MODELS	
Catches.....	2-86	Fairing Cap.....	2-98
Removal.....	2-86	Removal.....	2-98
Installation.....	2-86	Installation.....	2-98
Tether.....	2-86		
Removal.....	2-86		
Installation.....	2-86		

2.36 INNER FAIRING: FORK MOUNTED FAIRING MODELS

Removal.....2-99
Installation.....2-101

2.37 AIR DEFLECTORS

Air Deflectors.....2-103
Removal.....2-103
Installation.....2-103
Mid-Frame Air Deflectors.....2-103
Removal.....2-103
Installation.....2-103

2.38 UPPER FAIRING AND WINDSHIELD: FRAME MOUNTED FAIRING MODELS

Windshield.....2-104
Removal.....2-104
Installation.....2-104
Outer Fairing.....2-104
Removal.....2-104
Installation.....2-105

2.39 INSTRUMENT BEZEL: FRAME MOUNTED FAIRING MODELS

Bezel.....2-107
Removal.....2-107
Installation.....2-108

2.40 INSTRUMENT NACELLE: FRAME MOUNTED FAIRING MODELS

Instrument Nacelle.....2-109
Removal.....2-109
Installation.....2-110

2.41 INNER FAIRING: FRAME MOUNTED FAIRING MODELS

Removal.....2-111
Disassembly.....2-112
Installation.....2-113
Outer Fairing.....2-113
Inner Fairing.....2-113

2.42 GLOVE BOX DOOR AND HINGE: FRAME MOUNTED FAIRING MODELS

Glove Box Door and Hinge.....2-115
Removal.....2-115
Installation.....2-115

2.43 WINDSHIELD: ROAD KING MODELS

Windshield.....2-116
Removal.....2-116
Installation.....2-116
Windshield Window.....2-116
Removal.....2-116
Installation.....2-117

2.44 HEADLAMP NACELLE: ROAD KING MODELS

Removal.....2-119
Installation.....2-120

2.45 FRONT FENDER

Removal.....2-121
Installation.....2-121

2.46 REAR FENDER

Removal.....2-122
Fender Repair.....2-123
Mounting Hardware.....2-123
Lights and Harnesses.....2-123
Installation.....2-123

2.47 REAR FASCIA

Removal.....2-125
Installation.....2-125
Stud Plate.....2-125
Removal.....2-125
Installation.....2-125
Rear Fascia Lamp.....2-125
Removal.....2-125
Installation.....2-125

2.48 REAR FRAME

Rear Frame.....2-126
Removal.....2-126
Installation.....2-127
Thread Repair.....2-127

2.49 FOOTBOARDS AND FOOTRESTS

Rider Footboards.....2-128
Removal.....2-128
Installation.....2-128
Disassembly.....2-128
Assembly.....2-128
Passenger Footboard.....2-129
Removal.....2-129
Disassembly.....2-129
Assembly.....2-129
Installation.....2-129
Passenger Footrest: FLHX, FLTRX.....2-129
Removal.....2-129
Disassembly.....2-129
Assembly.....2-130
Installation.....2-130

2.50 JIFFY STAND

General.....2-131
Leg Removal.....2-131
Leg Installation.....2-131
Jiffy Stand Bracket.....2-132
Removal.....2-132
Installation.....2-132
Jiffy Stand Interlock Sensor.....2-132
Removal.....2-132
Installation.....2-133

TABLE OF CONTENTS

2.51 FRONT ENGINE MOUNT

Removal.....	2-134
Installation.....	2-134

ENGINE

3.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	3-1
---	-----

3.2 SPECIFICATIONS

Specifications.....	3-3
---------------------	-----

3.3 SERVICE WEAR LIMITS

General.....	3-5
--------------	-----

3.4 ENGINE OIL FLOW

Oil Feed.....	3-7
Top End.....	3-7
Bottom End.....	3-9
Oil Return.....	3-11
Oil Cooler Operation.....	3-12

3.5 OIL PUMP OPERATION

General.....	3-13
Operation.....	3-13

3.6 BREATHER OPERATION

General.....	3-15
--------------	------

3.7 OIL PRESSURE

Oil Pressure Indicator Lamp.....	3-16
Checking Oil Pressure.....	3-16

3.8 TROUBLESHOOTING

Diagnosing Valve Train Noise.....	3-18
Compression Test.....	3-18
Cylinder Leakdown Test.....	3-19
Diagnosing Smoking Engine or High Oil Consumption.....	3-19
Check Prior To Cylinder Head Removal.....	3-19
Check After Cylinder Head Removal.....	3-19

3.9 OIL COOLER

Removal.....	3-20
Installation.....	3-20

3.10 OIL COOLER ADAPTER

Removal.....	3-21
Disassembly.....	3-21
Assembly.....	3-21
Installation.....	3-21

3.11 HOW TO USE THIS SECTION

Top End Repair.....	3-23
Bottom End Repair.....	3-23
Typical Symptoms.....	3-23

3.12 TOP END SERVICE

Engine in Chassis.....	3-24
Engine Removed from Chassis.....	3-25

3.13 CAM COMPARTMENT SERVICE

Engine in Chassis.....	3-26
Engine Removed From Chassis.....	3-27

3.14 STRIPPING MOTORCYCLE FOR SERVICE

Procedure.....	3-28
Cam Compartment Service Only.....	3-28
Top End Service.....	3-28

3.15 ASSEMBLING MOTORCYCLE AFTER SERVICE

Procedure.....	3-29
After Top End Service.....	3-29
After Cam Compartment Service.....	3-29

3.16 REMOVING ENGINE FROM CHASSIS

Procedure.....	3-30
----------------	------

3.17 INSTALLING ENGINE IN CHASSIS

Procedure.....	3-31
----------------	------

3.18 TOP END OVERHAUL: DISASSEMBLY

General.....	3-32
Rocker Covers.....	3-32
Rocker Arm Support Plate.....	3-32
Push Rods, Lifters and Covers.....	3-34
Cylinder Head.....	3-35
Cylinder.....	3-36
Piston.....	3-36

3.19 BREATHER ASSEMBLY

Disassembly.....	3-38
Early Production.....	3-38
Late Production.....	3-38
Cleaning and Inspection.....	3-38
Assembly.....	3-38
Early Production.....	3-38
Late Production.....	3-38

3.20 ROCKER ARM SUPPORT PLATE

Disassembly.....	3-40
Cleaning and Inspection.....	3-40
Inspection.....	3-40
Rocker Shaft Fit.....	3-40
Rocker Arm Shaft to Bushing.....	3-41
Replace Rocker Arm Bushings.....	3-41
Assembly.....	3-42

3.21 PUSH RODS, LIFTERS AND COVERS

Disassembly.....	3-43
Cleaning and Inspection.....	3-43
Lifter Inspection.....	3-44
Assembly.....	3-44

3.22 CYLINDER HEAD

Disassembly.....	3-45
Cleaning.....	3-46
Inspection.....	3-46

TABLE OF CONTENTS

Cylinder Head.....	3-46
Valve Guides.....	3-47
Valves.....	3-47
Valve Springs.....	3-47
Tapered Keepers.....	3-47
Valve Seats.....	3-47
Valve Guide Replacement.....	3-47
Removal.....	3-47
Installation.....	3-48
Valve and Seat Refacing.....	3-51
Assembly.....	3-53

3.23 CYLINDER

Cleaning.....	3-56
Inspection.....	3-56
Deglazing Cylinder.....	3-58
Boring and Honing Cylinder.....	3-58

3.24 PISTON

Disassembly.....	3-60
Piston Rings.....	3-60
Cleaning.....	3-60
Inspection.....	3-60
Assembly.....	3-62
Checking Piston Ring Gap.....	3-62
Installing Piston Rings.....	3-62

3.25 TOP END OVERHAUL: ASSEMBLY

General.....	3-64
Piston.....	3-64
Cylinder.....	3-65
Cylinder Head.....	3-67
Push Rods, Lifters and Covers.....	3-71
Rocker Arm Support Plate.....	3-72
Breather and Rocker Cover.....	3-73

3.26 CAM COMPARTMENT AND COMPONENTS

Cam Support Plate and Cover Removal.....	3-75
Prepare Engine.....	3-75
Cam Chain and Sprockets Removal.....	3-75
Cam Support Plate Removal.....	3-76
Cam Support Plate Cleaning and Inspection.....	3-77
Oil Pressure Valve.....	3-77
Cam Support Plate.....	3-77
Camshafts.....	3-77
Removal.....	3-77
Installation.....	3-78
Oil Pressure Relief Valve.....	3-79
Removal.....	3-79
Inspection.....	3-79
Installation.....	3-79
Cam Needle Bearings.....	3-80
Removal.....	3-80
Installation.....	3-81
Cam Support Plate and Cover Installation.....	3-83

3.27 OIL PUMP

Removal.....	3-87
Cleaning and Inspection.....	3-87
Installation.....	3-88

3.28 CRANKCASE DISASSEMBLY AND REPAIR

Crankcase Disassembly.....	3-90
Cleaning and Inspection.....	3-90
Right Crankcase Half.....	3-91
Main Bearing Removal.....	3-91
Main Bearing Installation.....	3-91
Piston Jets Removal.....	3-92
Piston Jets Installation.....	3-92
Left Crankcase Half.....	3-92
Main Bearing Removal.....	3-92
Main Bearing Installation.....	3-94
Sprocket Shaft Bearing Inner Race.....	3-94
Removal.....	3-94
Installation.....	3-95
Cylinder Studs.....	3-97
Removal.....	3-97
Installation.....	3-97
Pipe Plug and Oil Fittings.....	3-98
Removal.....	3-98
Installation.....	3-98

3.29 FLYWHEEL AND CONNECTING RODS

Inspection.....	3-99
Measuring Crankshaft Runout.....	3-99
Crankshaft Removed.....	3-99

3.30 CRANKCASE ASSEMBLY

Crankcase Assembly.....	3-101
-------------------------	-------

3.31 OIL PAN

Removal.....	3-103
Installation.....	3-103

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	4-1
---	-----

4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....	4-3
---------------------	-----

4.3 ELECTRONIC FUEL INJECTION (EFI)

Troubleshooting.....	4-4
----------------------	-----

4.4 AIR CLEANER ASSEMBLY

Removal.....	4-5
Installation.....	4-6

4.5 FUEL TANK

Removal.....	4-8
Purge and Disconnect Fuel Line.....	4-8
Remove Tank.....	4-8
Installation.....	4-8
Evaporative Emissions Tube: Non-CA Models.....	4-9
Removal.....	4-9
Installation.....	4-9
Fuel Supply Check Valve/Tube.....	4-9
Removal.....	4-9
Installation.....	4-10

TABLE OF CONTENTS

4.6 FUEL TANK TOP PLATE

Removal.....	4-11
Installation.....	4-12

4.7 FUEL FILTER

Removal.....	4-13
Installation.....	4-13

4.8 FUEL PRESSURE REGULATOR

Removal.....	4-14
Installation.....	4-14

4.9 FUEL LEVEL SENDER

Removal.....	4-15
Installation.....	4-15

4.10 TWIST GRIP SENSOR

Removal.....	4-16
Installation.....	4-17
Twist Grip Sensor Jumper Harness.....	4-18
Removal.....	4-18
Installation.....	4-18

4.11 THROTTLE CONTROL ACTUATOR (TCA)

General.....	4-19
--------------	------

4.12 ENGINE TEMPERATURE SENSOR (ET)

Removal.....	4-20
Installation.....	4-20

4.13 INDUCTION MODULE

Removal.....	4-21
Installation.....	4-22

4.14 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE SENSOR (TMAP)

General.....	4-23
Removal.....	4-23
Installation.....	4-23

4.15 OXYGEN SENSORS (O2)

General.....	4-24
Removal.....	4-24
Installation.....	4-25

4.16 FUEL INJECTORS

General.....	4-26
Removal.....	4-26
Installation.....	4-26

4.17 FUEL PUMP

General.....	4-28
Removal.....	4-28
Installation.....	4-28
Fuel Pump and Fuel Level Sender Wire Harness.....	4-29
Removal.....	4-29
Installation.....	4-29

4.18 FUEL PRESSURE TEST

General.....	4-30
Testing.....	4-30

4.19 EXHAUST SYSTEM

Mufflers.....	4-32
Removal.....	4-32
Installation.....	4-32
System Removal.....	4-32
System Installation.....	4-33

4.20 ACTIVE EXHAUST (HDI)

Exhaust Valve Actuator.....	4-35
Removal.....	4-35
Installation.....	4-35
Exhaust Valve Actuator Cable.....	4-35
Removal.....	4-35
Installation.....	4-35
Active Exhaust Valve.....	4-35
General.....	4-35

4.21 INTAKE LEAK TEST

General.....	4-36
Leak Tester.....	4-36
Parts List.....	4-36
Tester Assembly.....	4-36
Tester Adjustment.....	4-36
Procedure.....	4-36

4.22 EVAPORATIVE EMISSIONS CONTROL SYSTEM

General.....	4-38
Vapor Valve.....	4-38
Fuel Vapor Vent Tube.....	4-39
Removal.....	4-39
Installation.....	4-39
Canister-to-Solenoid Tube.....	4-39
Removal.....	4-39
Installation.....	4-39
Solenoid-to-Induction Module Tube.....	4-39
Removal.....	4-39
Installation.....	4-39
Purge Solenoid.....	4-40
Removal.....	4-40
Installation.....	4-40
Charcoal Canister.....	4-40
Removal.....	4-40
Installation.....	4-40

DRIVE

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	5-1
---	-----

5.2 SPECIFICATIONS: DRIVE

Specifications.....	5-2
---------------------	-----

5.3 PRIMARY CHAINCASE COVER

General.....	5-3
Removal.....	5-3

TABLE OF CONTENTS

Installation.....	5-3
5.4 DRIVE COMPONENTS	
Removal.....	5-5
Installation.....	5-7
5.5 PRIMARY CHAINCASE HOUSING	
Removal.....	5-10
Inspection.....	5-10
Mainshaft Bearing and Lip Seal.....	5-10
Removal.....	5-10
Installation.....	5-10
Mainshaft Bearing Inner Race.....	5-11
Removal.....	5-11
Installation.....	5-12
Shifter Shaft Bushings.....	5-12
Installation.....	5-12
5.6 CLUTCH	
Removal and Installation.....	5-14
Clutch Pack Only.....	5-14
Partial Disassembly.....	5-14
Cleaning And Inspection.....	5-14
Assembly.....	5-15
Clutch Pack and Bearing.....	5-16
Complete Disassembly.....	5-16
Assembly.....	5-17
5.7 TRANSMISSION SPROCKET	
Removal.....	5-19
Cleaning and Inspection.....	5-19
Installation.....	5-19
5.8 DRIVE BELT	
Removal and Adjustment.....	5-21
Adjustment.....	5-21
Removal.....	5-21
Installation.....	5-21
TRANSMISSION	
6.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	6-1
6.2 SPECIFICATIONS: TRANSMISSION	
Specifications.....	6-2
Service Wear Limits.....	6-2
6.3 TRANSMISSION	
Power Flow.....	6-3
Neutral.....	6-3
1st Gear.....	6-3
2nd Gear.....	6-3
3rd Gear.....	6-3
4th Gear.....	6-3
5th Gear.....	6-3
6th Gear.....	6-3
6.4 SHIFTER LINKAGE	
Shifter Rod.....	6-5

6.5 CLUTCH RELEASE COVER	
Removal and Disassembly.....	6-6
Cleaning and Inspection.....	6-7
Assembly and Installation.....	6-7

6.6 TRANSMISSION ASSEMBLY	
Removal.....	6-8
Disassembly.....	6-9
Shifter Cam/Shifter Forks.....	6-9
Mainshaft.....	6-11
Countershaft.....	6-13
Removing Side Door Bearings.....	6-14
Cleaning and Inspection.....	6-15
Assembly.....	6-15
Installing Side Door Bearings.....	6-15
Countershaft.....	6-15
Mainshaft.....	6-16
Shifter Cam/Shifter Forks.....	6-16
Installation.....	6-19

6.7 MAIN DRIVE GEAR AND BEARING	
Removal.....	6-21
Cleaning and Inspection.....	6-22
Needle Bearing Replacement.....	6-23
Mainshaft Seal Replacement.....	6-24
Installation.....	6-25
Installing Main Drive Gear Bearing.....	6-25
Installing Main Drive Gear.....	6-25
Installing Main Drive Gear Large Seal.....	6-26

6.8 TRANSMISSION CASE	
Removal.....	6-28
Installation.....	6-28
Disassembly.....	6-29
Shifter Arm Assembly.....	6-29
Cleaning and Inspection.....	6-29
Assembly.....	6-30
Countershaft Needle Bearing Replacement.....	6-30
Shifter Pawl Lever Assembly.....	6-30

ELECTRICAL

7.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	7-1
7.2 SPECIFICATIONS: ELECTRICAL	
Specifications.....	7-5
7.3 VOLTAGE REGULATOR	
Removal.....	7-6
Installation.....	7-6
7.4 ELECTRONIC CONTROL MODULE (ECM)	
ECM.....	7-7
Removal.....	7-7
Installation.....	7-7
7.5 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)	
General.....	7-8

TABLE OF CONTENTS

Removal.....	7-8
Installation.....	7-8
HFSM Antenna.....	7-9
Removal.....	7-9
Installation.....	7-9

7.6 IGNITION COIL

Removal.....	7-10
Installation.....	7-10

7.7 SYSTEM FUSES AND RELAYS

Main Fuse.....	7-11
Removal.....	7-11
Installation.....	7-11
Main Fuse Holder.....	7-11
Removal.....	7-11
Installation.....	7-11
System Fuses and Relays.....	7-11
Removal.....	7-11
Installation.....	7-11
Fuse Blocks.....	7-12
Removal.....	7-12
Installation.....	7-12

7.8 ELECTRICAL CADDIES

Top Caddy.....	7-13
Removal.....	7-13
Installation.....	7-13
Left Side Caddy.....	7-13
Removal.....	7-13
Installation.....	7-13
Battery Tray.....	7-15
Removal.....	7-15
Installation.....	7-16

7.9 SECURITY SIREN

Removal.....	7-17
Installation.....	7-17

7.10 STARTER

General.....	7-18
Removal.....	7-18
Drive Assembly.....	7-18
Disassembly.....	7-18
Inspection.....	7-19
Assembly.....	7-19
Solenoid.....	7-20
Cover and Plunger Removal.....	7-20
Short Post Contact: Starter.....	7-20
Long Post Contact: Battery Positive.....	7-20
Plunger and Cover Installation.....	7-21
Installation.....	7-21

7.11 HEADLAMP: ALL EXCEPT ROAD GLIDE

Headlamp: Single Headlamp Models.....	7-22
Removal.....	7-22
Bulb Replacement.....	7-22
Installation.....	7-22

7.12 HEADLAMP: ROAD GLIDE

Headlamp Adjuster Assembly.....	7-24
---------------------------------	------

Removal.....	7-24
Repair.....	7-24
Installation.....	7-24
Headlamp Bulb Replacement: Dual Headlamp Models.....	7-24
Removal.....	7-24
Bulb Replacement.....	7-24
Installation.....	7-25

7.13 AUXILIARY LAMPS AND BRACKETS

Auxiliary Lamp Bulb Replacement.....	7-26
Removal.....	7-26
Installation.....	7-26
Auxiliary Lamp Housing.....	7-27
Removal.....	7-27
Installation.....	7-28
Auxiliary Lamp Bracket.....	7-28
Removal.....	7-28
Installation.....	7-29
Adjustment.....	7-29

7.14 TAIL LAMP

Tail Lamp Bulb Replacement.....	7-30
Removal.....	7-30
Installation.....	7-30
Circuit Board/Chrome Base.....	7-30
Removal.....	7-30
Installation.....	7-31
Rear Fender Lights Harness: all except FLHX, FLTRX.....	7-31
Removal.....	7-31
Installation.....	7-32
Rear Fender Lights Harness: FLHX, FLTRX.....	7-33
Removal.....	7-33
Installation.....	7-33

7.15 FENDER TIP LAMPS

Front Fender Tip Lamp.....	7-35
Removal.....	7-35
Installation.....	7-35
Front Fender Tip Lamp Jumper Harness.....	7-35
Removal.....	7-35
Installation.....	7-36
Rear Fender Tip Lamp.....	7-37
Removal.....	7-37
Installation.....	7-38

7.16 TURN SIGNAL LAMPS

Turn Signal Bulb Replacement: Bullet Style.....	7-39
Turn Signal Bulb Replacement: Flat Lens Style.....	7-39
Front Turn Signal Lamp.....	7-39
Removal: Flat Lens Style.....	7-39
Installation: Flat Lens Style.....	7-40
Removal: Bullet Style, Fork Mounted.....	7-41
Installation: Bullet Style, Fork Mounted.....	7-42
Removal: Bullet Style, Fairing Mounted.....	7-42
Installation: Bullet Style, Fairing Mounted.....	7-43
Rear Turn Signal Lamp.....	7-43
Removal: FLHR/C, FLHTC/U, FLHTK.....	7-43
Installation: FLHR/C, FLHTC/U, FLHTK.....	7-44
Removal: FLHX, FLTRX, FLTRU.....	7-44
Installation: FLHX, FLTRX, FLTRU.....	7-44
Rear Turn Signal Lamps Bracket.....	7-46
Removal: FLHR/C, FLHTC/U, FLHTK.....	7-46

TABLE OF CONTENTS

Installation: FLHR/C, FLHTC/U, FLHTK.....	7-46	7.26 STOPLIGHT SWITCHES	
Removal: FLHX, FLTRX, FLTRU.....	7-46	Front Stoplight Switch.....	7-67
Installation: FLHX, FLTRX, FLTRU.....	7-47	Removal/Installation.....	7-67
7.17 IGNITION/LIGHT KEY SWITCH AND FORK LOCK		Rear Stoplight Switch.....	7-67
Fairing Models.....	7-48	Removal.....	7-67
Removal.....	7-48	Installation.....	7-67
Installation.....	7-50	7.27 HORN	
Road King Models.....	7-51	Inspection.....	7-68
Ignition/Light Key Switch: Removal.....	7-51	Removal.....	7-68
Ignition/Light Key Switch: Installation.....	7-51	Installation.....	7-68
Fork Lock: Removal.....	7-51	7.28 CIGARETTE LIGHTER: FAIRING MODELS	
Fork Lock: Installation.....	7-51	Troubleshooting.....	7-69
7.18 FAIRING CAP SWITCHES: FORK MOUNTED FAIRING MODELS		Removal.....	7-69
Removal.....	7-53	Installation.....	7-69
Installation.....	7-54	7.29 GAUGES AND INSTRUMENTS: FAIRING MODELS	
7.19 INSTRUMENT NACELLE SWITCHES: FRAME MOUNTED FAIRING MODELS		2 Inch Diameter Gauges: Fuel Level, Ambient Air Temperature, Voltmeter, Oil Pressure.....	7-70
Removal.....	7-55	Removal.....	7-70
Left Side Switch.....	7-55	Installation.....	7-70
Right Side Switches.....	7-56	Tachometer.....	7-70
Installation.....	7-56	Removal.....	7-70
Left Side Switch.....	7-56	Installation.....	7-70
Right Side Switches.....	7-56	Speedometer.....	7-71
7.20 CRANKSHAFT POSITION SENSOR (CKP)		Removal.....	7-71
General.....	7-59	Installation.....	7-71
Removal.....	7-59	7.30 INDICATOR LAMPS: FAIRING MODELS	
Installation.....	7-59	Indicator Lamps.....	7-72
7.21 AUTOMATIC COMPRESSION RELEASE (ACR)		Removal.....	7-72
General.....	7-60	Installation.....	7-72
Removal.....	7-60	7.31 GAUGES AND INSTRUMENTS: ROAD KING MODELS	
Installation.....	7-60	Fuel Gauge.....	7-73
7.22 ALTERNATOR		Removal.....	7-73
Removal.....	7-62	Installation.....	7-73
Cleaning and Inspection.....	7-62	Speedometer.....	7-73
Installation.....	7-63	Removal.....	7-73
7.23 VEHICLE SPEED SENSOR (VSS)		Installation.....	7-74
VSS.....	7-64	7.32 INDICATOR LAMPS: ROAD KING MODELS	
Removal.....	7-64	Indicator Lamps.....	7-75
Installation.....	7-64	Removal.....	7-75
7.24 NEUTRAL SWITCH		Installation.....	7-75
Removal.....	7-65	7.33 ADVANCED AUDIO SYSTEM	
Installation.....	7-65	Radio.....	7-76
7.25 OIL PRESSURE SWITCH AND SENDER		Removal.....	7-76
Removal.....	7-66	Installation.....	7-76
Installation.....	7-66	Front Fairing Speakers.....	7-77
		Removal.....	7-77
		Installation.....	7-77
		Front Headset Receptacle.....	7-77

TABLE OF CONTENTS

Removal.....	7-77
Installation.....	7-77
Rear Headset Receptacle.....	7-78
Rear Passenger Switches.....	7-78
Removal.....	7-78
Installation.....	7-78
Rear Speakers.....	7-80
Removal.....	7-80
Installation.....	7-80
CB Module.....	7-80
Removal.....	7-80
Installation.....	7-80

7.34 WIRE TROUGH

Removal.....	7-81
Installation.....	7-82

7.35 MAIN WIRING HARNESS

Removal: All Models (Part 1).....	7-83
Removal: Road King Models (Part 2).....	7-83
Removal: Fork Mounted Fairing Models (Part 2).....	7-84
Removal: Frame Mounted Fairing Models (Part 2).....	7-85
Removal: All Models (Part 3).....	7-85
Installation: All Models (Part 1).....	7-87
Installation: Road King Models (Part 2).....	7-89
Installation: Fork Mounted Fairing Models (Part 2).....	7-90
Installation: Frame Mounted Fairing Models (Part 2).....	7-90
Installation: All Models (Part 3).....	7-90

7.36 INTERCONNECT HARNESS

Fork Mounted Fairing Models.....	7-91
Removal.....	7-91
Installation.....	7-92
Frame Mounted Fairing Models.....	7-94
Removal.....	7-94
Installation.....	7-96

7.37 RADIO ANTENNA CABLE

Models Equipped with Tour-Pak.....	7-98
Removal.....	7-98
Installation.....	7-98
Models without Tour-Pak.....	7-99
Removal.....	7-99
Installation.....	7-99

7.38 REAR AUDIO HARNESS: ULTRA MODELS

Removal.....	7-101
Installation.....	7-101

7.39 CB ANTENNA CABLE: ULTRA MODELS

Removal.....	7-103
Installation.....	7-103

7.40 HANDLEBAR SWITCH ASSEMBLIES

Removal.....	7-105
Right Handlebar Controls.....	7-105
Left Handlebar Controls.....	7-105
Disassembly.....	7-105
Right Side Handlebar Switches.....	7-105
Left Side Handlebar Switches.....	7-106

Specific Repair Procedures: Upper Switch Housings.....	7-106
Right Side Handlebar (All Models).....	7-106
Left Side Handlebar (All Models).....	7-107
Specific Repair Procedures: Right Side Lower Switch Housings.....	7-108
Preliminary Instructions.....	7-108
Turn-Right Signal Switch (All Models).....	7-108
Front Stoplight Switch (All Models).....	7-108
Mode Select Switch (Classic and Ultra Models).....	7-108
Cruise Set/Resume Switch (Road King Classic and Ultra Models).....	7-109
Final Instructions.....	7-110
Specific Repair Procedures: Left Side Lower Switch Housings.....	7-111
Preliminary Instructions.....	7-111
Turn-Left Signal Switch (All Models).....	7-111
Clutch Interlock Switch.....	7-111
Audio Control Switch (Classic and Ultra Models).....	7-113
CB Push-To-Transmit Switch (Ultra Models).....	7-113
Cruise On/Off Switch (Road King Classic Models).....	7-113
Final Instructions.....	7-114
General Repair Procedures.....	7-114
Assembly: Right Side Handlebar Switches.....	7-115
Assembly: Left Side Handlebar Switches.....	7-116
Installation.....	7-116
Right Handlebar Controls.....	7-116
Left Handlebar Controls.....	7-117

7.41 TSSM/HFSM MAINTENANCE

General.....	7-121
Fob Battery.....	7-121
Battery Replacement Schedule.....	7-121
Battery Replacement.....	7-121
Smart Siren (If Installed).....	7-121
Battery Replacement Schedule.....	7-121
Battery Replacement.....	7-121

7.42 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....	7-123
Initial Pin Entry.....	7-123
Changing the Pin.....	7-123
Modifying an Existing Pin.....	7-123

7.43 H-DSSS ACTUATION

General.....	7-125
Sidecar Configuration.....	7-125
Actuation.....	7-125
Fob Assignment.....	7-125
Power Disruption and Configuring.....	7-125

7.44 TSM/HFSM: PASSWORD LEARN

General.....	7-126
Password Learn.....	7-126

APPENDIX A CONNECTOR REPAIR

A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS

Autofuse Unsealed Connector Repair.....	A-1
---	-----

TABLE OF CONTENTS

General.....	A-1	Crimping Wire Core.....	A-11
Disassembly.....	A-1	Crimping Insulation/Seal.....	A-11
Assembly.....	A-1	Inspecting Crimps.....	A-12
A.2 DELPHI 100W MICRO-PACK SEALED CONNECTOR		A.9 DELPHI MICRO 64 SEALED CONNECTORS	
Delphi 100W Micro-Pack Sealed Connector Repair.....	A-2	Delphi Micro 64 Sealed Connector Repair.....	A-13
General.....	A-2	General.....	A-13
Separating Socket Housing From ECM.....	A-2	Separating Pin and Socket Housings.....	A-13
Mating Socket Housing To ECM.....	A-2	Mating Pin and Socket Housings.....	A-13
Removing Socket Terminal.....	A-2	Removing Terminal.....	A-13
Installing Socket Terminal.....	A-2	Installing Terminal.....	A-14
Crimping Terminals.....	A-2	Preparing Wire Leads for Crimping.....	A-14
A.3 DELPHI 150 METRI-PACK SEALED CONNECTORS		Crimping Terminals.....	A-14
Delphi 150 Metri-Pack Sealed Connector Repair.....	A-4	Inspecting Crimps.....	A-14
General.....	A-4	A.10 DELPHI GT 150 SEALED CONNECTORS	
Separating Pin and Socket Housings.....	A-4	Delphi GT 150 Sealed Connector Repair.....	A-16
Mating Pin and Socket Housings.....	A-4	General.....	A-16
Removing Socket Terminal.....	A-4	Separating Pin and Socket Housings.....	A-16
Inserting Socket Terminal.....	A-4	Mating Pin and Socket Housings.....	A-16
A.4 DELPHI 280 METRI-PACK UNSEALED CONNECTORS		Removing Socket Terminals.....	A-16
Fuse Block Repair.....	A-6	Installing Socket Terminals.....	A-16
Removing Socket Terminals.....	A-6	A.11 DELPHI GT 280 SEALED 73-TERMINAL ECM CONNECTOR	
Installing Socket Terminals.....	A-6	Delphi GT 280 Sealed 73-Terminal ECM Connector.....	A-18
Crimping Terminals.....	A-6	Separating Socket Housing From ECM.....	A-18
A.5 DELPHI 480 METRI-PACK UNSEALED CONNECTORS		Mating Socket Housing To ECM.....	A-18
Delphi 480 Metri-Pack Unsealed Connector Repair.....	A-7	Socket Terminal.....	A-18
General.....	A-7	ECM Ground Terminal.....	A-18
Separating Pin and Socket Housings.....	A-7	A.12 DEUTSCH DT SEALED CONNECTORS	
Mating Pin and Socket Housings.....	A-7	Deutsch DT Sealed Connector Repair.....	A-20
Removing Socket Terminals.....	A-7	General.....	A-20
Installing Socket Terminals.....	A-7	Separating Pin and Socket Housings.....	A-20
A.6 DELPHI 630 METRI-PACK UNSEALED CONNECTORS		Mating Pin and Socket Housings.....	A-20
Delphi 630 Metri-Pack Unsealed Connector Repair.....	A-8	Removing Socket Terminals.....	A-20
Separating Pin and Socket Housings.....	A-8	Installing Socket Terminals.....	A-20
Mating Pin and Socket Housings.....	A-8	Removing Pin Terminals.....	A-22
Removing Socket Terminal.....	A-8	Installing Pin Terminals.....	A-22
Installing Socket Terminal.....	A-8	Crimping Terminals.....	A-23
A.7 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING		A.13 DEUTSCH DT SEALED TERMINAL REPAIR	
Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....	A-9	Deutsch DT Sealed Terminal Crimps.....	A-24
Removing Socket Terminals.....	A-9	Preparing Wire Leads for Crimping.....	A-24
Installing Socket Terminals.....	A-9	Crimping Terminal to Lead.....	A-24
A.8 DELPHI METRI-PACK TERMINAL REPAIR		Inspecting Crimps.....	A-24
Metri-Pack Terminal Crimps.....	A-11	A.14 DEUTSCH DTM SEALED MINI TERMINAL REPAIR	
Matching Terminal To Crimper.....	A-11	Deutsch DTM Sealed Mini Terminal Crimps.....	A-25
Preparing Wire Lead.....	A-11	Preparing Wire Leads for Crimping.....	A-25
		Crimping a Mini Terminal to Wire Lead.....	A-25
		Inspecting Crimps.....	A-25

TABLE OF CONTENTS

A.15 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR

Deutsch DTM Sealed Solid Barrel Terminal Crimps.....	A-26
Preparing Wire Leads For Crimping.....	A-26
Adjusting Crimper Tool.....	A-26
Crimping a Barrel Contact To Wire Lead.....	A-26
Inspecting Crimps.....	A-26

A.16 JAE MX19 SEALED CONNECTORS

JAE MX19 Sealed Connectors.....	A-28
Connector Housings.....	A-28
Removing Terminals.....	A-28
Installing Terminals.....	A-28

A.17 MOLEX CMC SEALED CONNECTORS

Molex CMC Sealed Connectors.....	A-29
Separating the Connector.....	A-29
Removing Terminals.....	A-29
Installing Terminals.....	A-29

A.18 MOLEX MX 150 SEALED CONNECTORS

Molex MX 150 Sealed Connector Repair.....	A-31
Separating Pin and Socket Housings.....	A-31
Mating Pin and Socket Housings.....	A-31
Removing Terminals.....	A-31
Installing Terminals.....	A-31
Crimp Terminal to Lead.....	A-32
Prepare Lead.....	A-32
Prepare Tool.....	A-32
Position Terminal in the Punch/Die.....	A-33
Insert Stripped Lead.....	A-33
Crimp Terminal to Lead.....	A-34
Inspect Crimp.....	A-34

A.19 TYCO 070 MULTILOCK UNSEALED CONNECTOR

Tyco 070 Multilock Unsealed Connector Repair.....	A-35
General.....	A-35
Separating Pin and Socket Housings.....	A-35
Mating Pin and Socket Housings.....	A-35
Removing Terminals from Housing.....	A-35
Inserting Terminals into Housing.....	A-36
Preparing Wire Leads for Crimping.....	A-36
Crimping Terminals to Leads.....	A-37
Inspecting Crimped Terminals.....	A-38

A.20 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-39
General.....	A-39
Preparing Wire Leads.....	A-39
Splicing Wire Leads.....	A-39
Inspecting Seals.....	A-39

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1

Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-7
Wire Color Codes.....	B-7
Wiring Diagram Symbols.....	B-7
2011 Touring Wiring Diagrams.....	B-9

APPENDIX C ABS

C.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	C-1
---	-----

C.2 ABS MODULE

Hydraulic Control Unit (HCU).....	C-2
Removal.....	C-2
Installation.....	C-3
Electronic Control Unit (ECU).....	C-3
Removal.....	C-3
Installation.....	C-4

C.3 WHEEL SPEED SENSORS

Front Wheel Speed Sensor.....	C-5
Removal.....	C-5
Installation.....	C-5
Rear Wheel Speed Sensor.....	C-6
Removal.....	C-6
Installation.....	C-6

C.4 ABS BRAKE LINES

Front Master Cylinder to ABS Module.....	C-7
Removal.....	C-7
Installation.....	C-8
ABS Module to Front Brake Calipers.....	C-8
Removal.....	C-8
Installation.....	C-9
Rear Master Cylinder to ABS Module.....	C-10
Removal.....	C-10
Installation.....	C-11
ABS Module to Rear Brake Caliper.....	C-12
Removal.....	C-12
Installation.....	C-12

APPENDIX D CONVERSIONS

D.1 METRIC CONVERSION

Conversion Table.....	D-1
-----------------------	-----

D.2 FLUID CONVERSIONS

United States System.....	D-2
Metric System.....	D-2
British Imperial System.....	D-2

D.3 TORQUE CONVERSIONS

United States System.....	D-3
Metric System.....	D-3

TABLE OF CONTENTS

APPENDIX E GLOSSARY

E.1 GLOSSARY

Acronyms and Abbreviations.....E-1

REFERENCE MATERIAL

TOOLS.....	I
TORQUE VALUES.....	VII
INDEX.....	XXIII

NOTES

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com